

CROSSRC






EMO XX






4X4 OFF-ROAD RC MODEL


1:6

WWW.CROSS-RC.COM





组装说明书
ASSEMBLY MANUAL

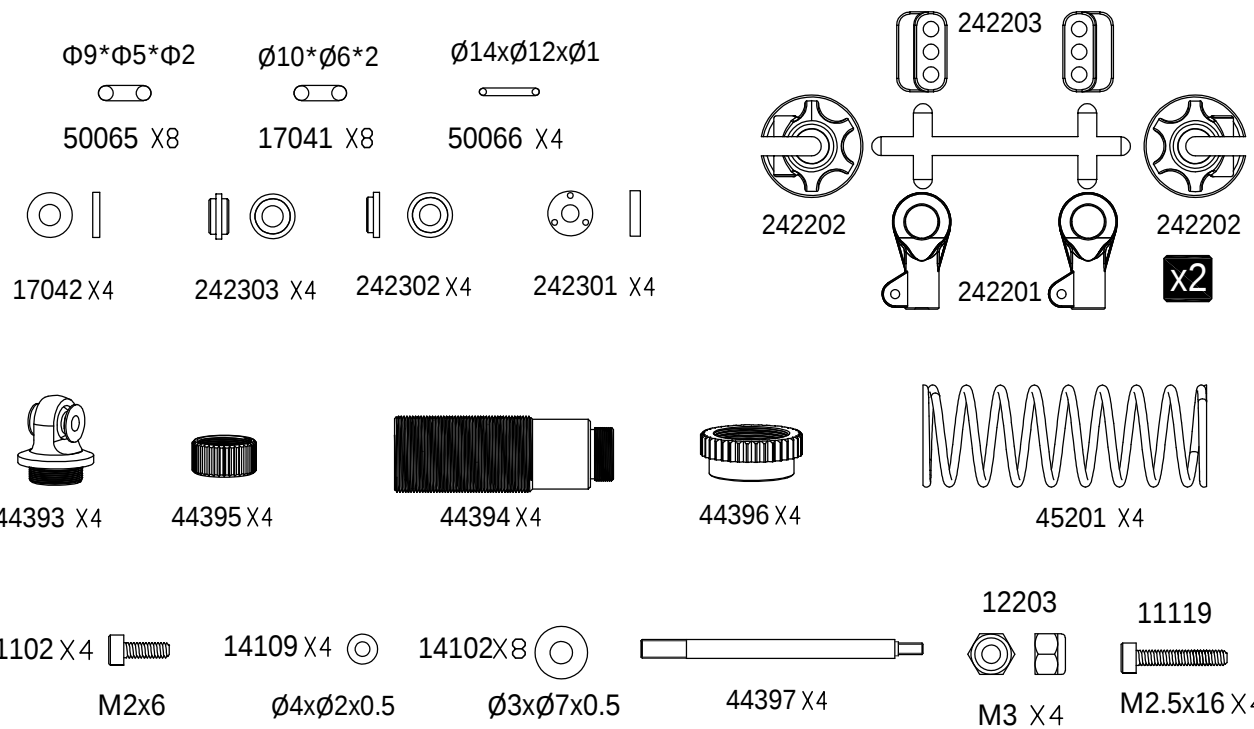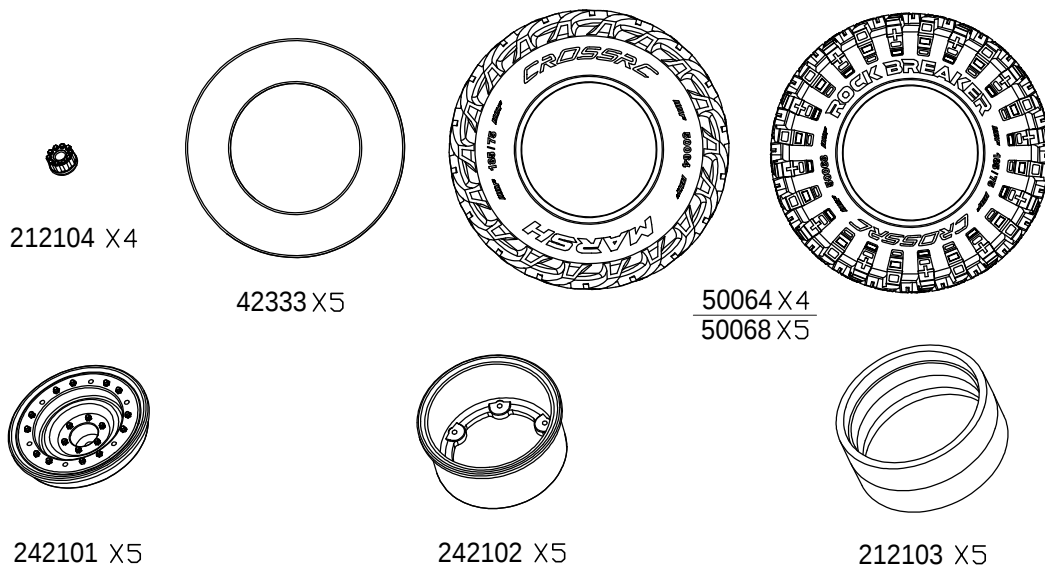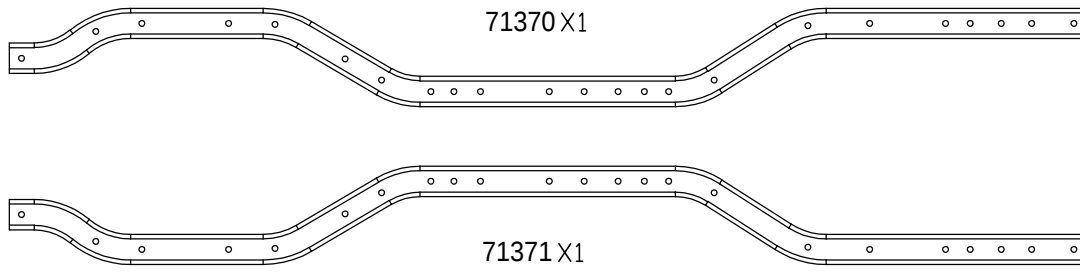

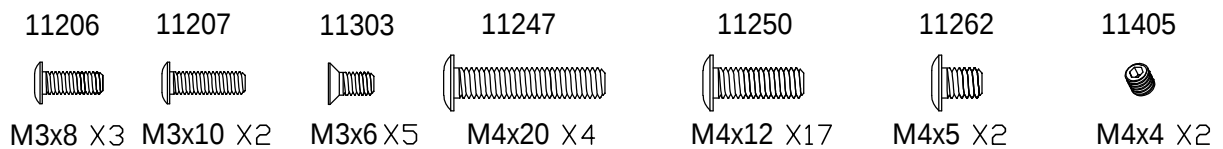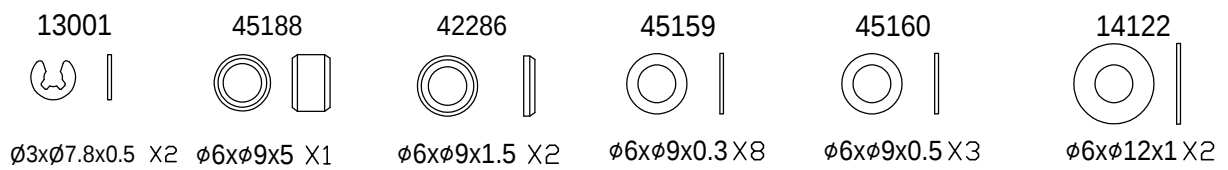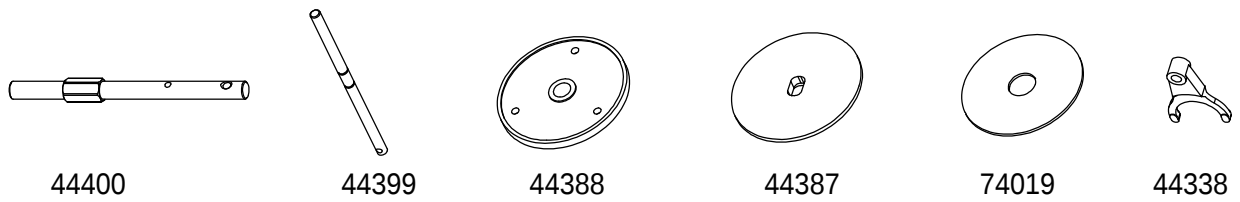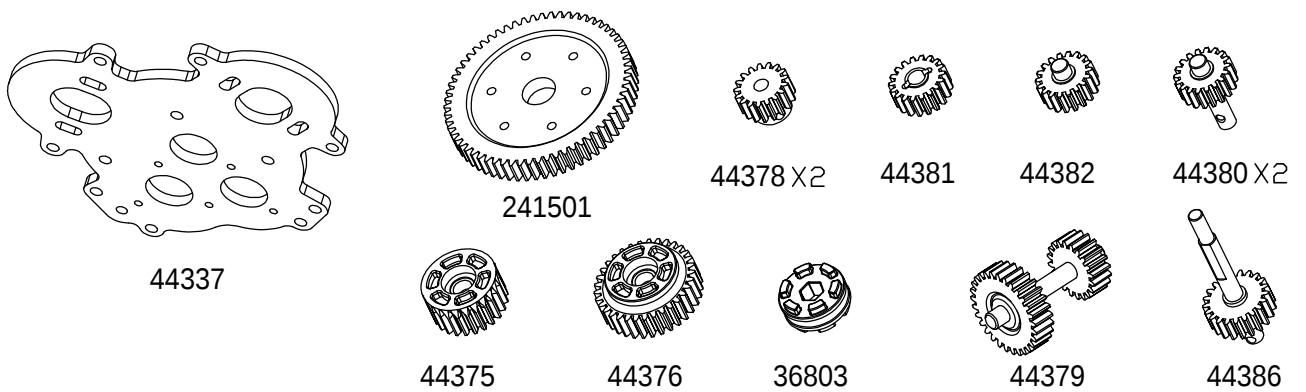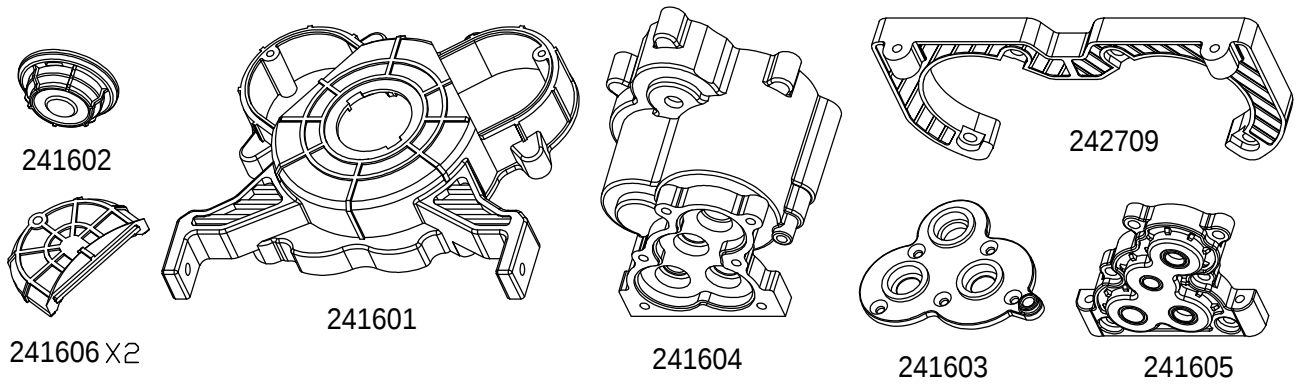


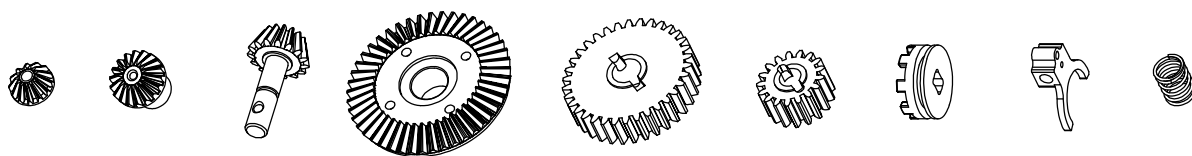


37003 X8 37002 X4 44384 X2 44383 X2 37001 X4 44377 X4 44385 X2 44339 X2 42006 X2

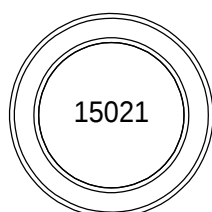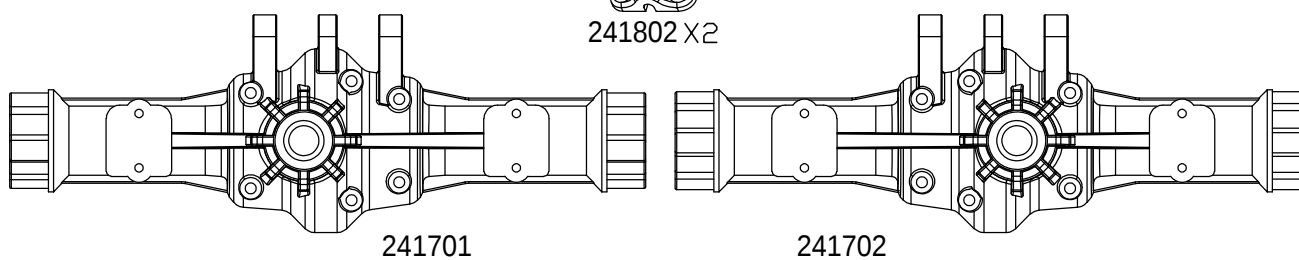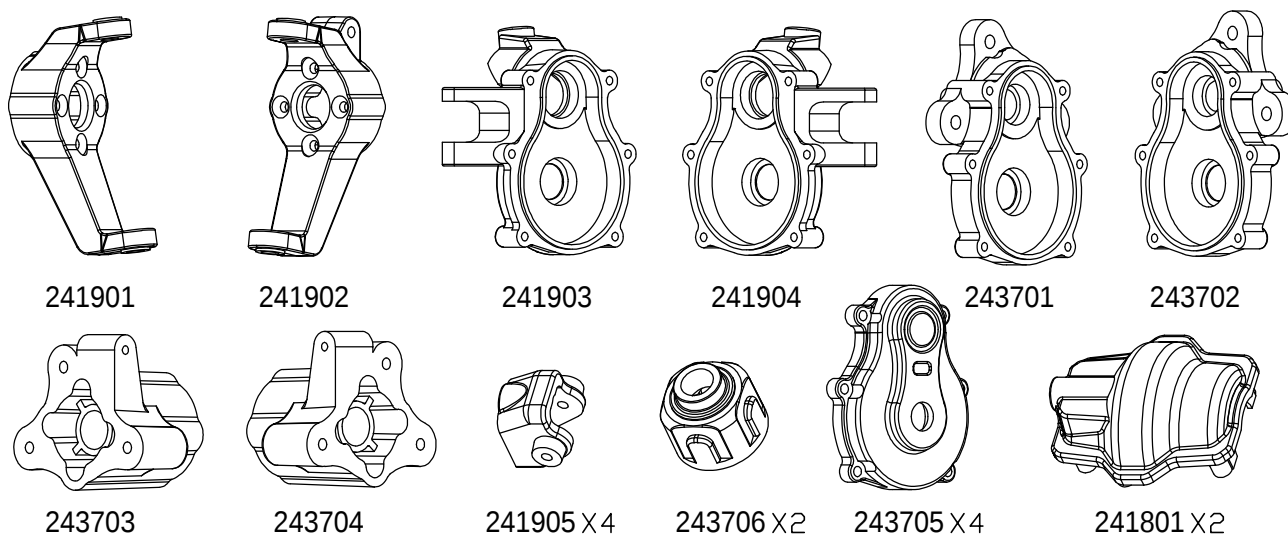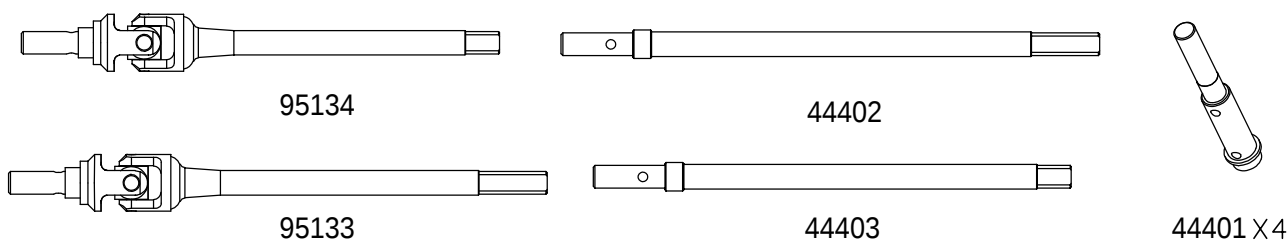


$\phi 20 \times \phi 27 \times 4 \times 2$

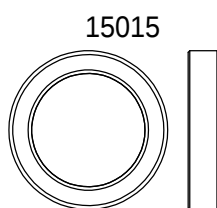

$\phi 15 \times \phi 21 \times 4 \times 2$

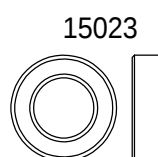

$\phi 8 \times \phi 14 \times 4 \times 10$

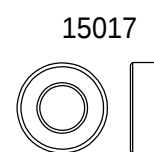

$\phi 6 \times \phi 12 \times 4 \times 10$

11401



M3x4 X2

11405



M4x4 X6

11205




M3x6 X4

11159



M2.5x8 X8

11263



M4x20 X6

11109



M3x14 X40

11111




M3x18 X8

11115



M3x28 X12

44415




M4x15 X4

11125



17x12 X4




Ø10xØ14x0.1X4

42004




Ø2.5x10 X4

42277




Ø2.5x15 X8

42007



Ø2x16 X2

44418



Ø3x24 X4

13006



Ø5xØ9.8x0.5X2

45217







Ø6xØ9x0.8X2


45214



Ø15.3xØ18x0.4X2



45191 X1




45215 X1


11426



M5x30 X20



45192 X1



45193 X6



45190 X1

242005

242003


242001

242002

242004



44398 X24

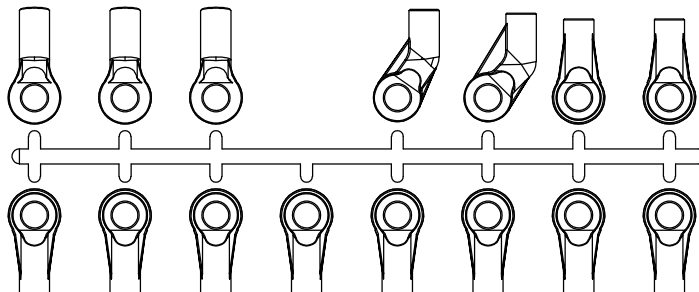



242004

x2




95135 X2

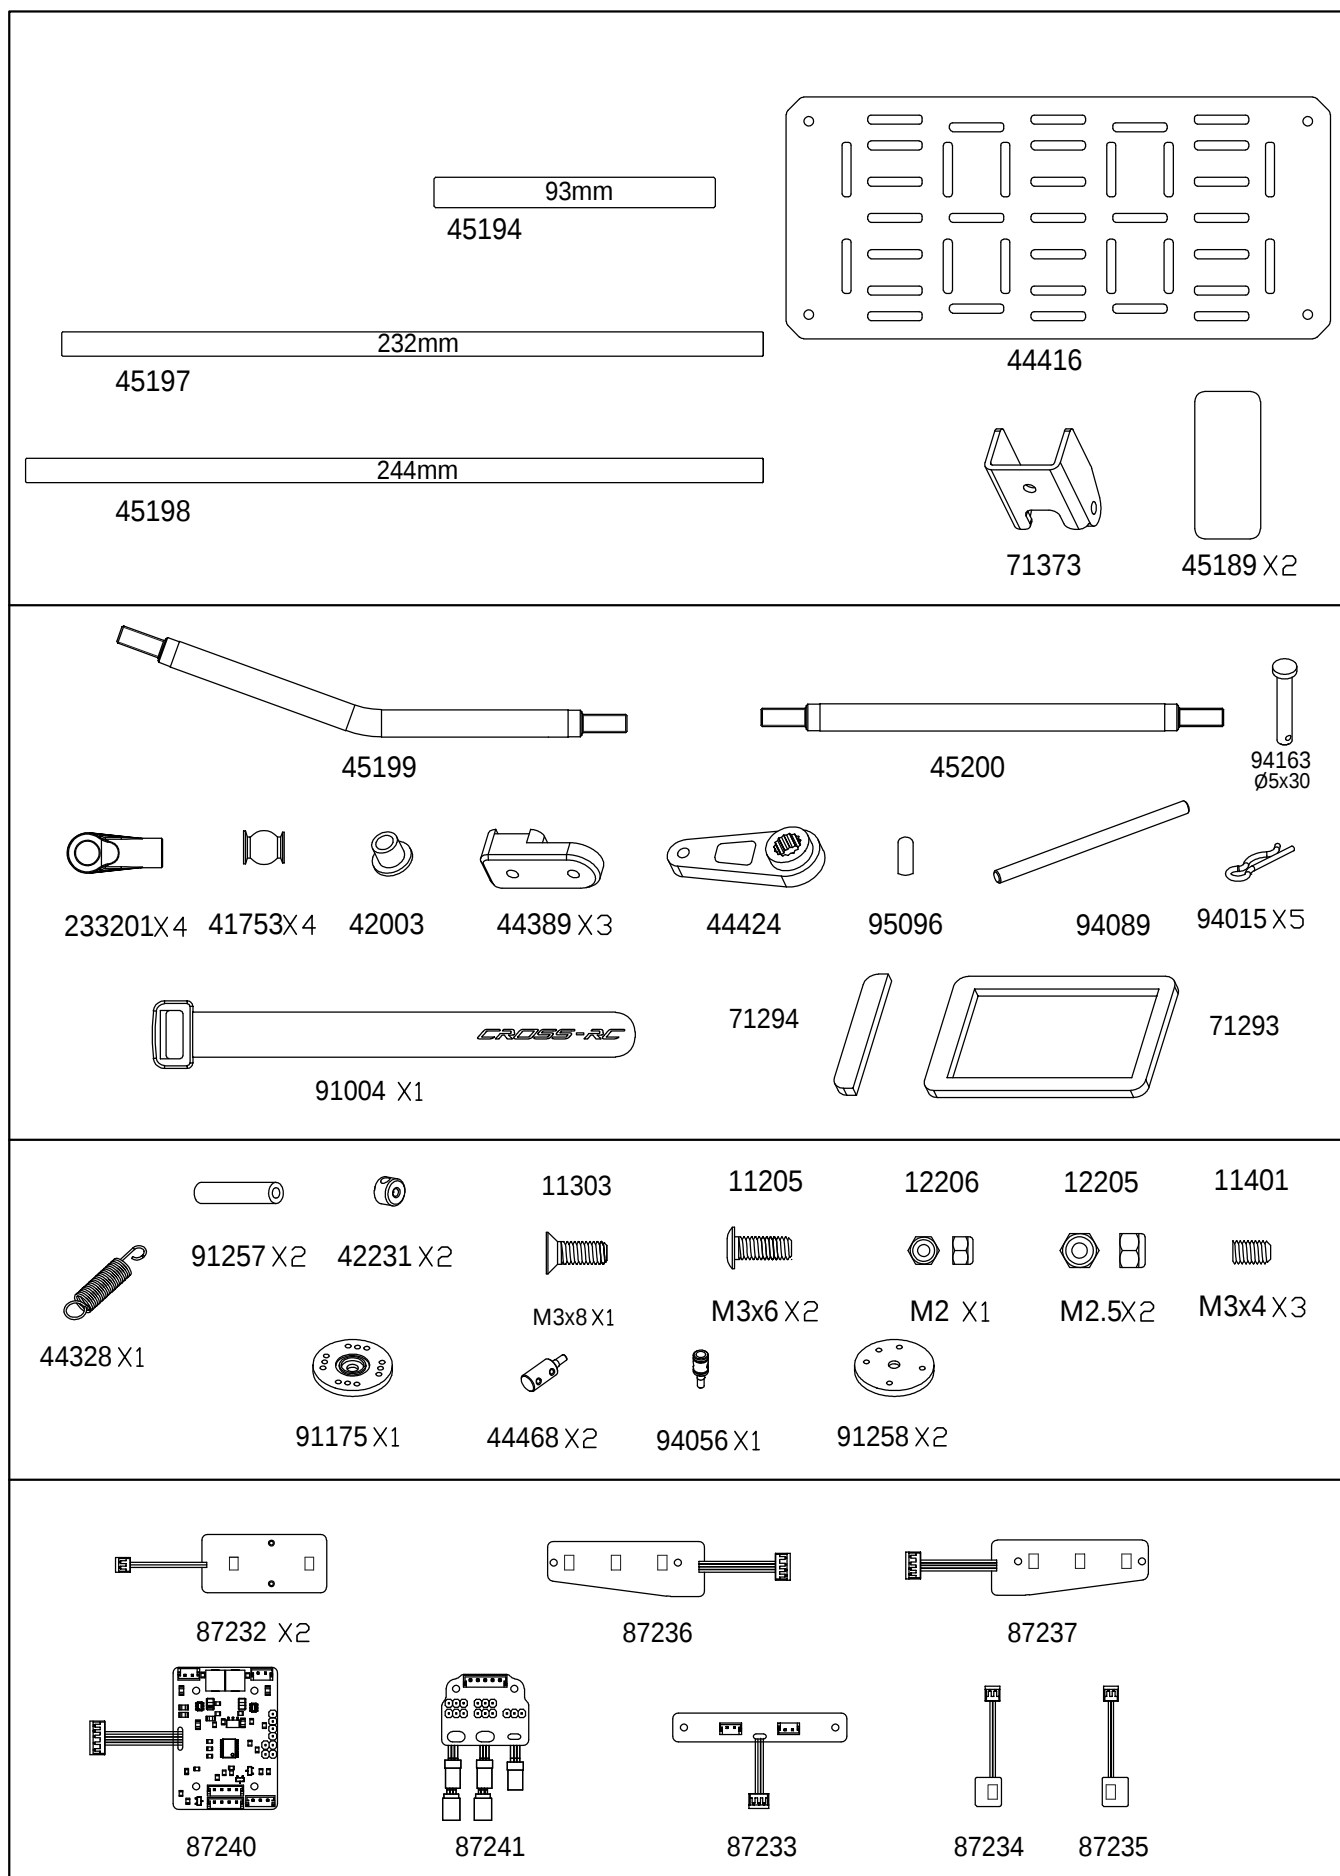


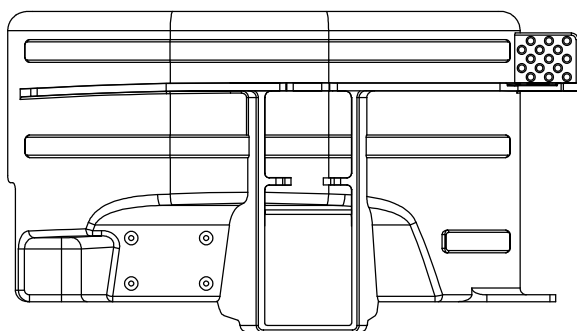


242402

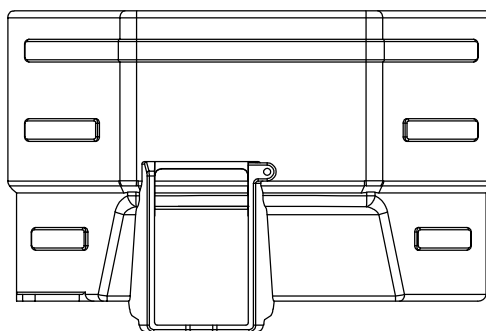


243802

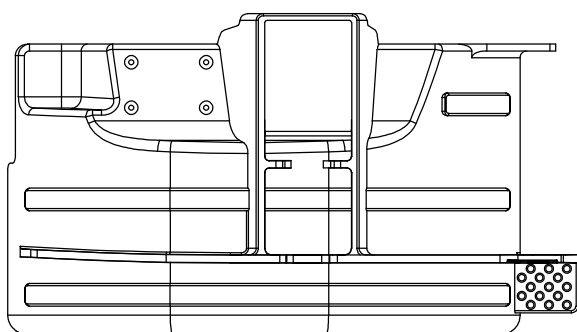


242401

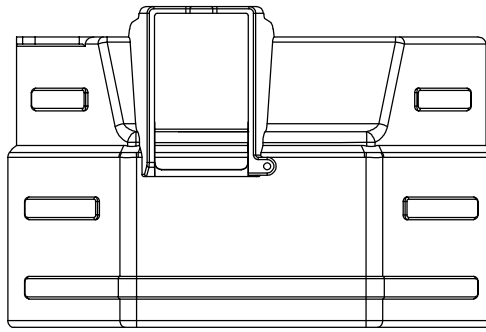


243801

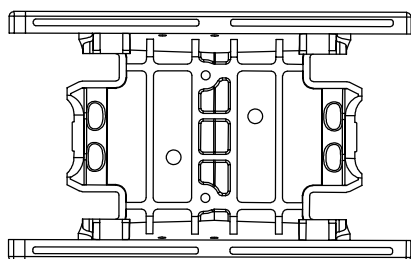


242502

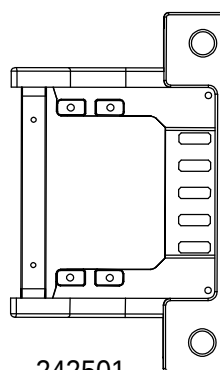

242501

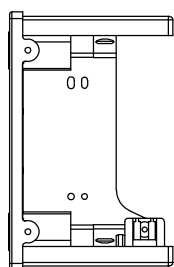


243901

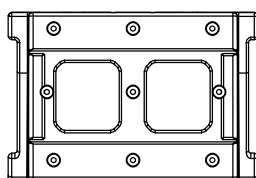


243903







243902

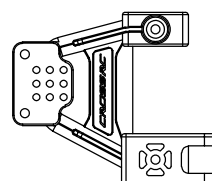


243904

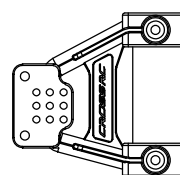


243905

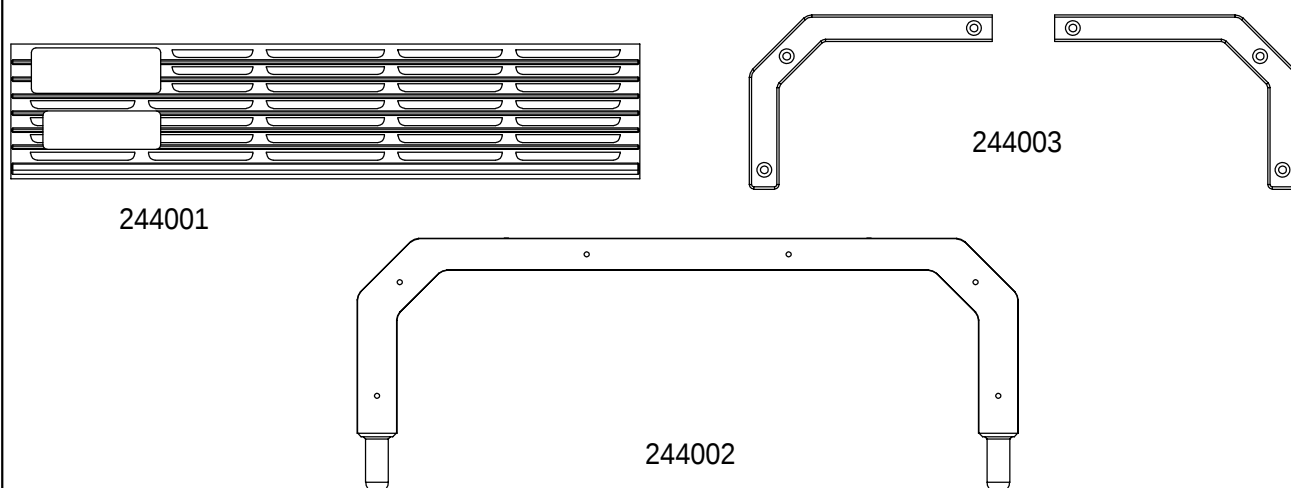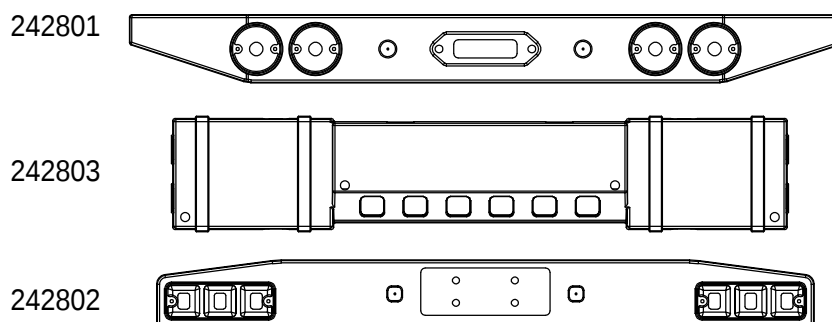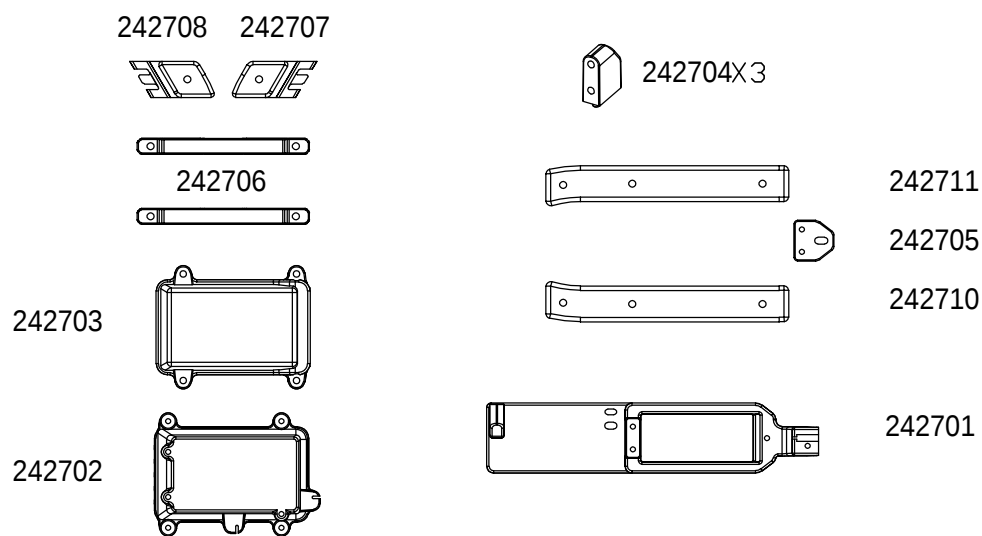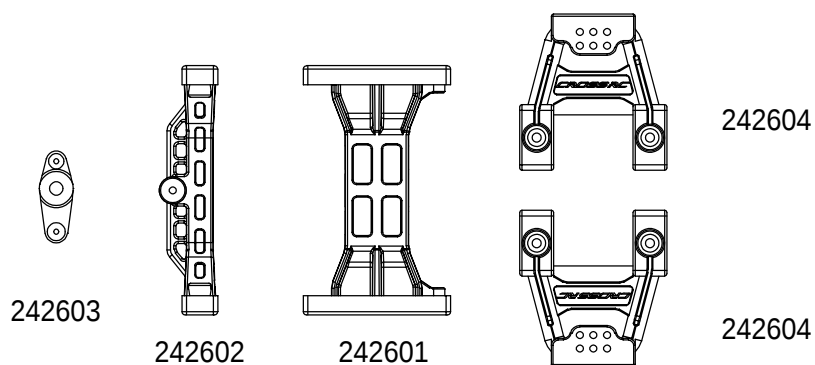


244106

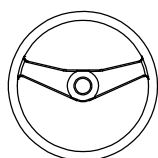


244105



244101

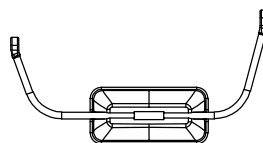


244102

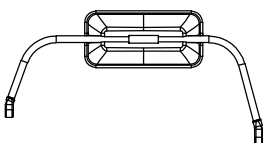

244104



244103

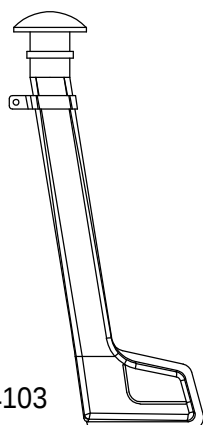

244105



242913

242905

242911

242910

242901

242902

242907



242906



242914

242904

242903



242910

242912

242909



242908



243005




243006



243004




243003

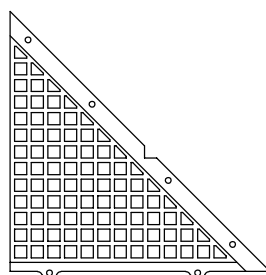

243009



243011


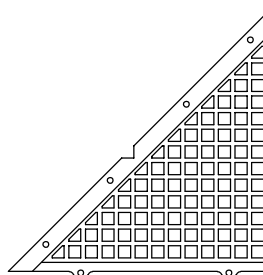


243010


 $\varnothing 6 \times \varnothing 2.4 \times 1.8$


17002 X1


243007

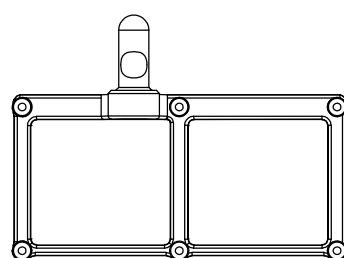


243001

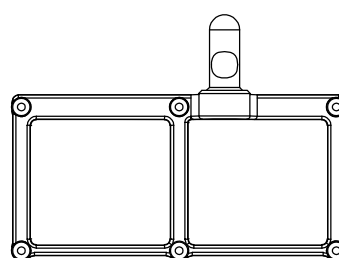


243002




243008

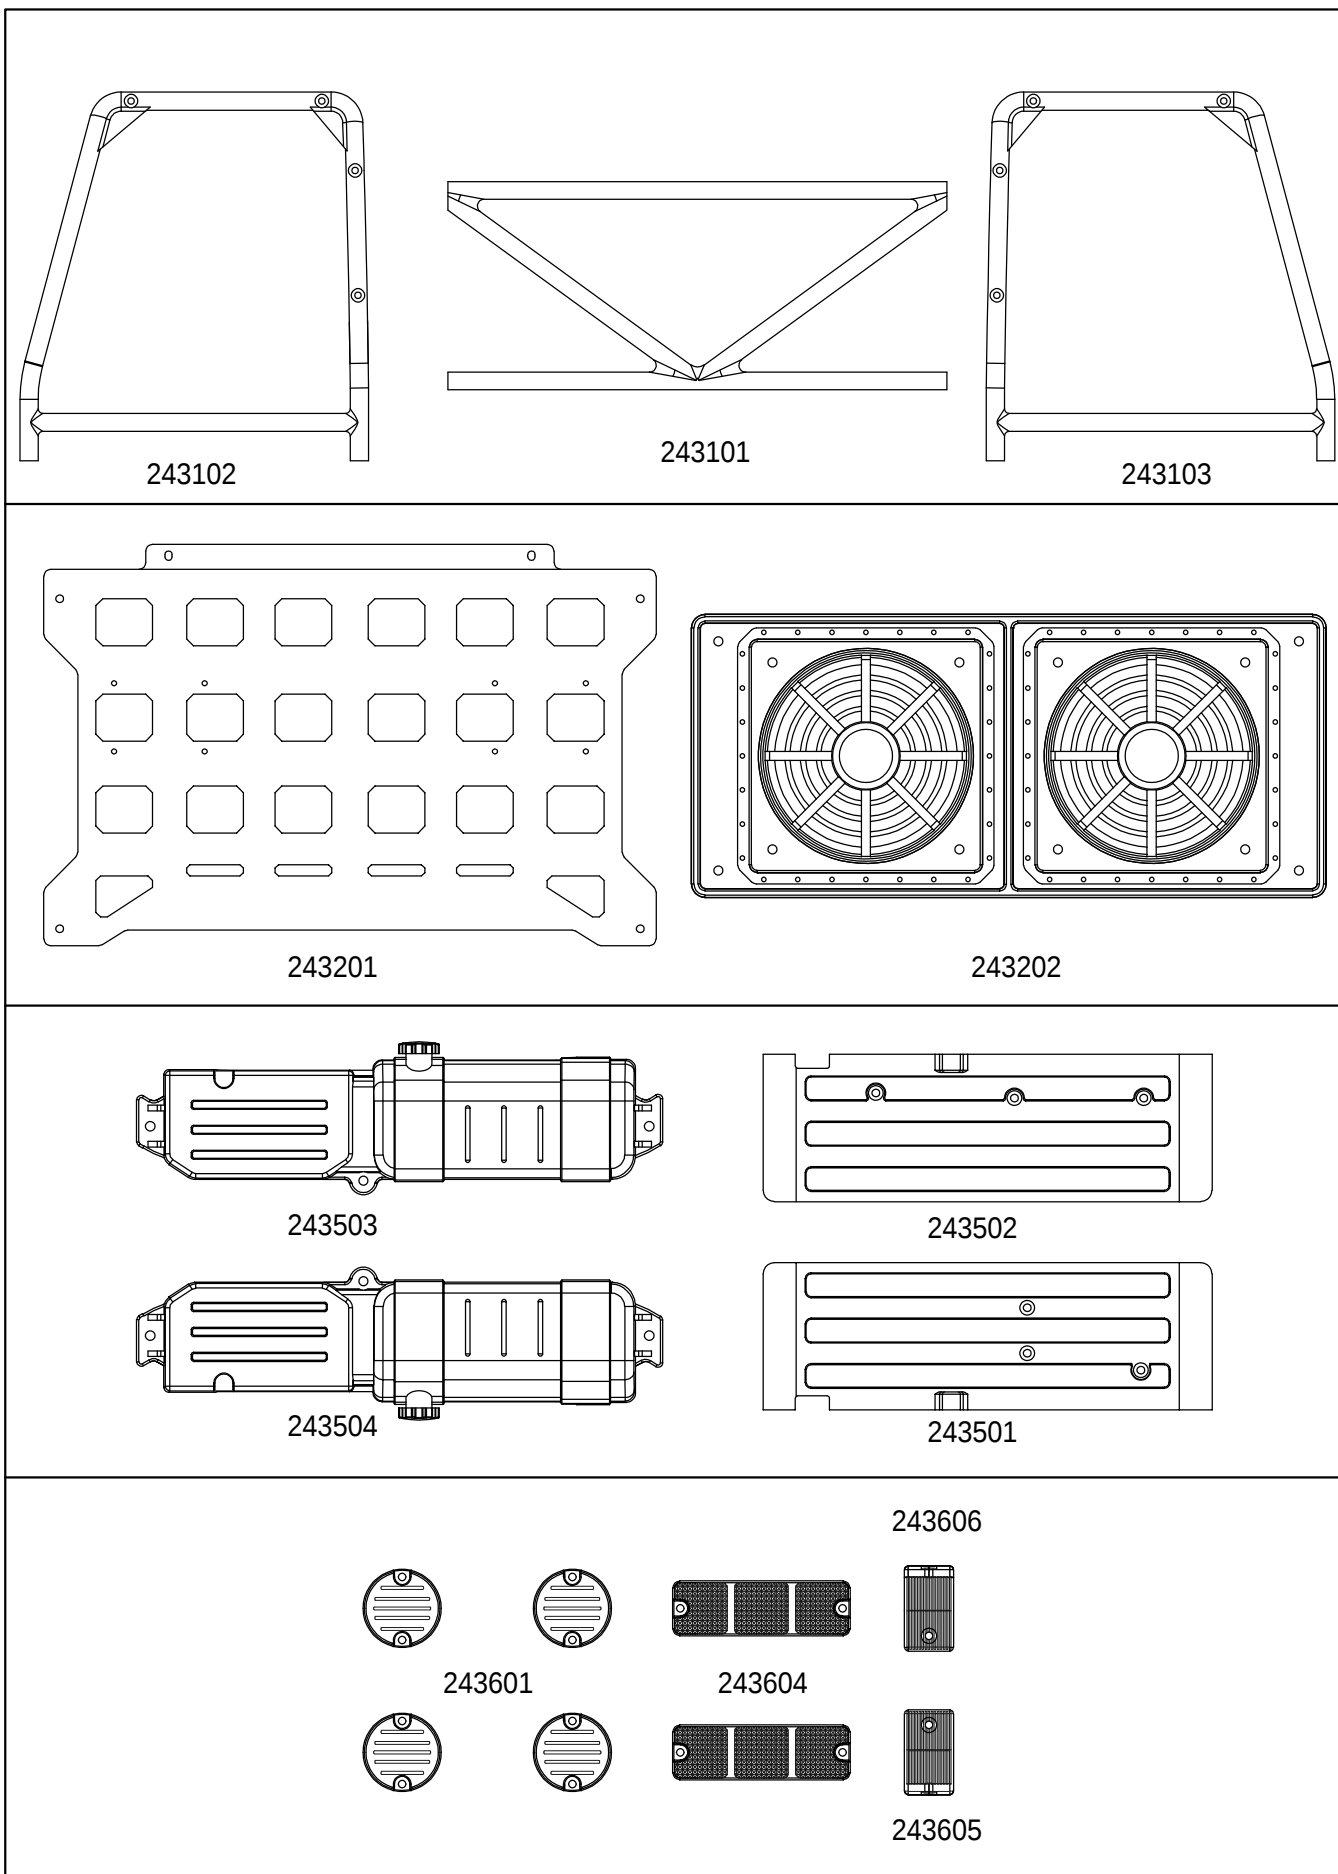

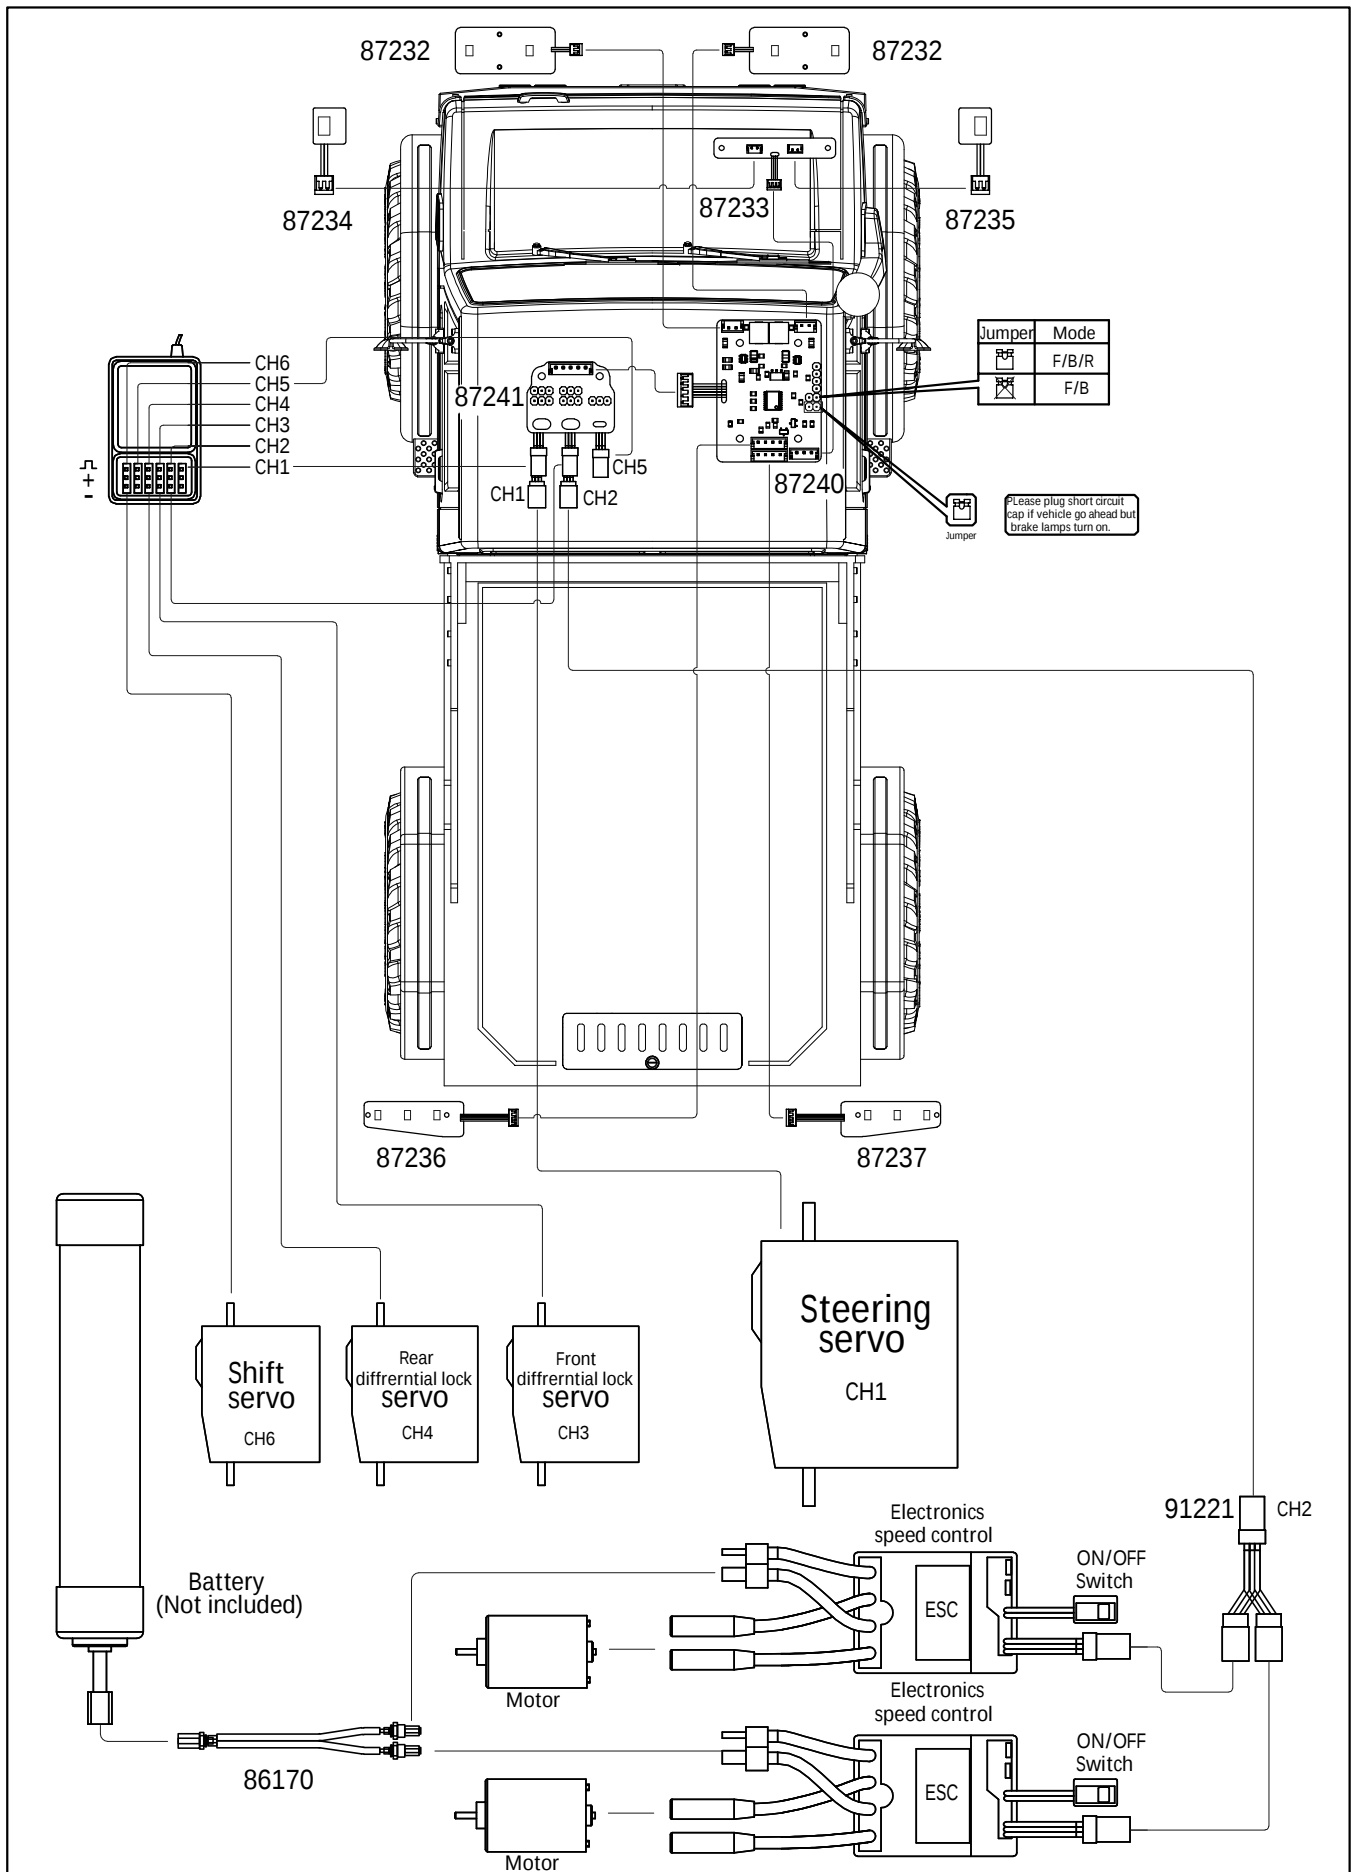


Front Assembly

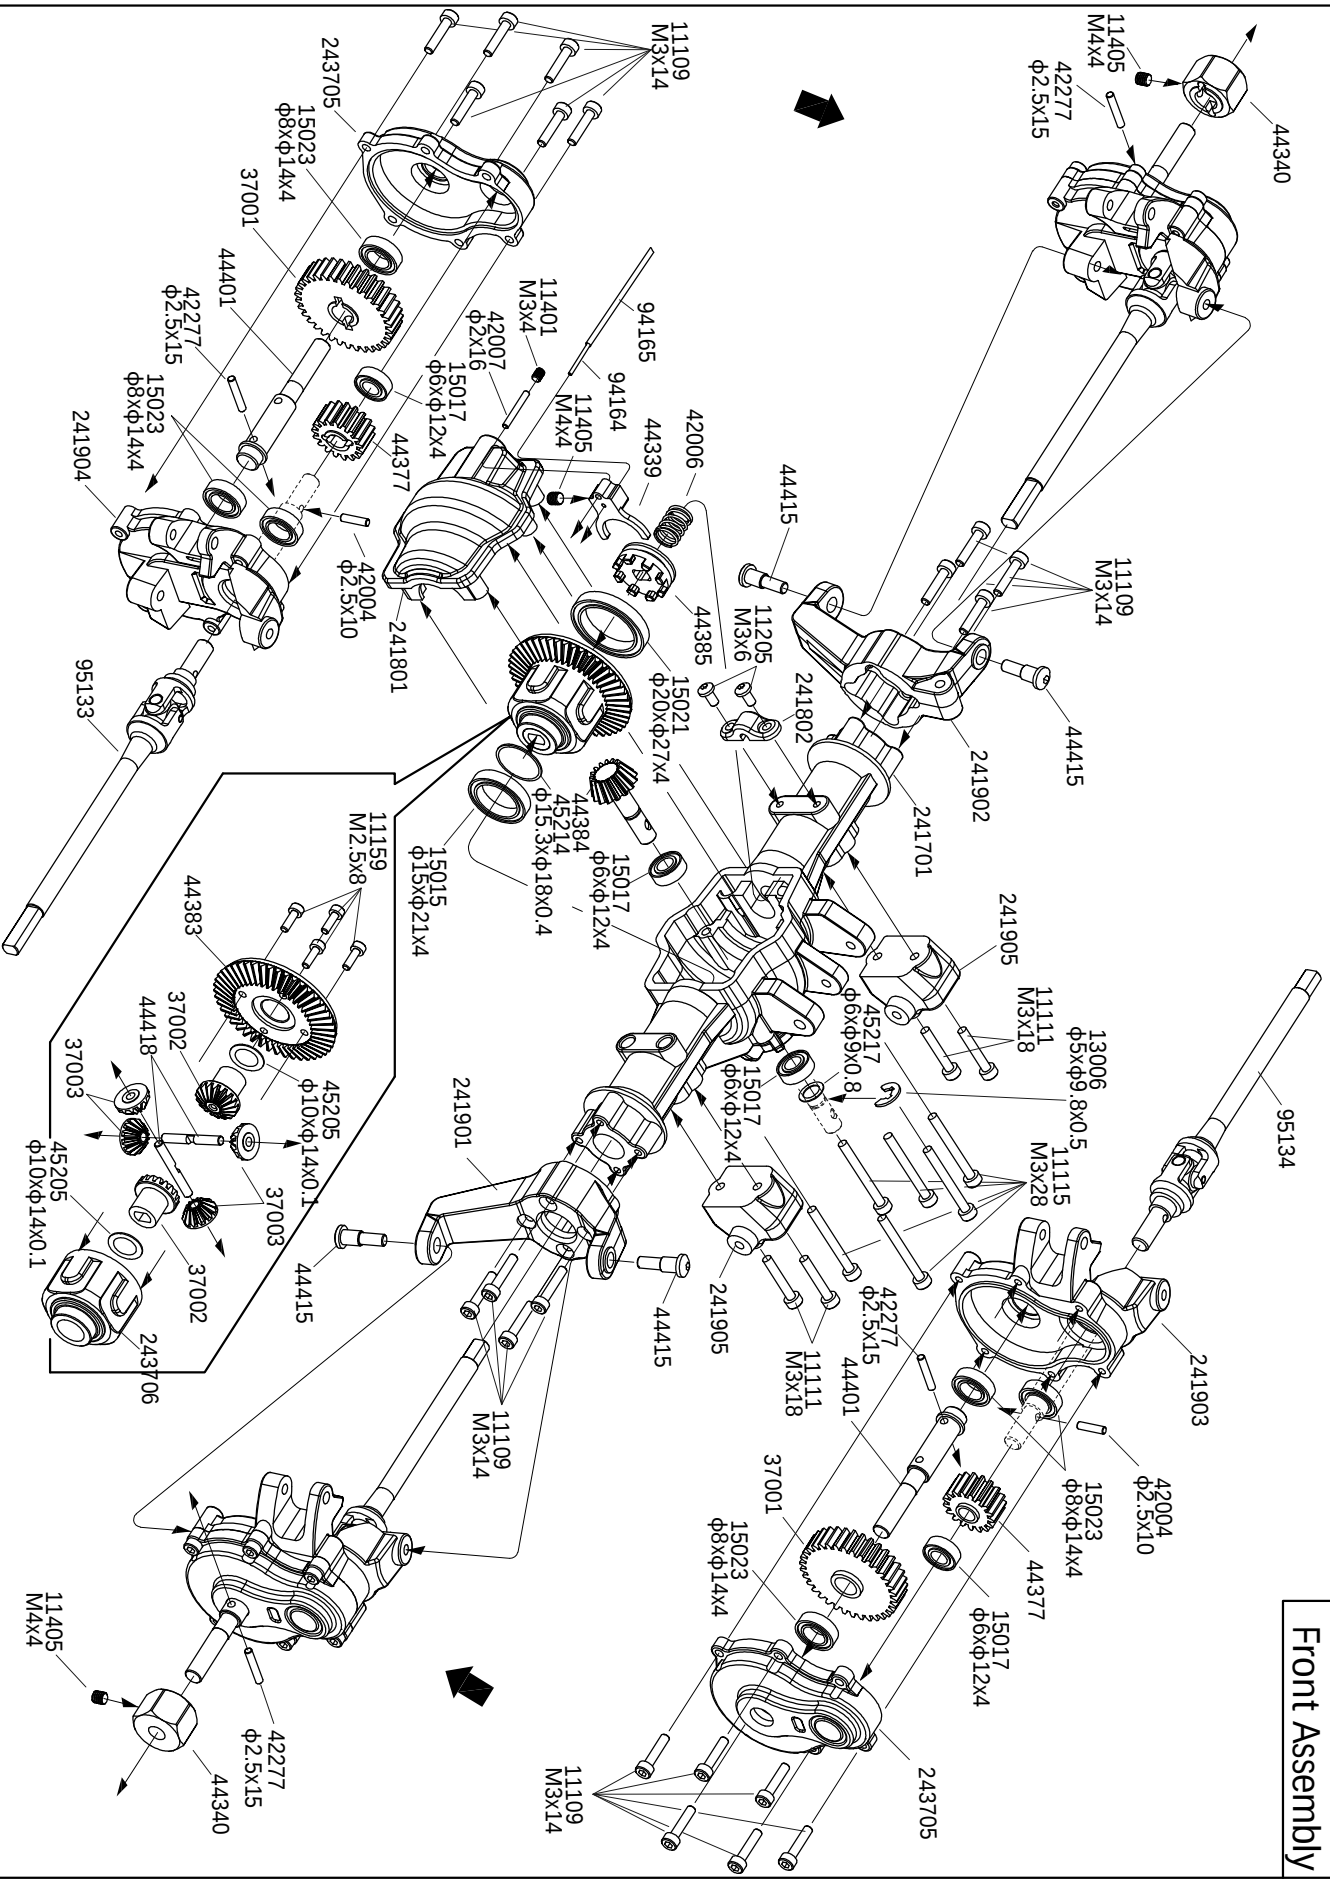





Transmission Assembly

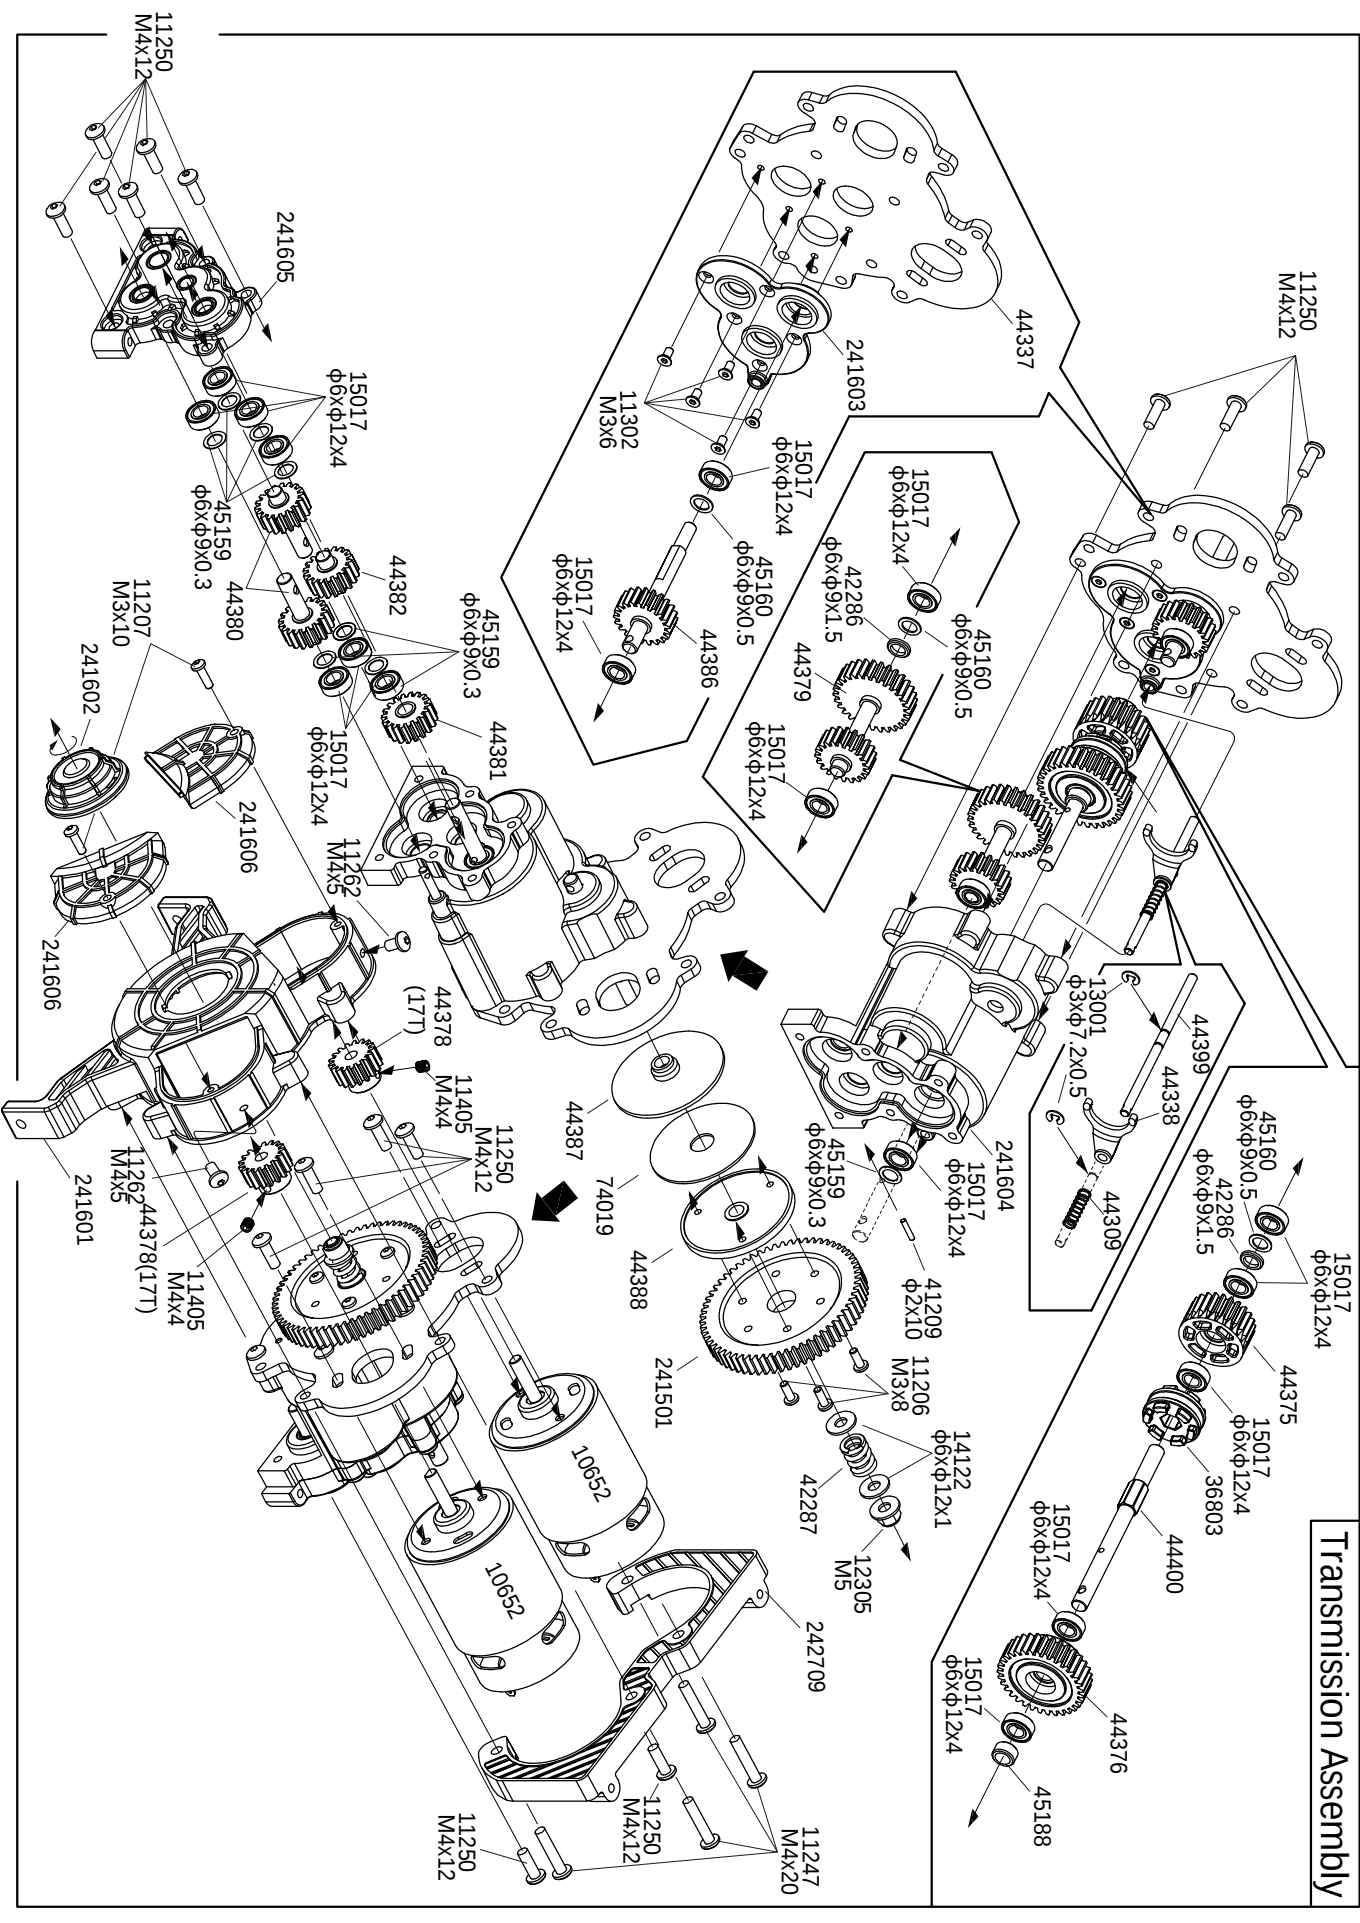


Shock Assembly

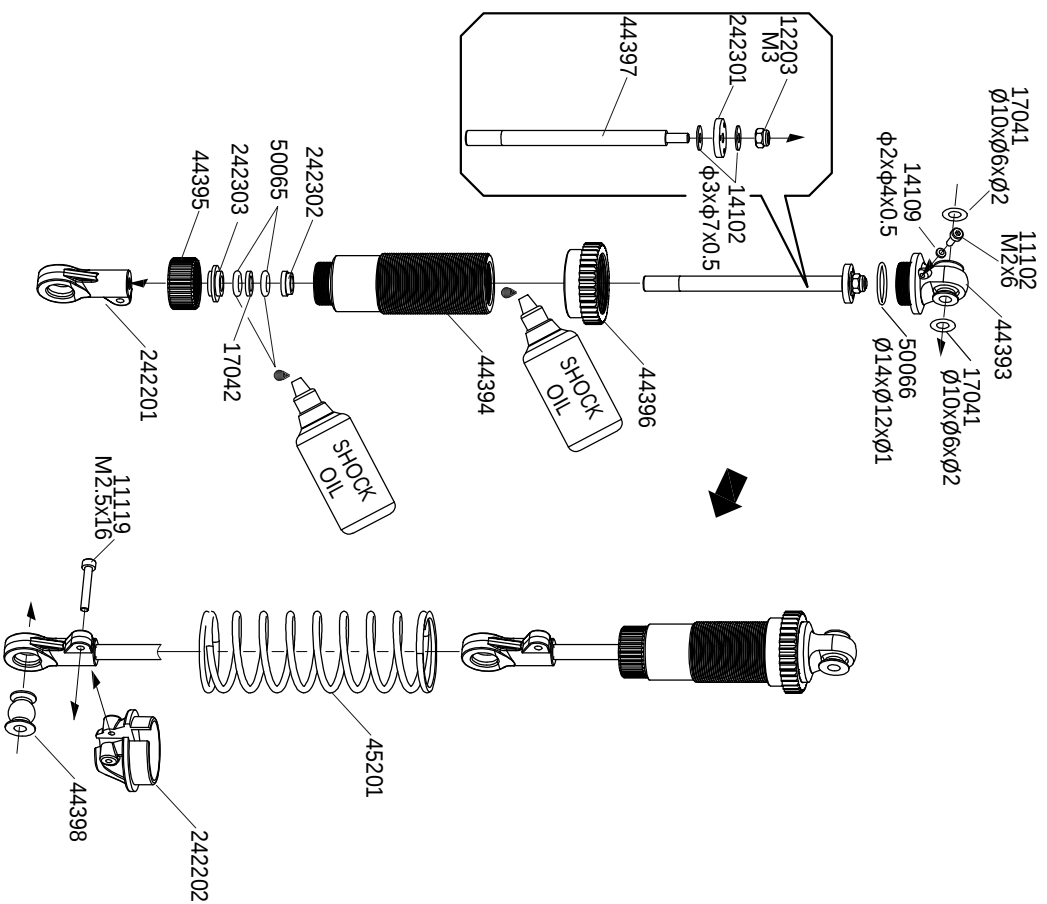

Link Assembly

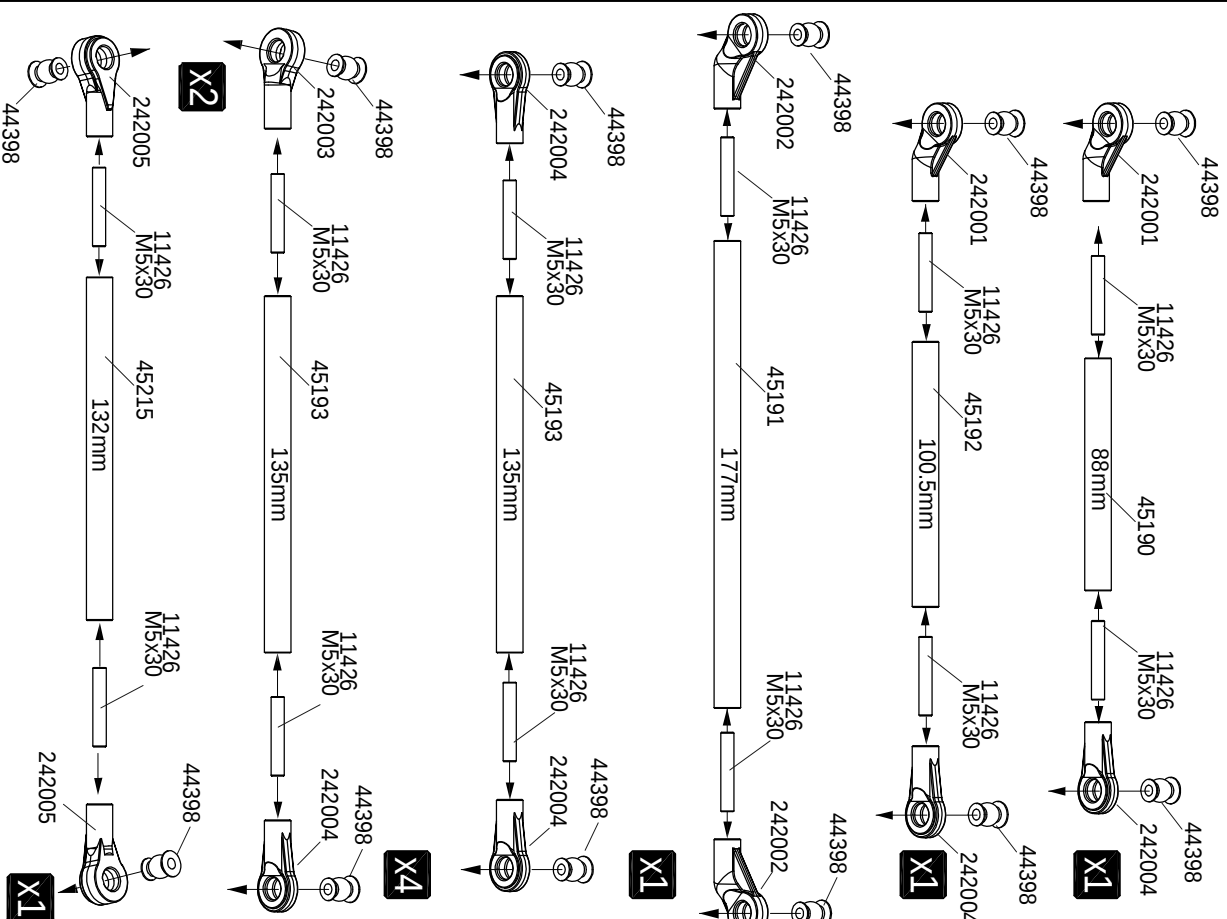


Front Assembly

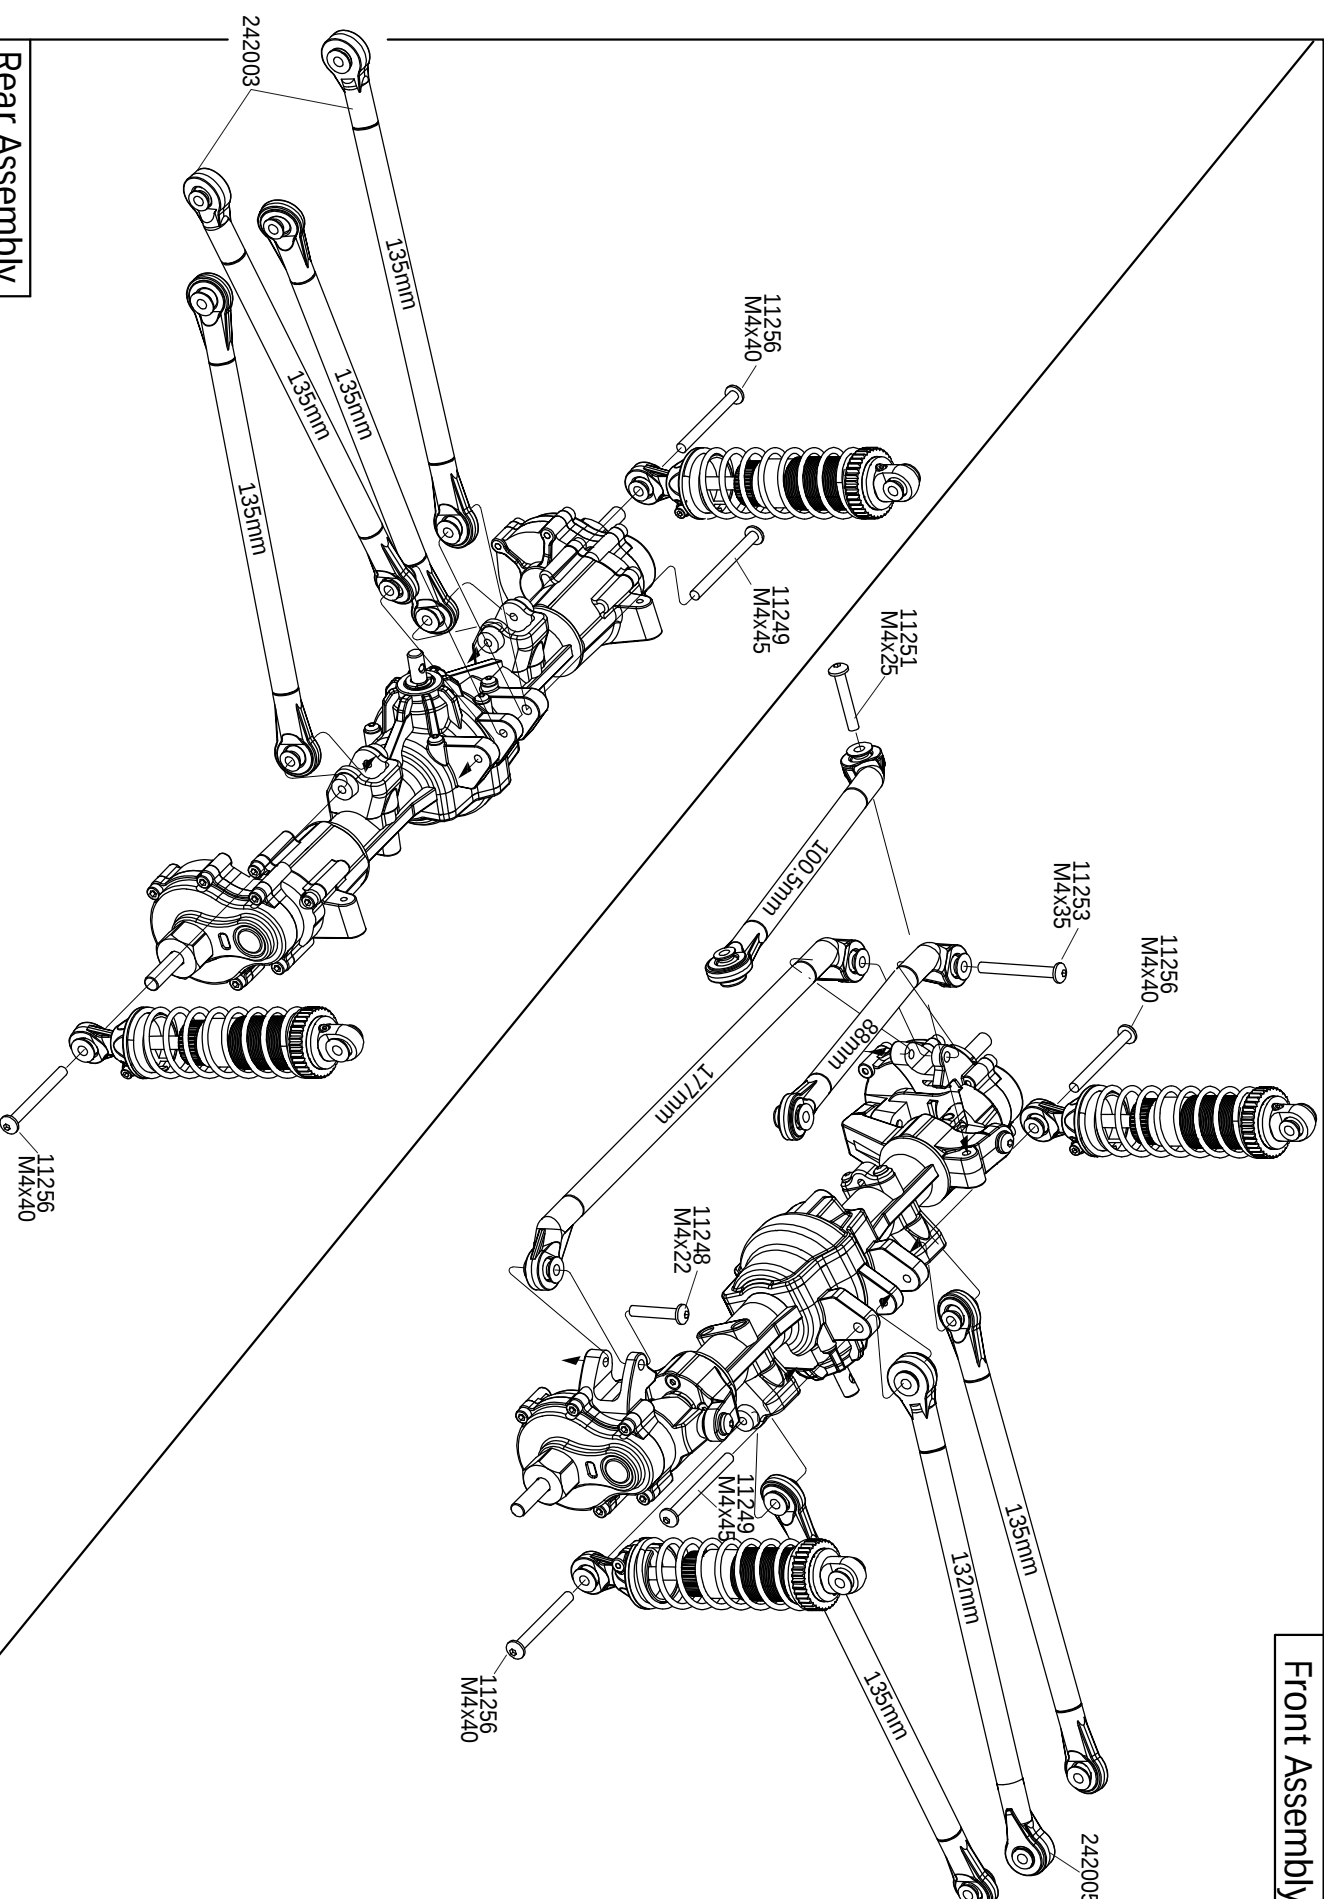


Rear Assembly

Electronic device Assembly

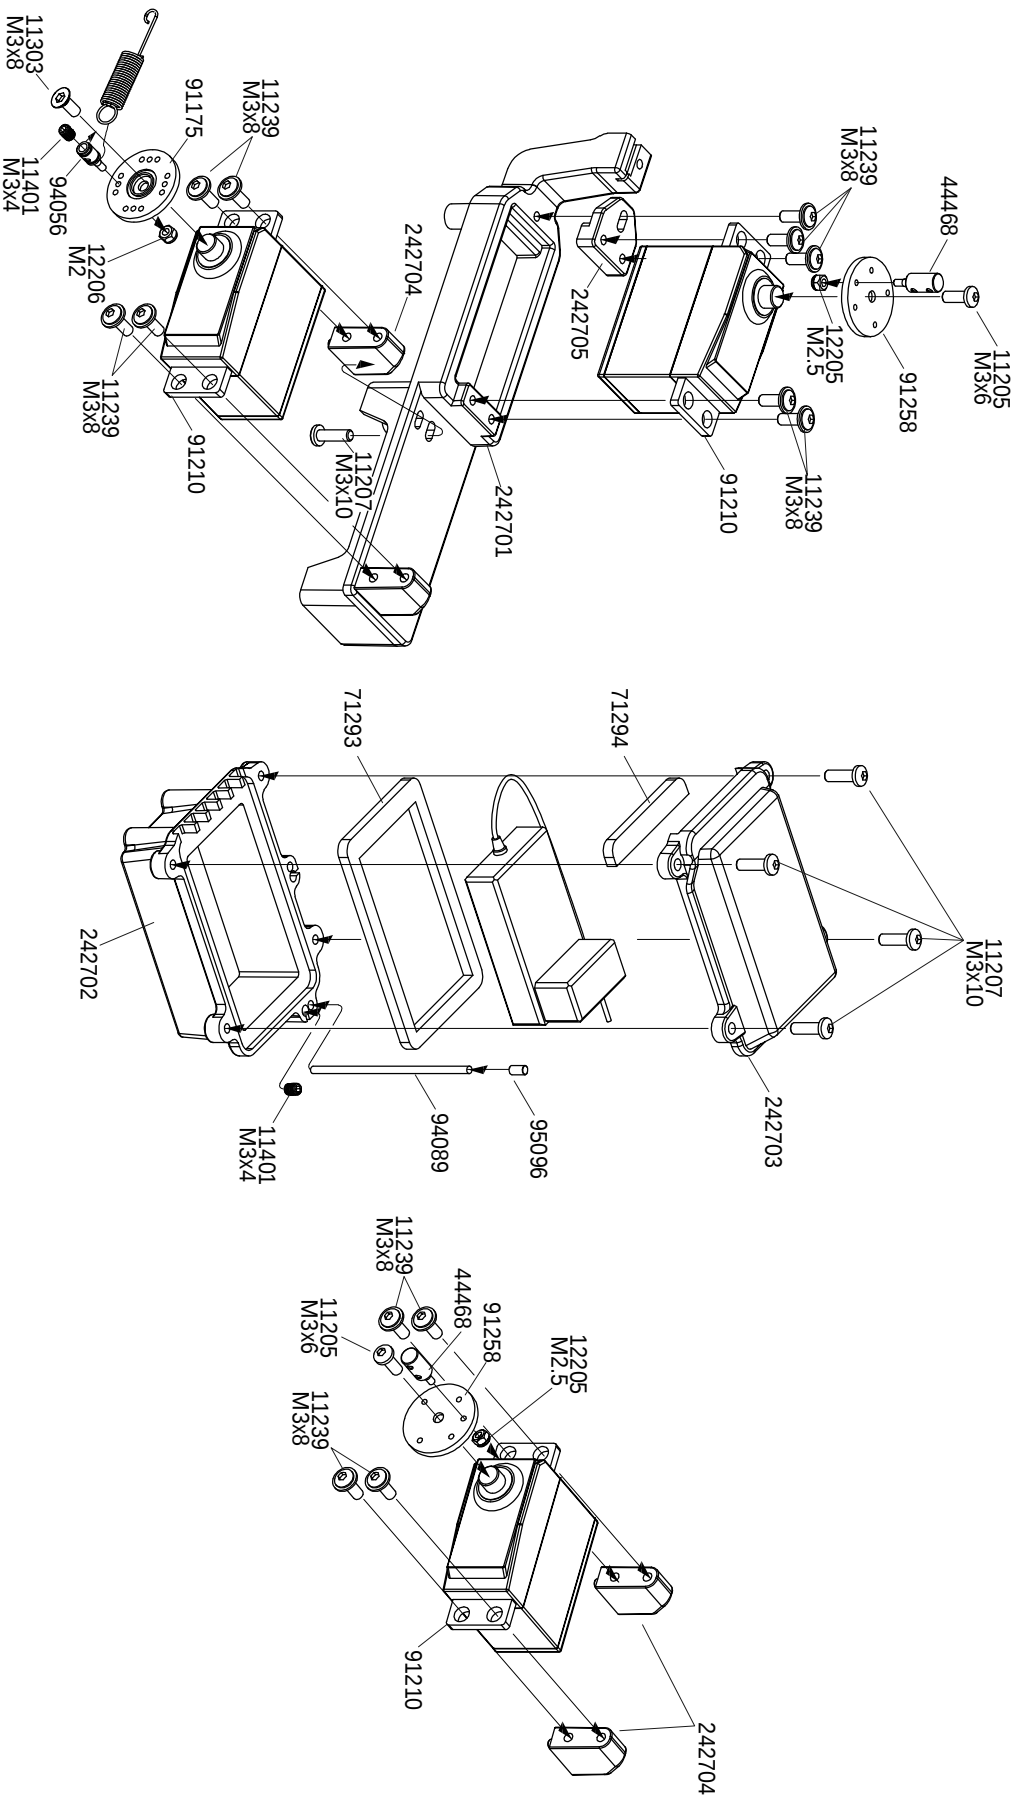


Assembly of tire

X5

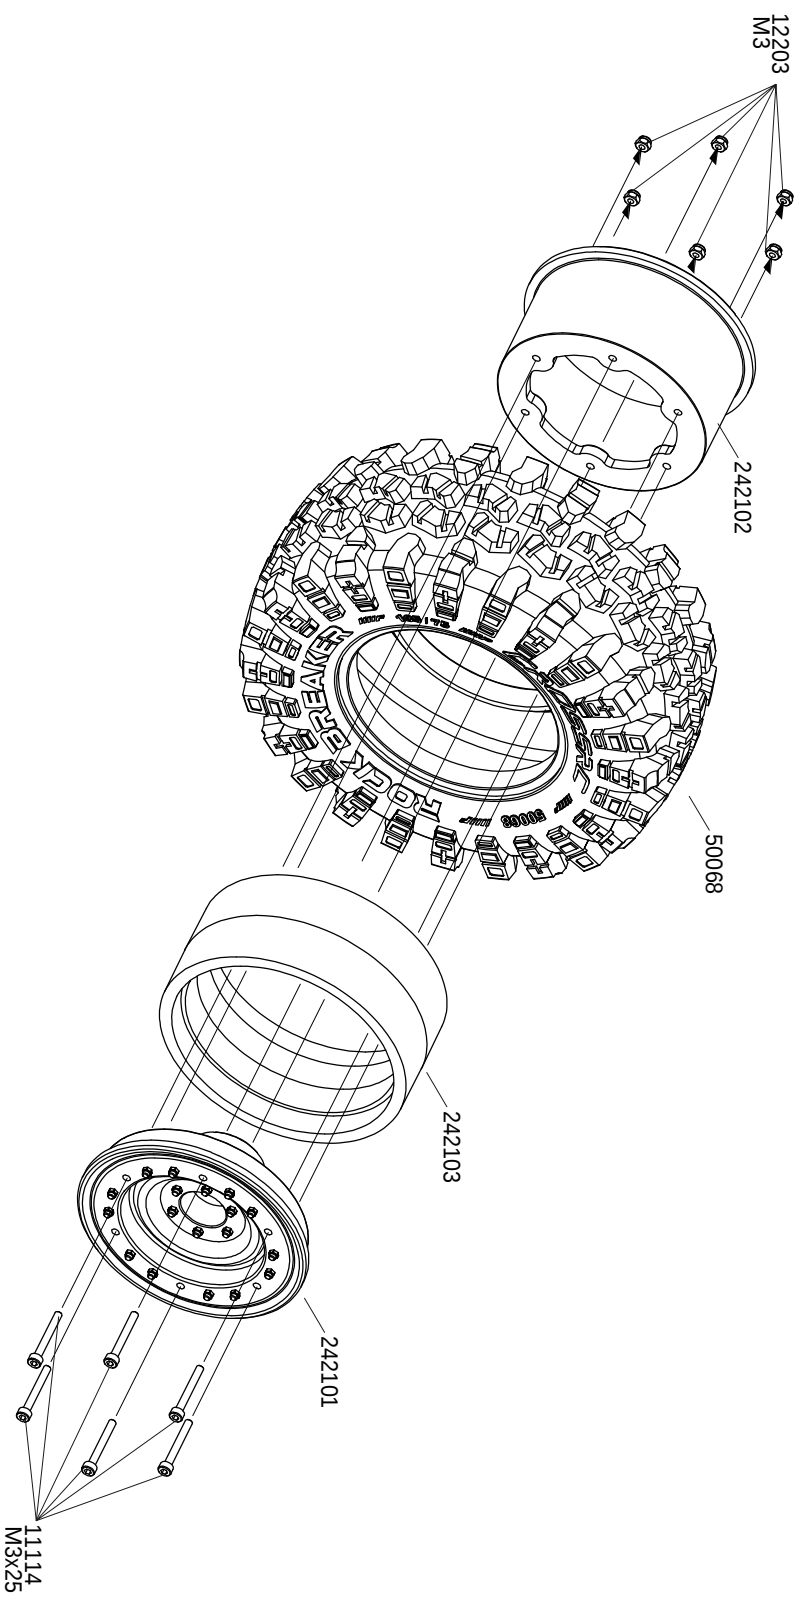




Chassis Assembly (B)



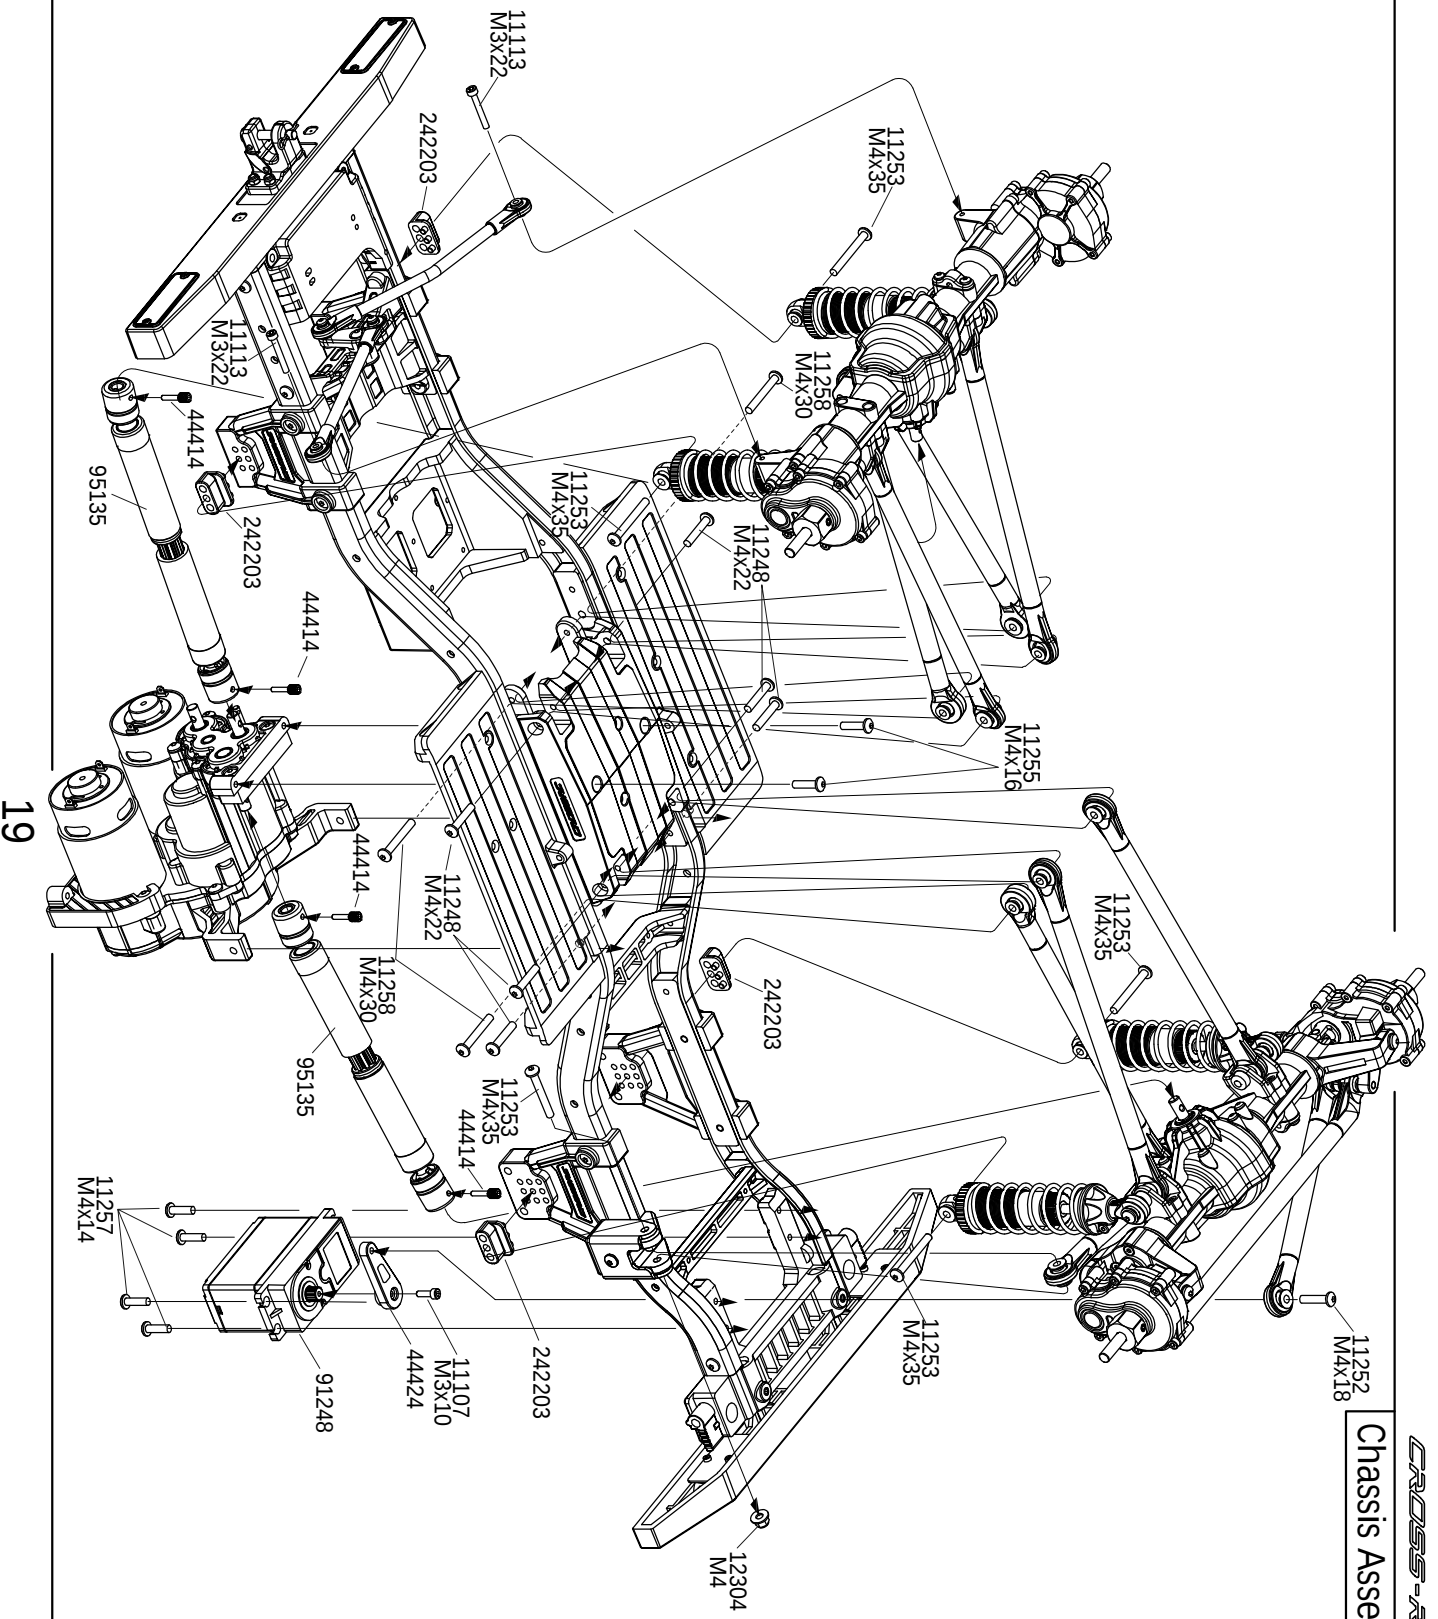


Chassis Assembly (C)

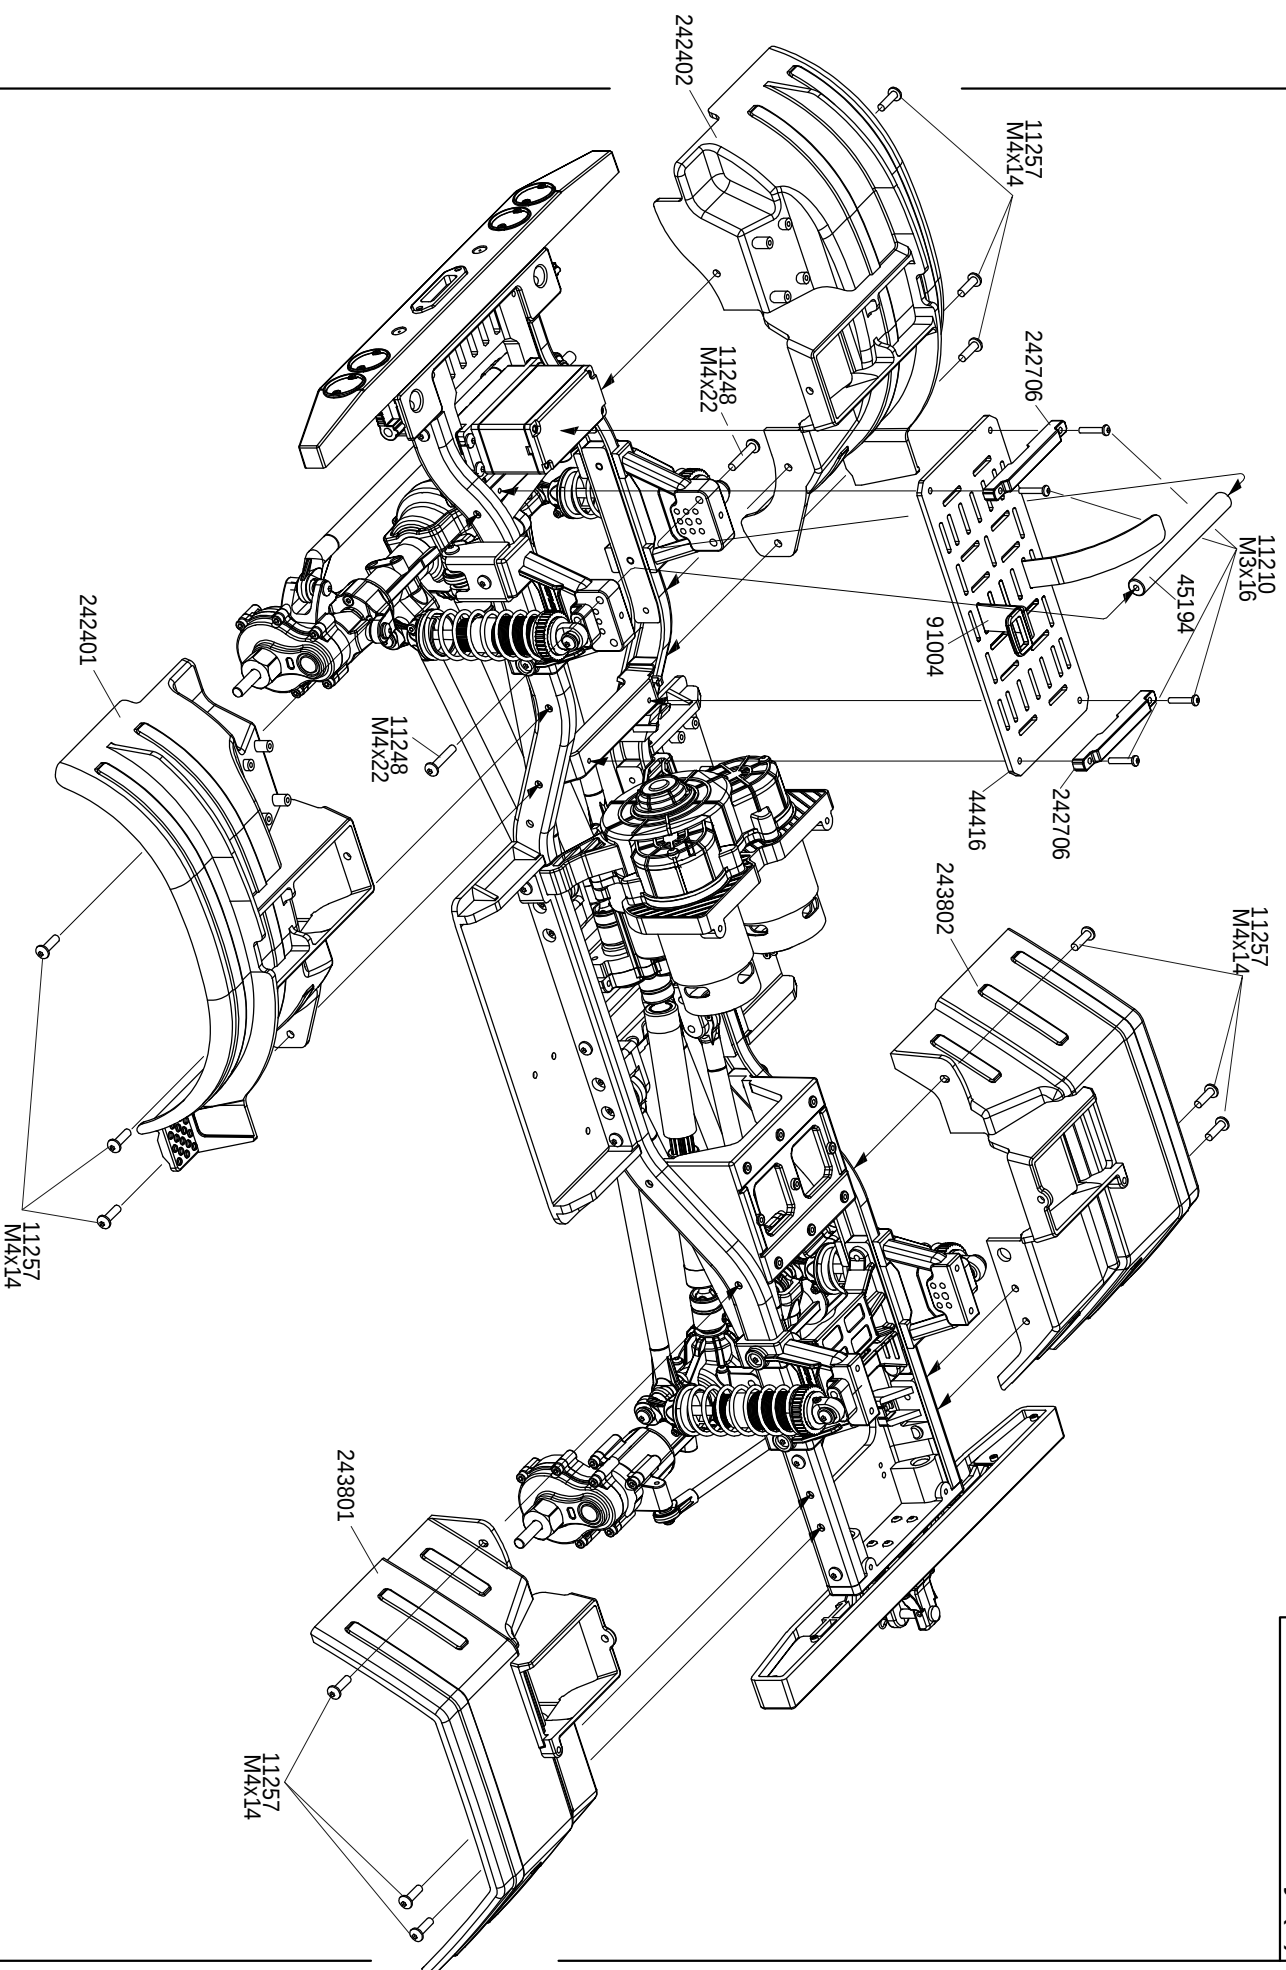


Chassis Assembly (D)


Turn on the Transmitter then Receiver and set the Steering Servo Trim at the neutral position.

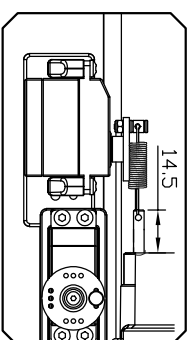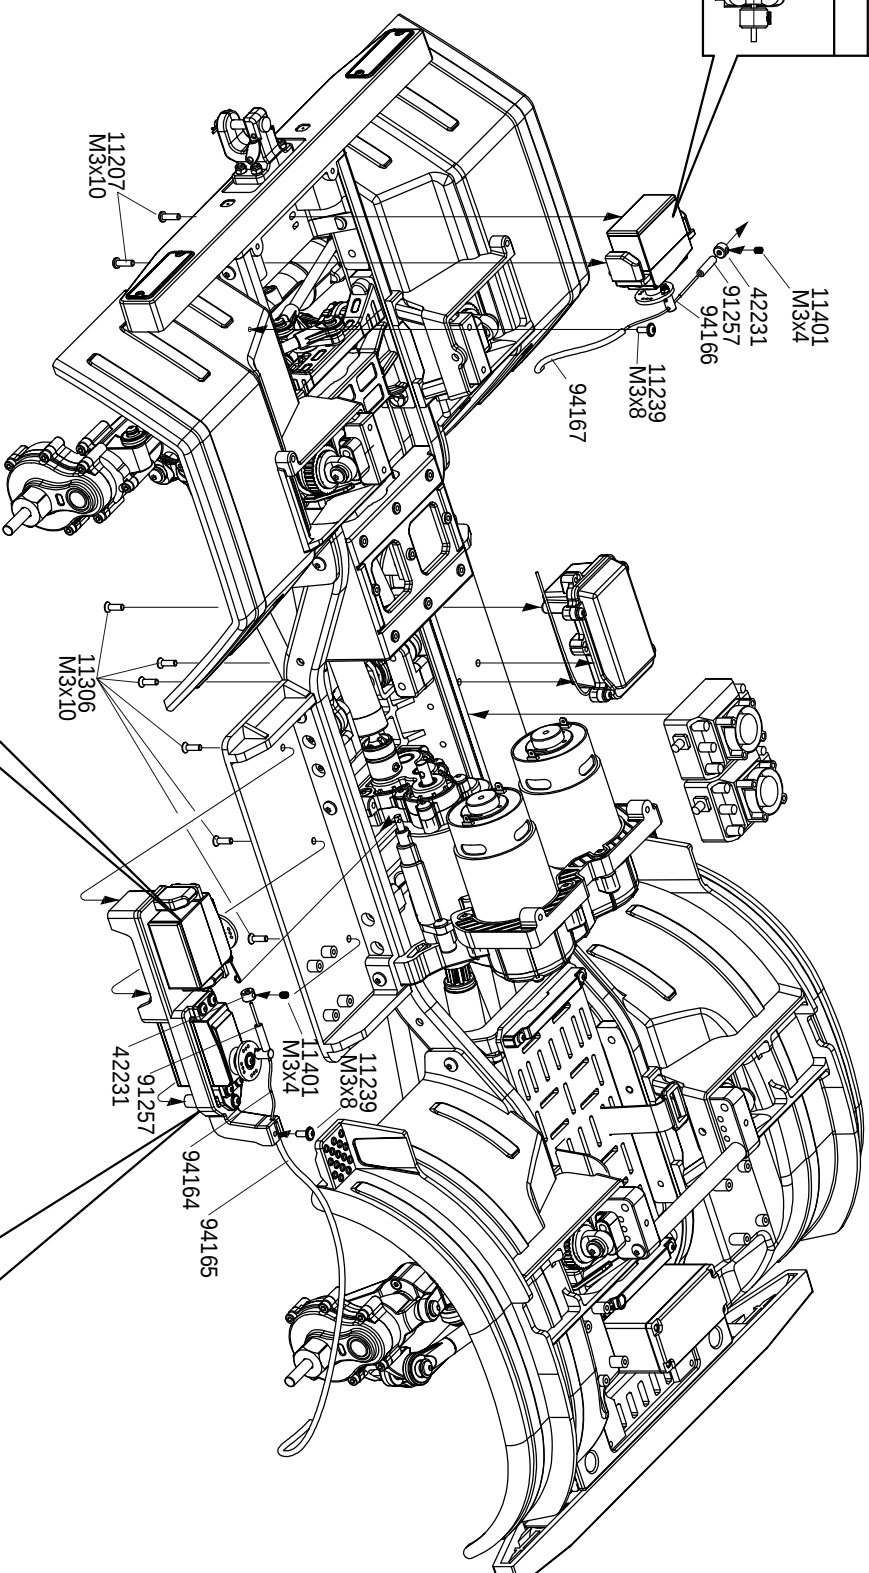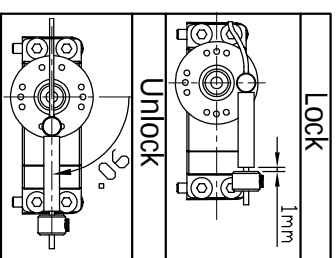


Slow

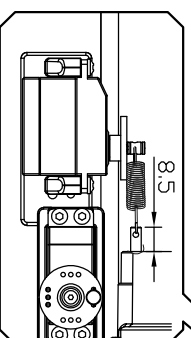

Fast

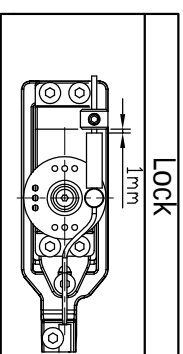


Lock

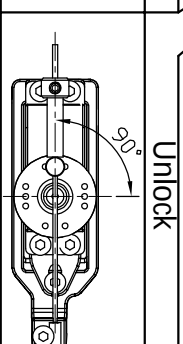


Unlock


Chassis Assembly (E)

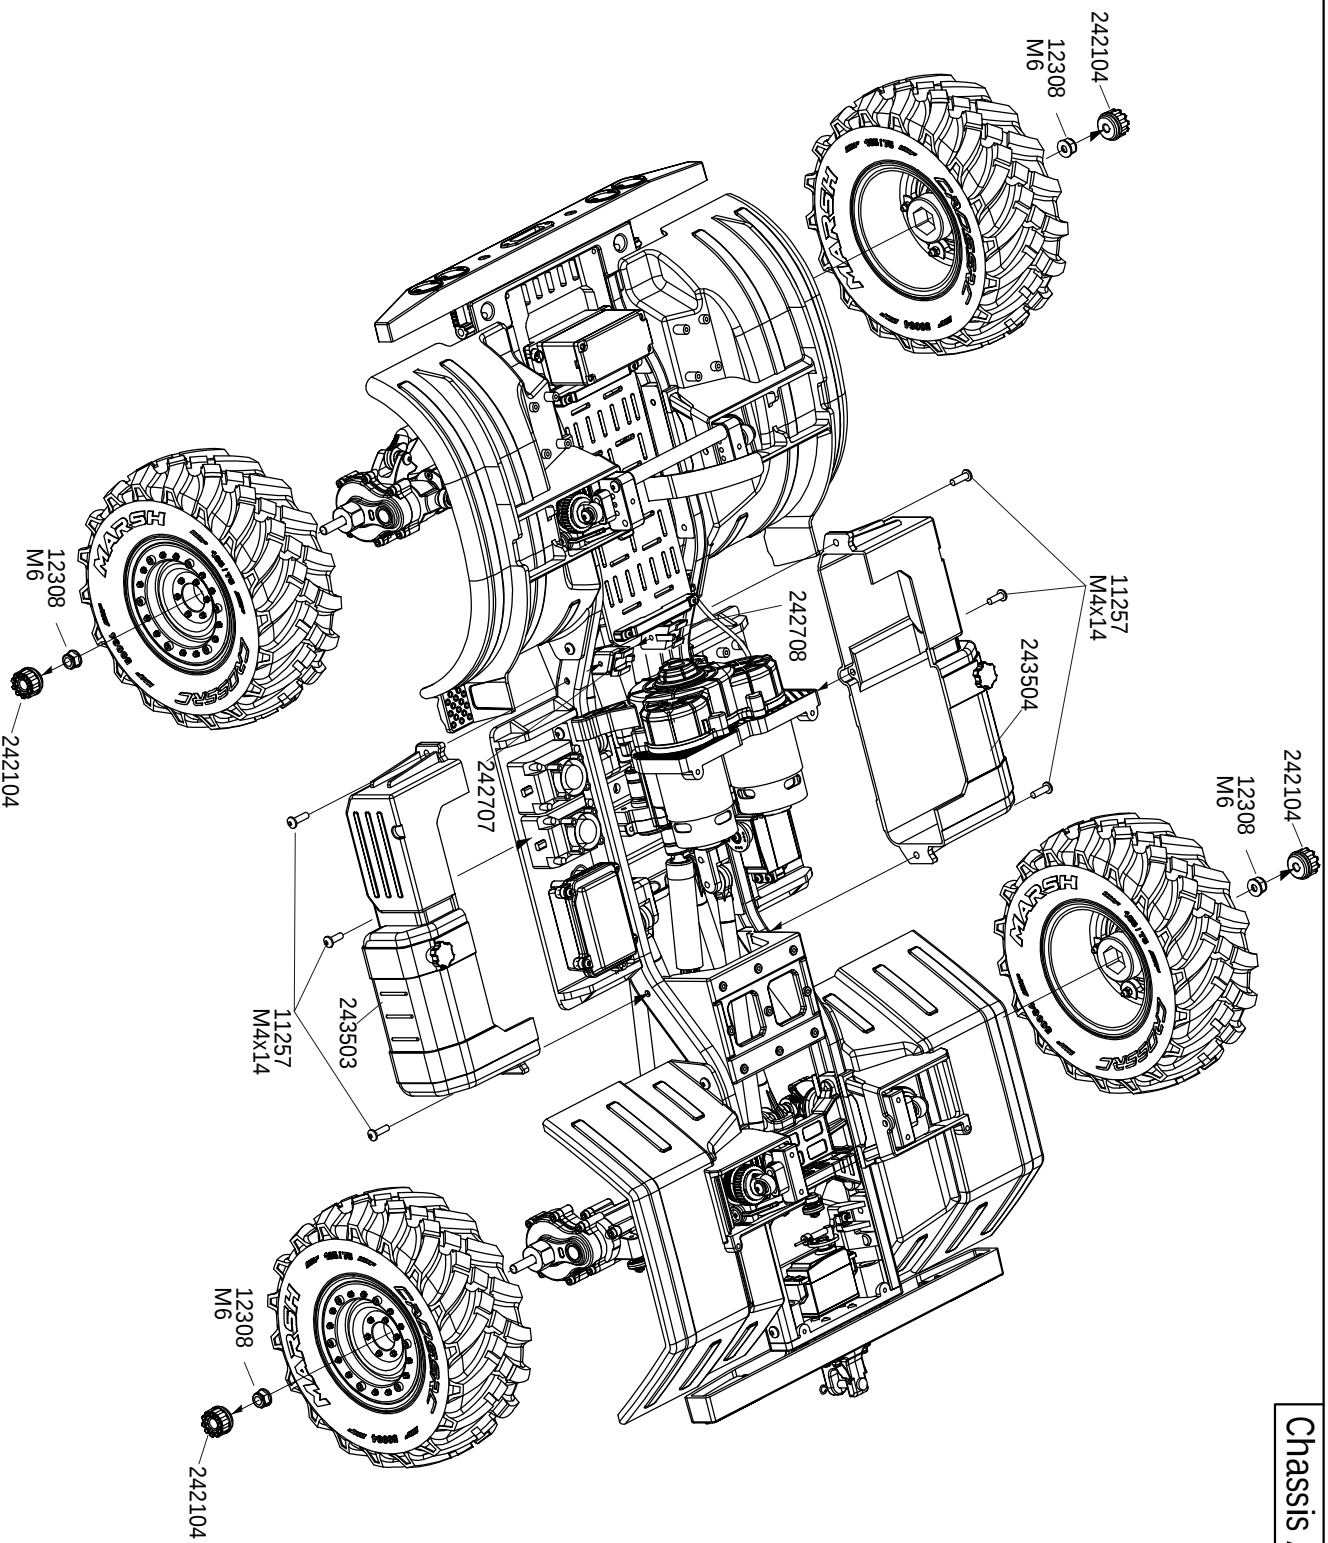


Body Assembly(A)

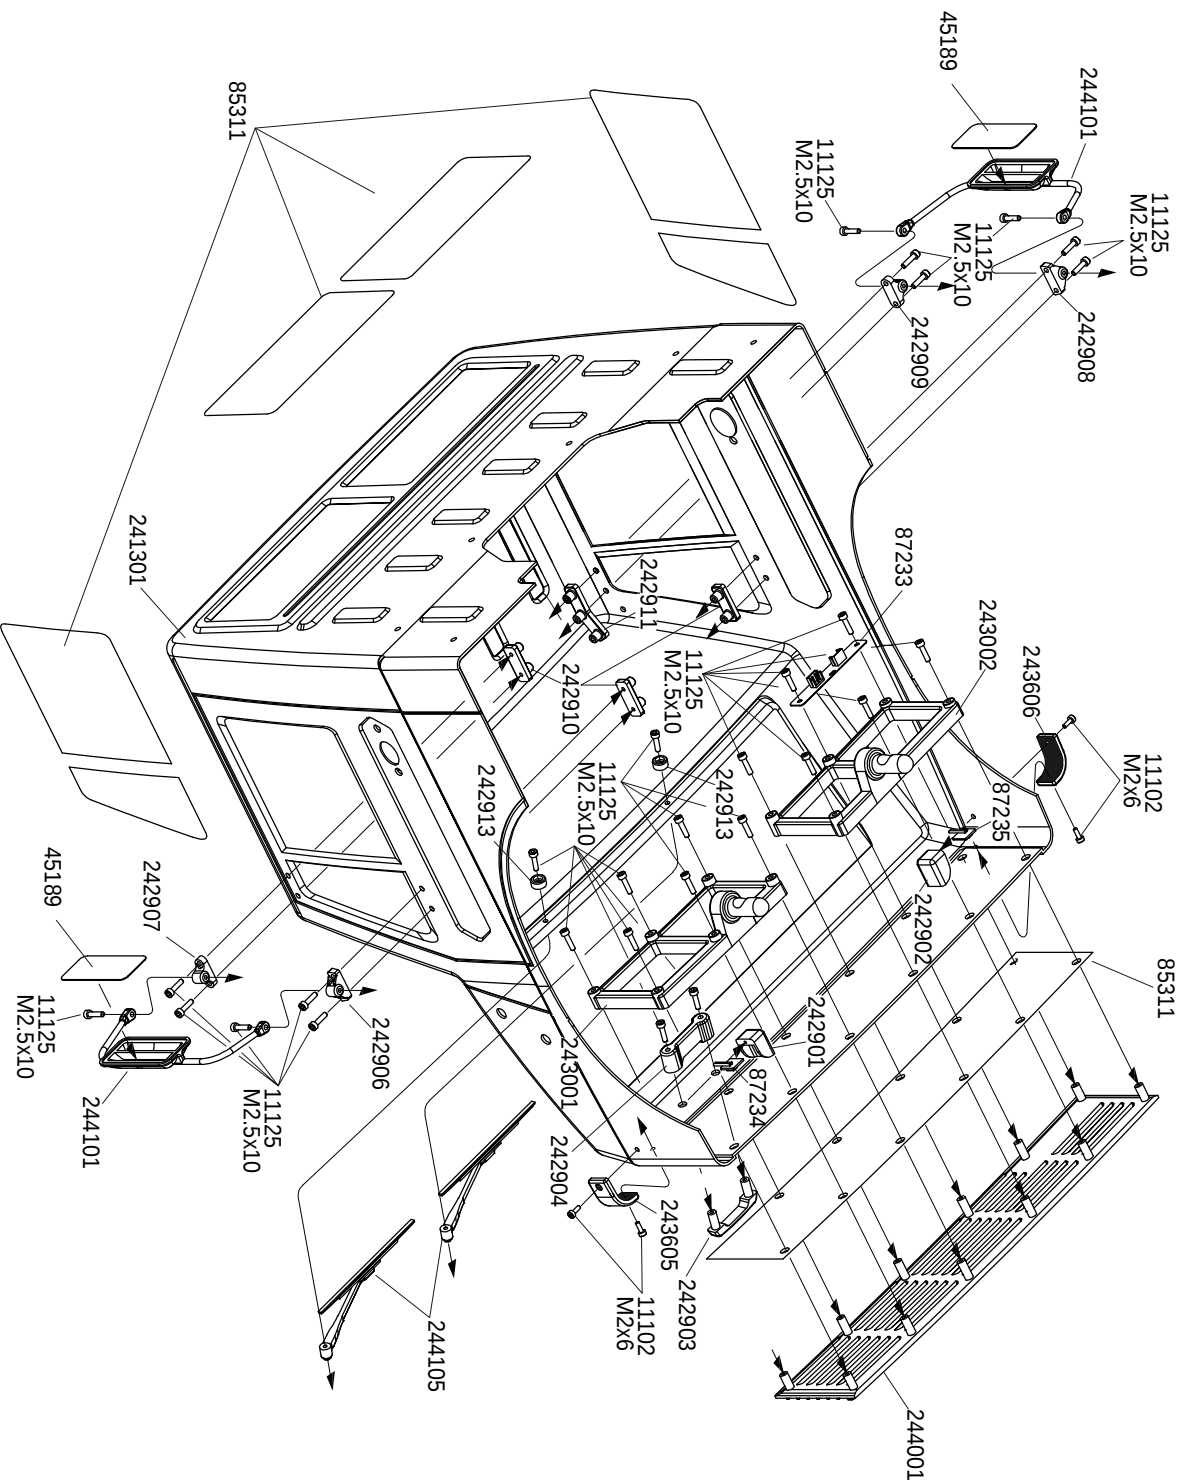


Body Assembly(B)

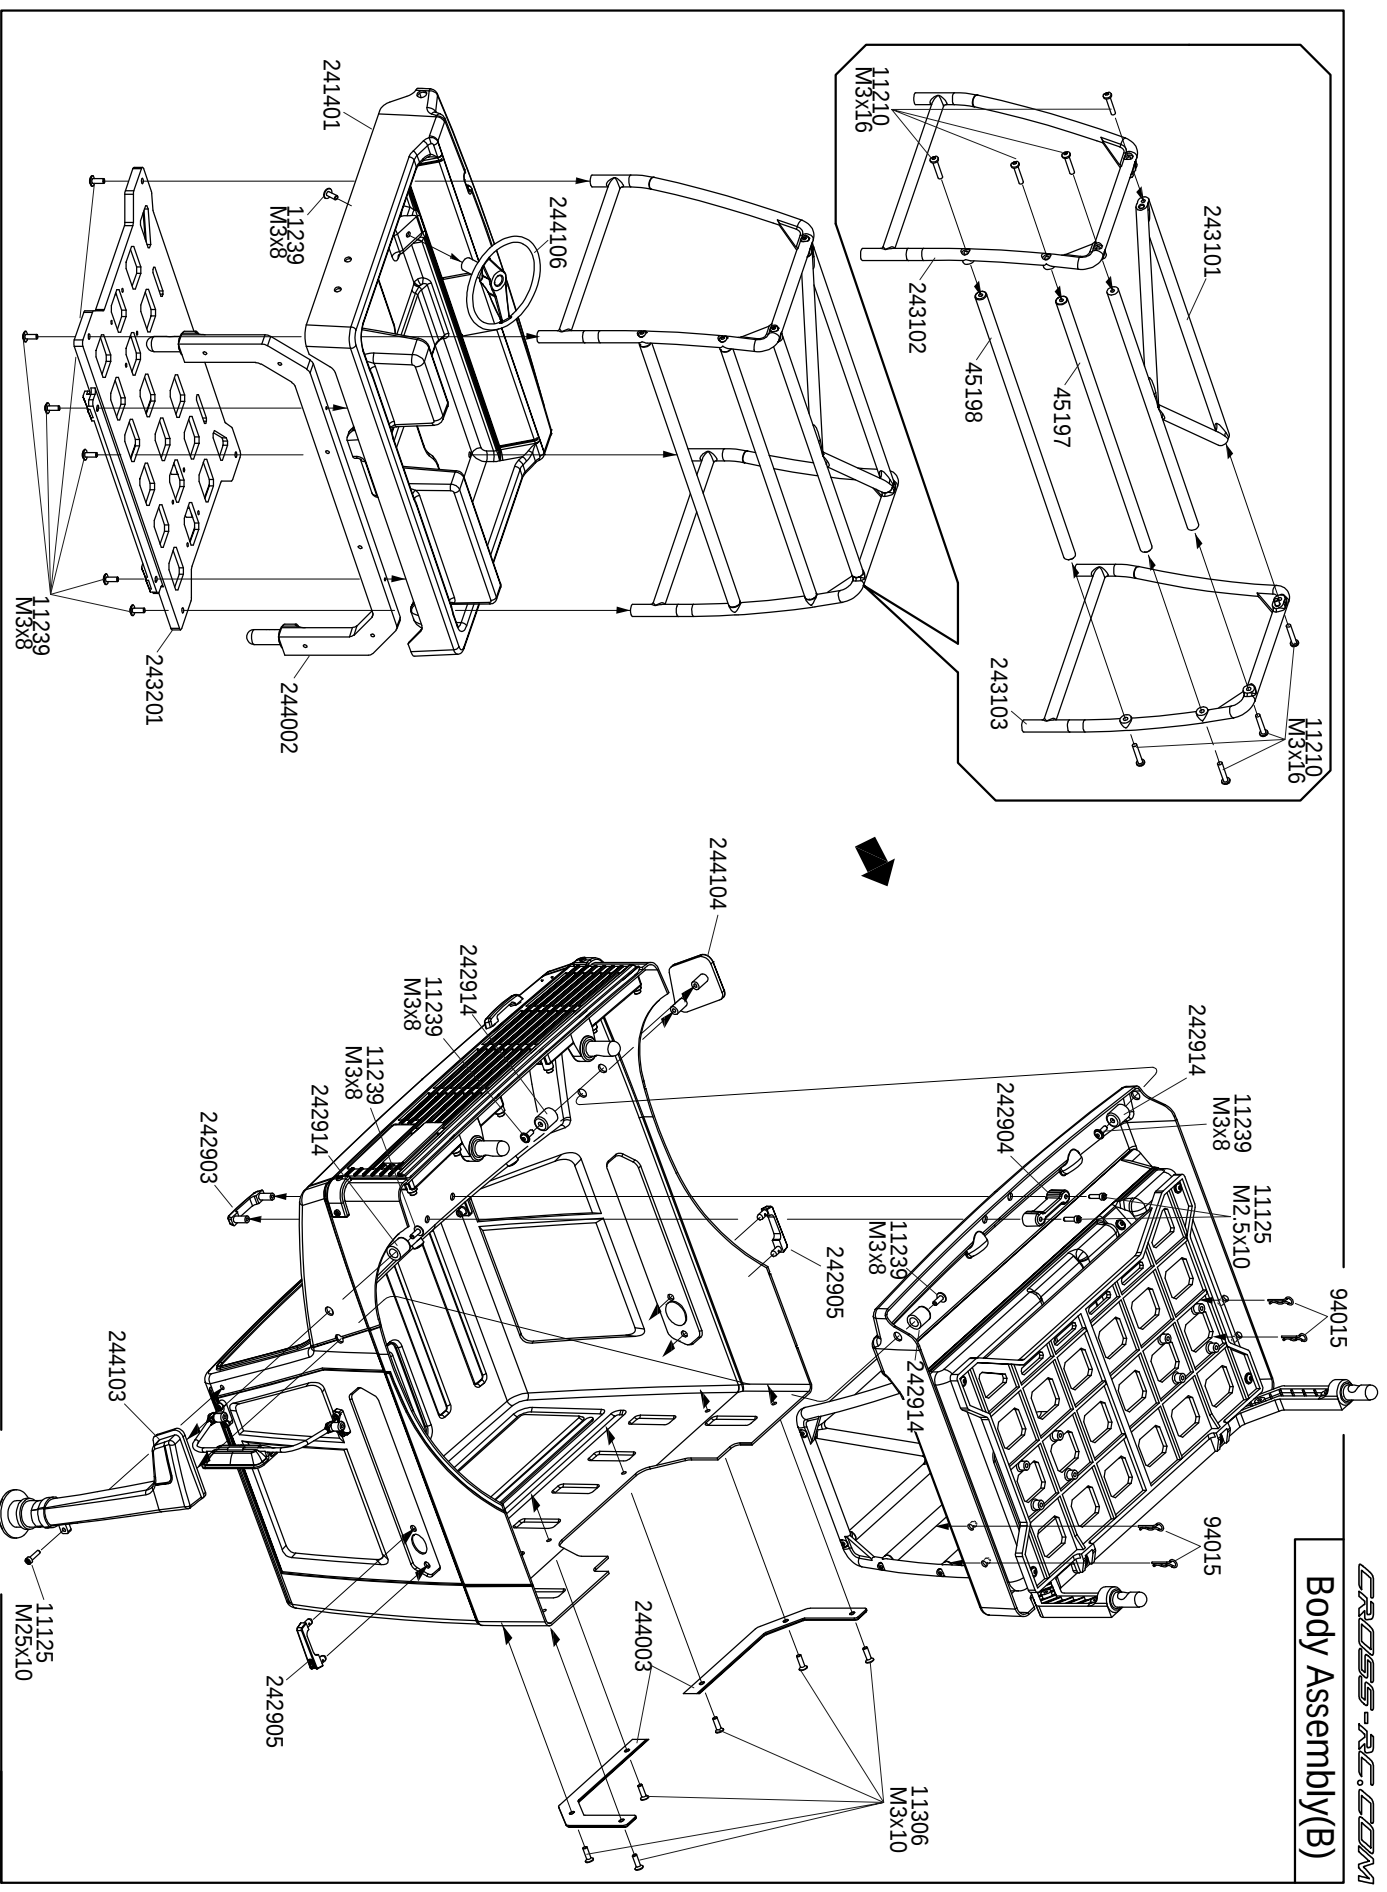


Body Assembly(C)

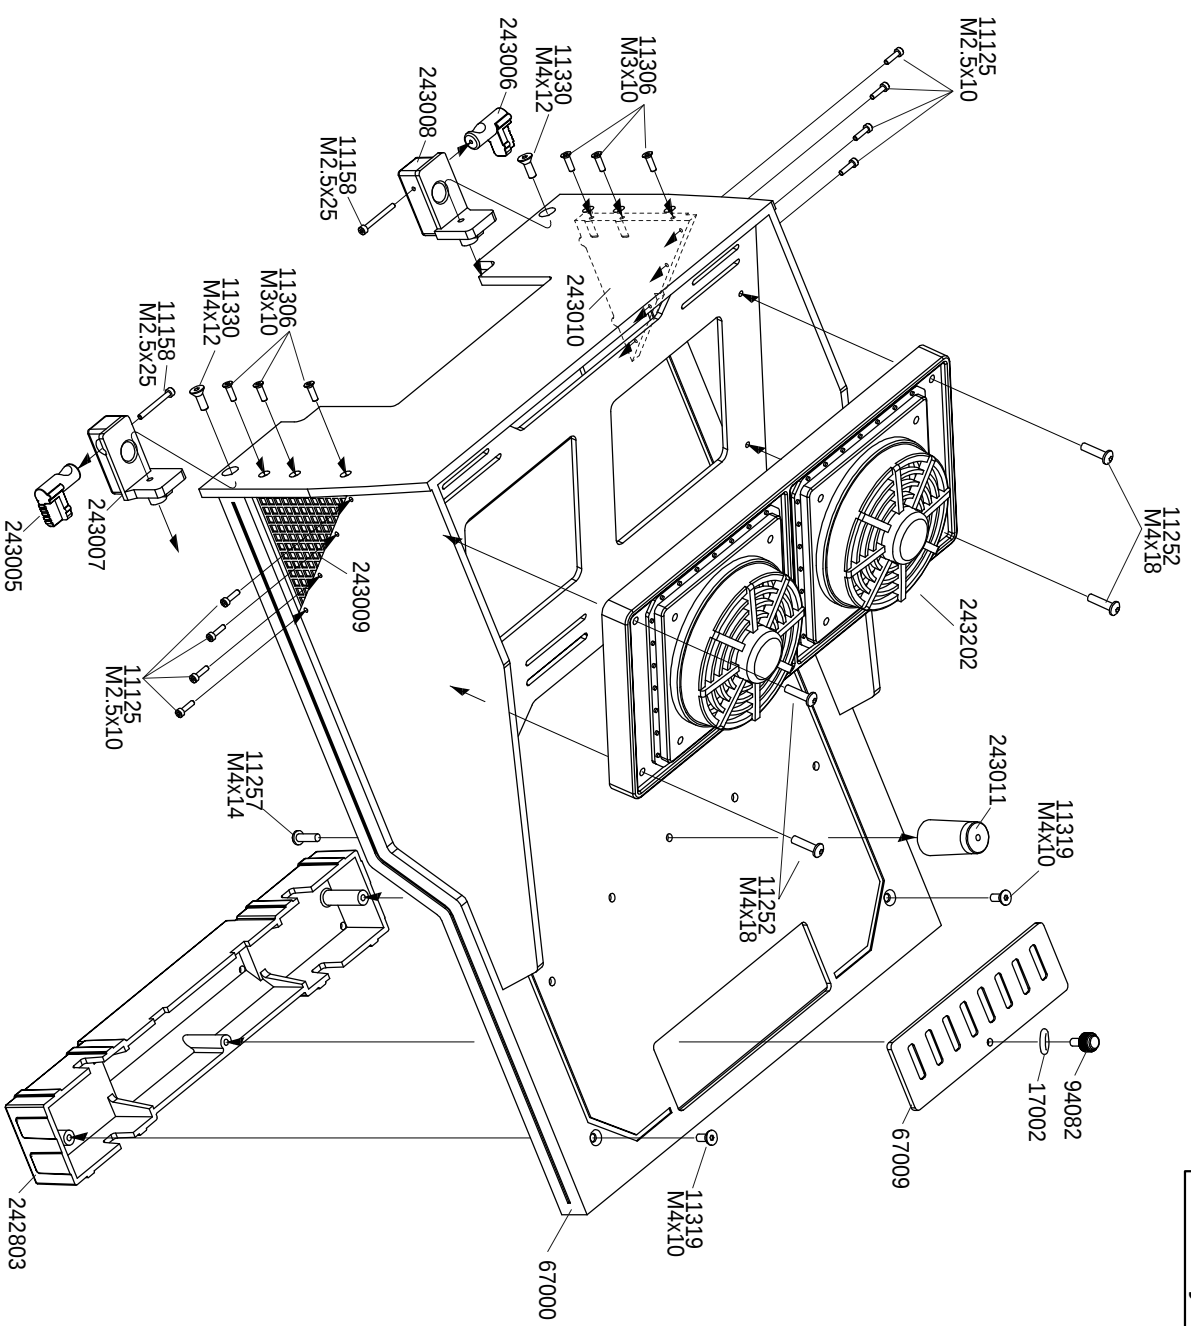


Modular Assembly(A)

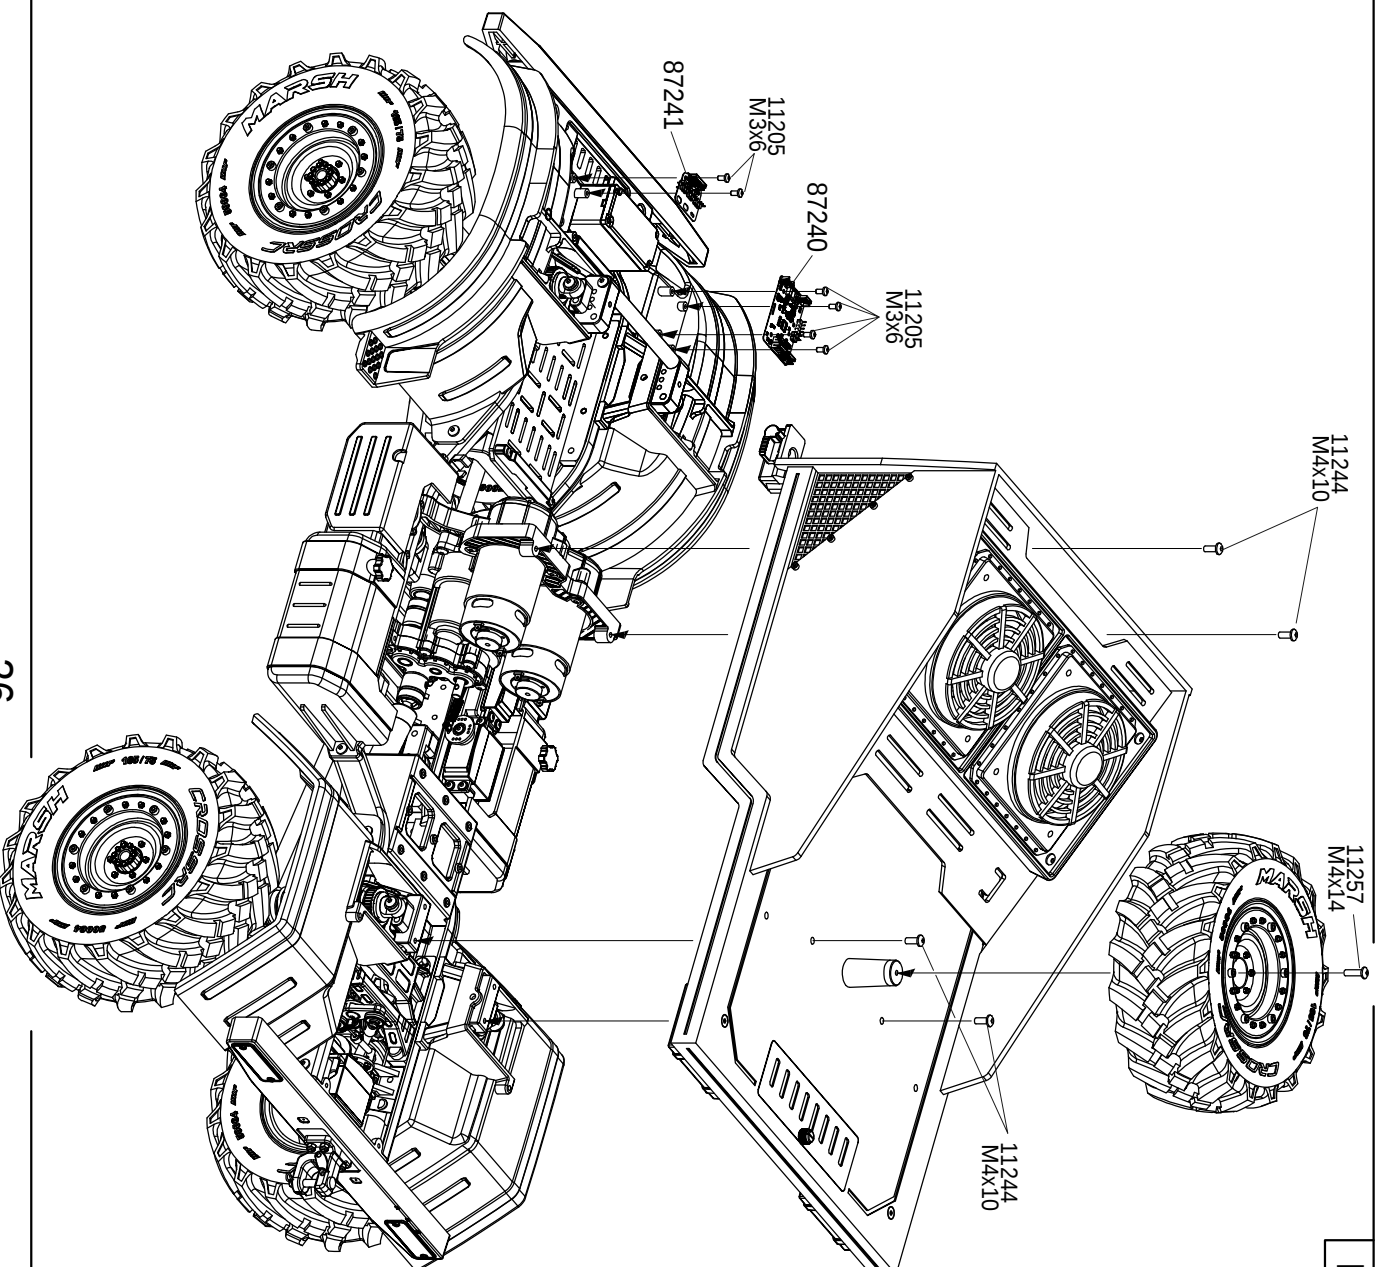


Modular Assembly(B)

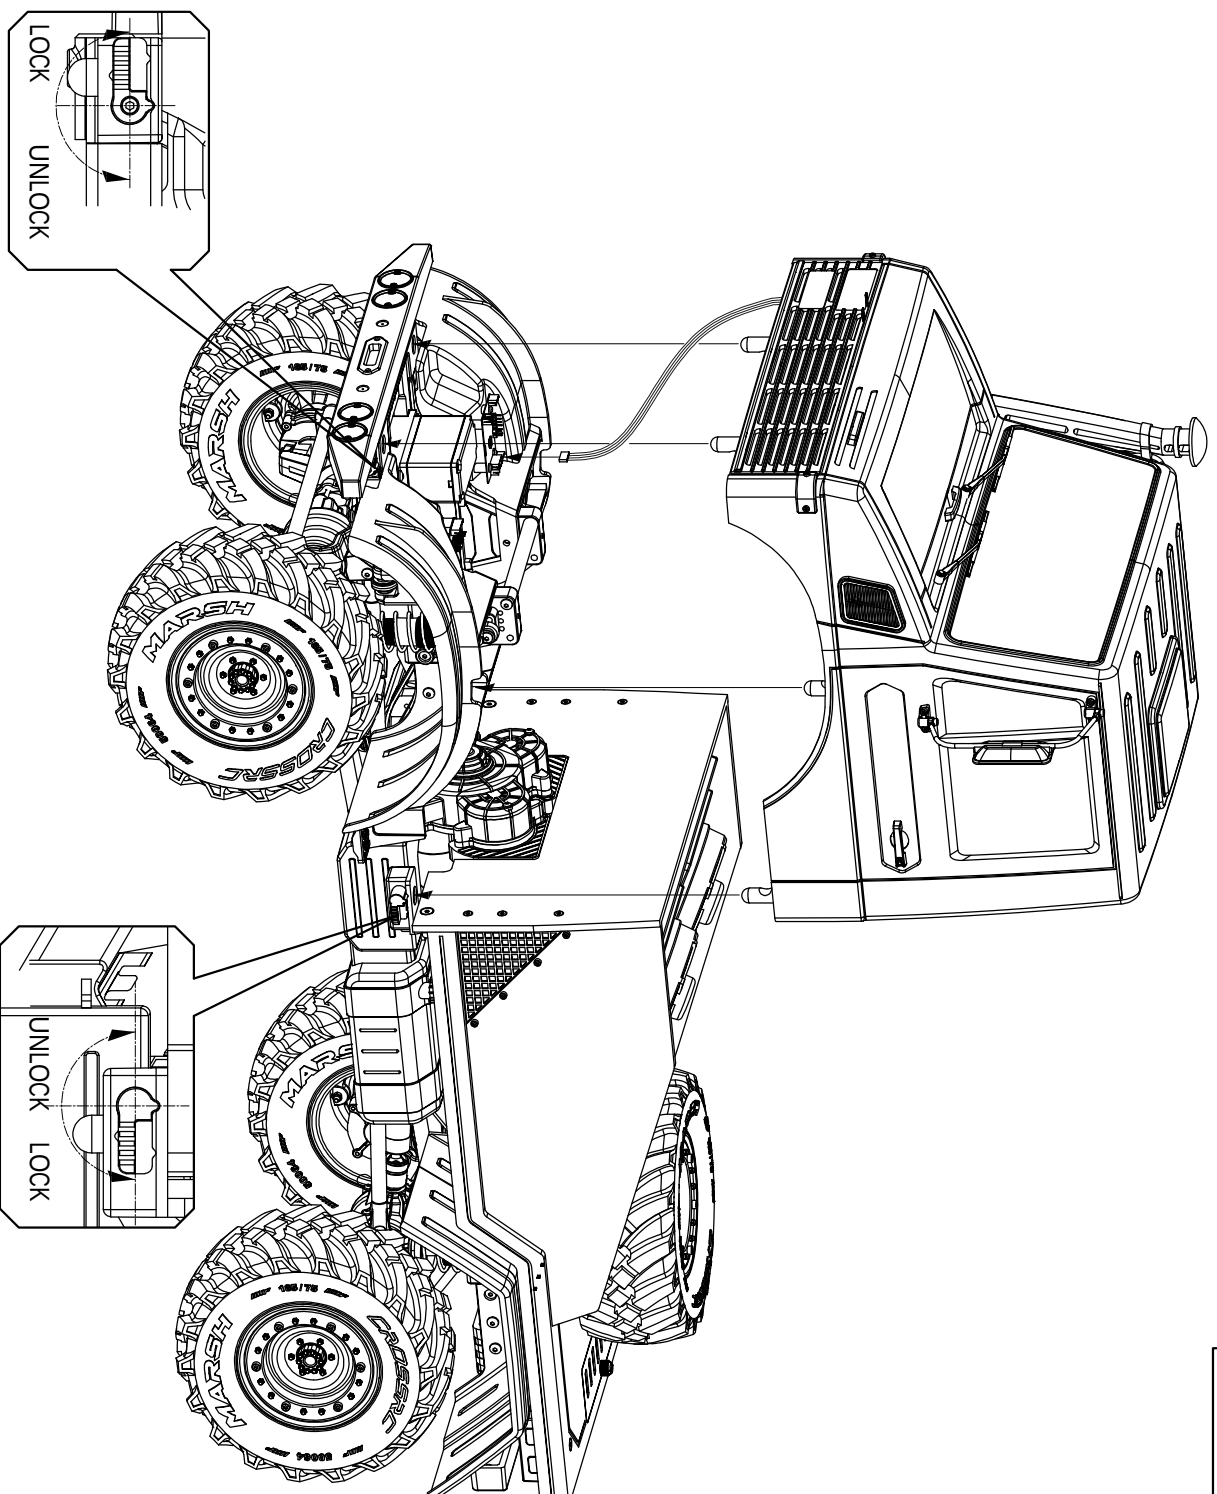

Assembly of left tire

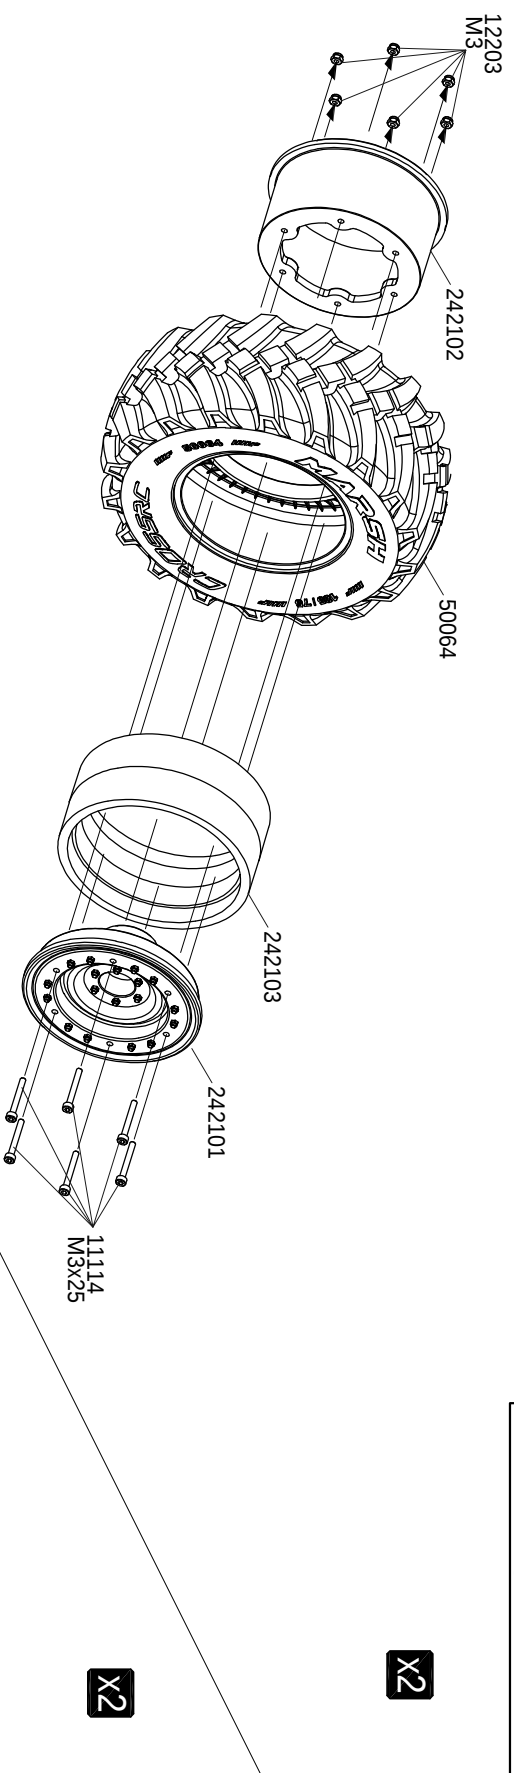


x2

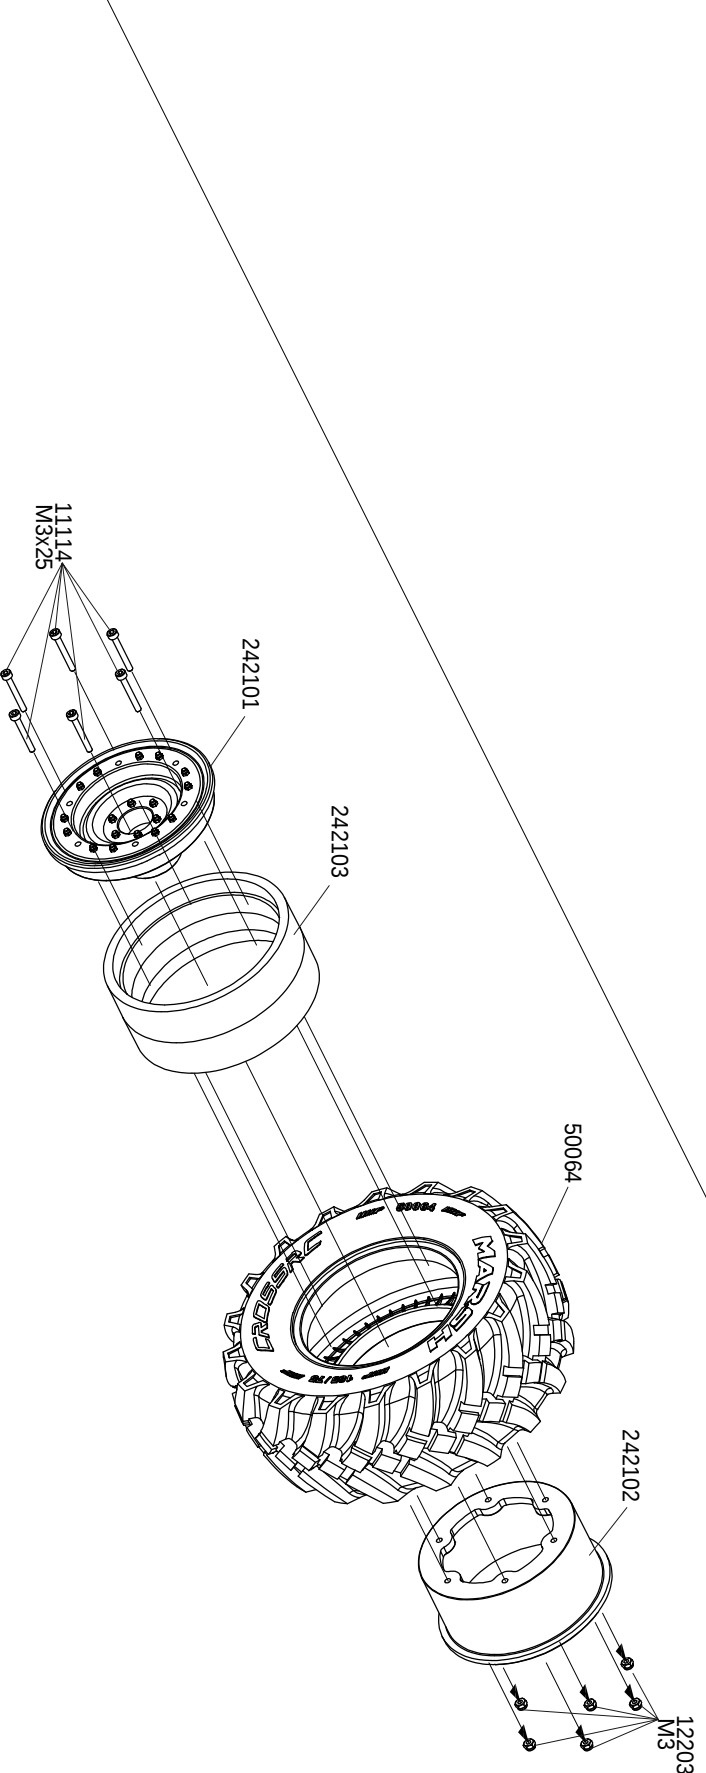


Assembly of right tire

Body Assembly (A)

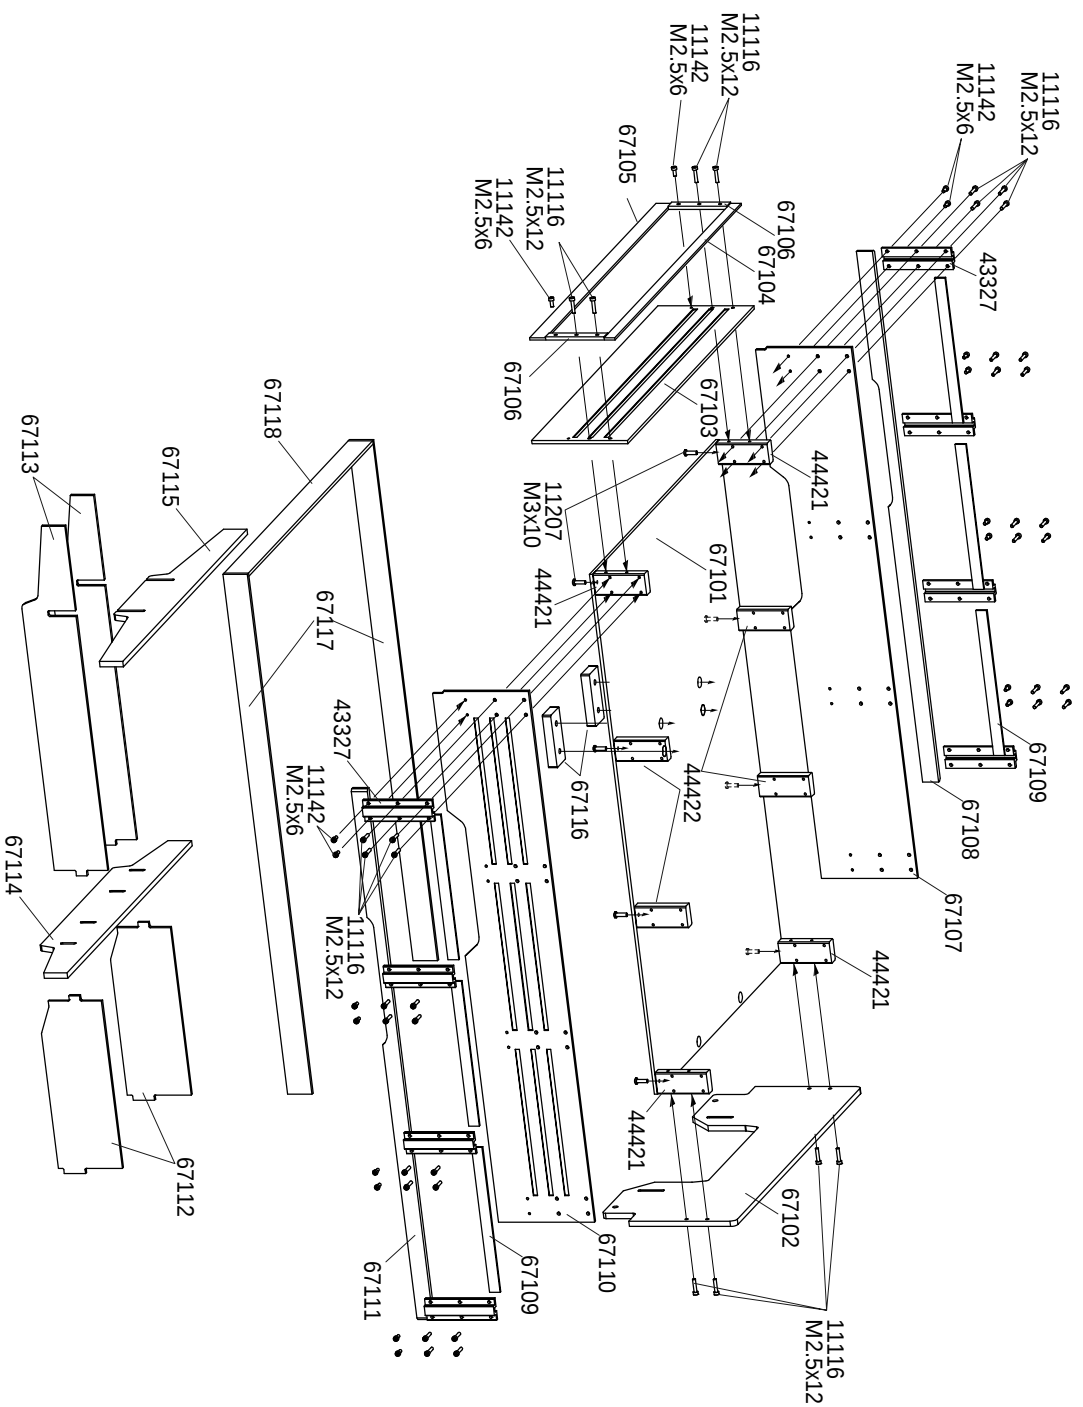

Body Assembly (B)

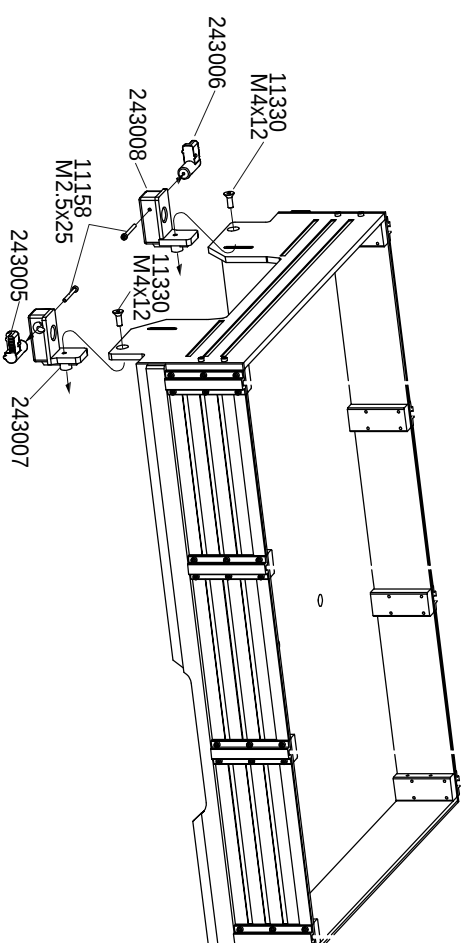

Modular Assembly

