

# CROSS RC

USER'S MANUAL



RADIO CONTROL SCALE ELECTRIC 4WD  
WWW.CROSS-RC.COM

SCALE 4X4  
OFF-ROAD

PG4

TR

1/10 FULL-SIZE PICKUPS KIT VERSION

## CAUTIONS



To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

### ● Safety Precautions

- 1.1 Choose a right place to operate your RC model.
- 1.2 Do not operate your RC model on the street or highway. It can cause a serious damage or a serious accident.
- 1.3 Never operate your RC model near people or animals.
- 1.4 Do not operate RC model in public places like hospital and residential areas.
- 1.5 Never operate RC model indoors. There is a higher possibility of fire or damage.
- 1.6 Keep the parts out of reach of children, small parts can cause choking and vinyl bags can suffocate.
- 1.7 Do not use with children younger than 14 years.

### ● Inspect your RC model before operation


- 2.1 Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- 2.2 Always use fresh batteries for your transmitter and for your receiver to avoid losing control of the model.
- 2.3 Always test the brakes and throttle before starting your engine to avoid losing control of the model.
- 2.4 Always turn on the transmitter first, and then turn on the receiver.

### ● After operation of your RC model

- 3.1 Turn off receiver first, then turn off transmitter, this will prevent runaways.
- 3.2 Be careful when handling batteries, they will be hot after running.
- 3.3 Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.


## TOOLS


(Not included)

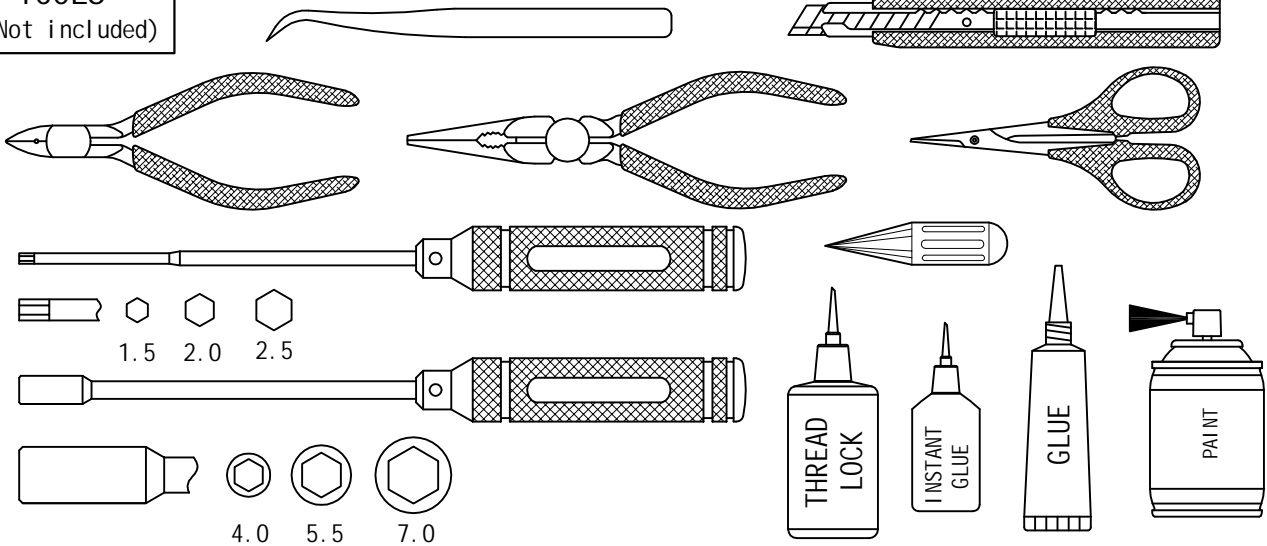


## Electronic equipment

(Not included)

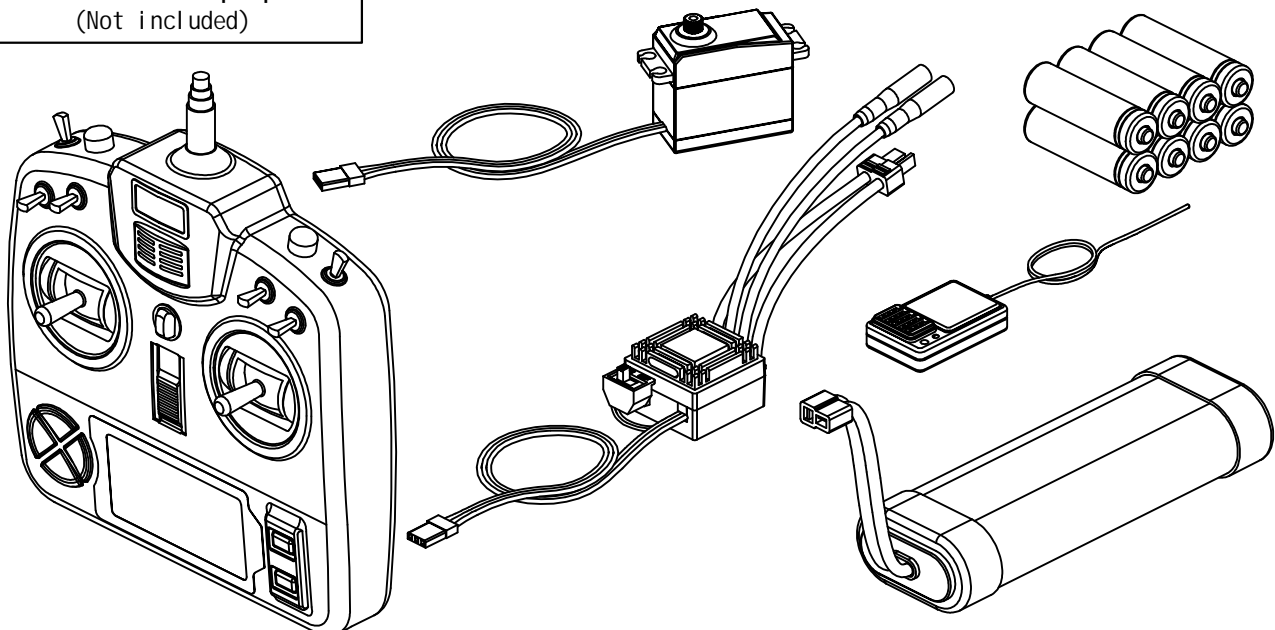


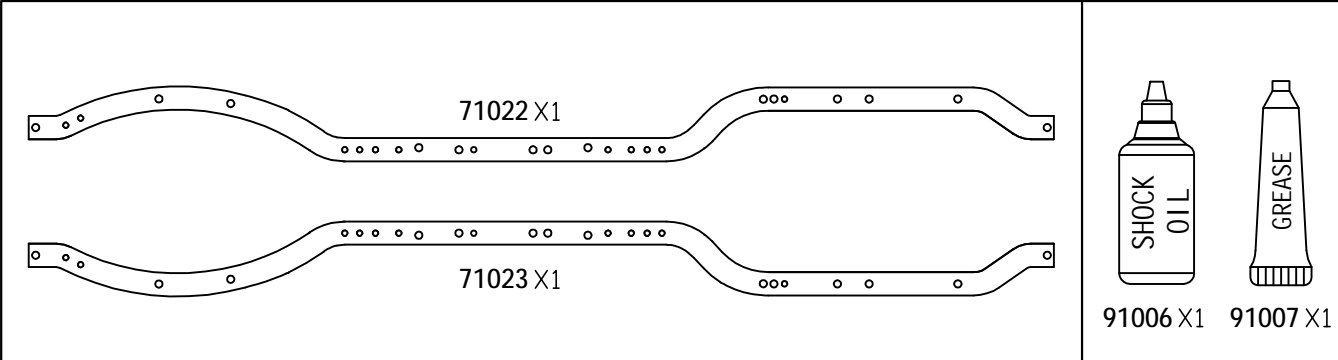


BAG(A)

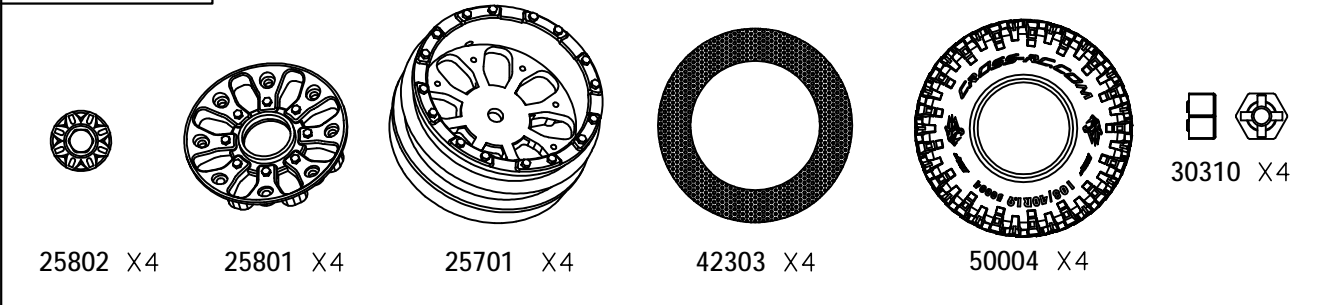


BAG(FA)

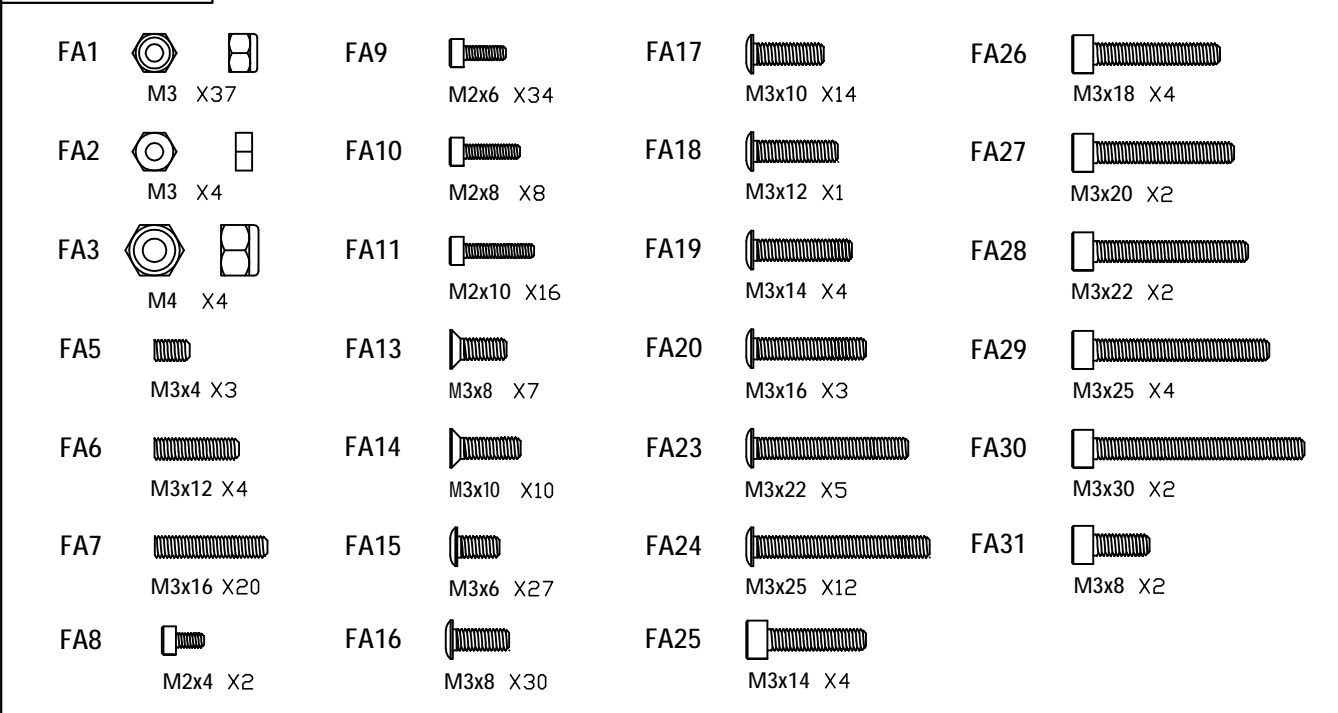


BAG(FB)

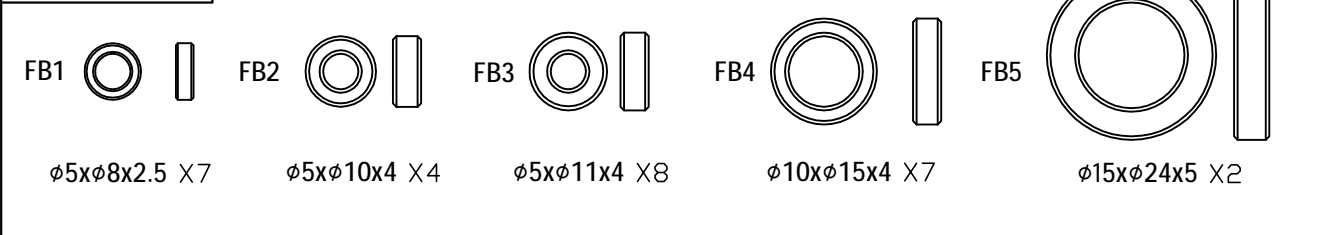


BAG(FC)

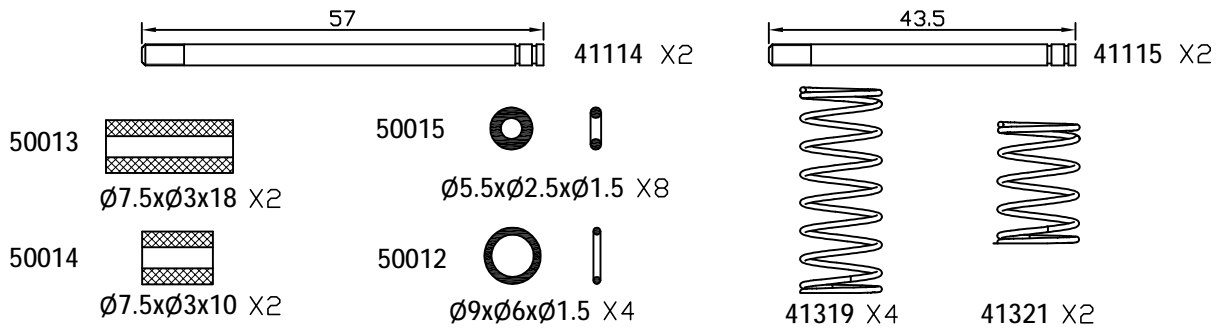


BAG(FD)

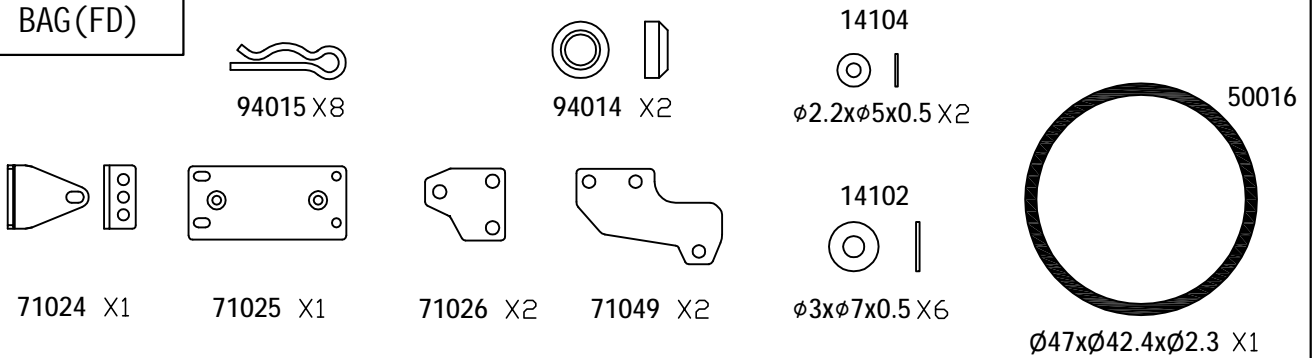


BAG(FF)

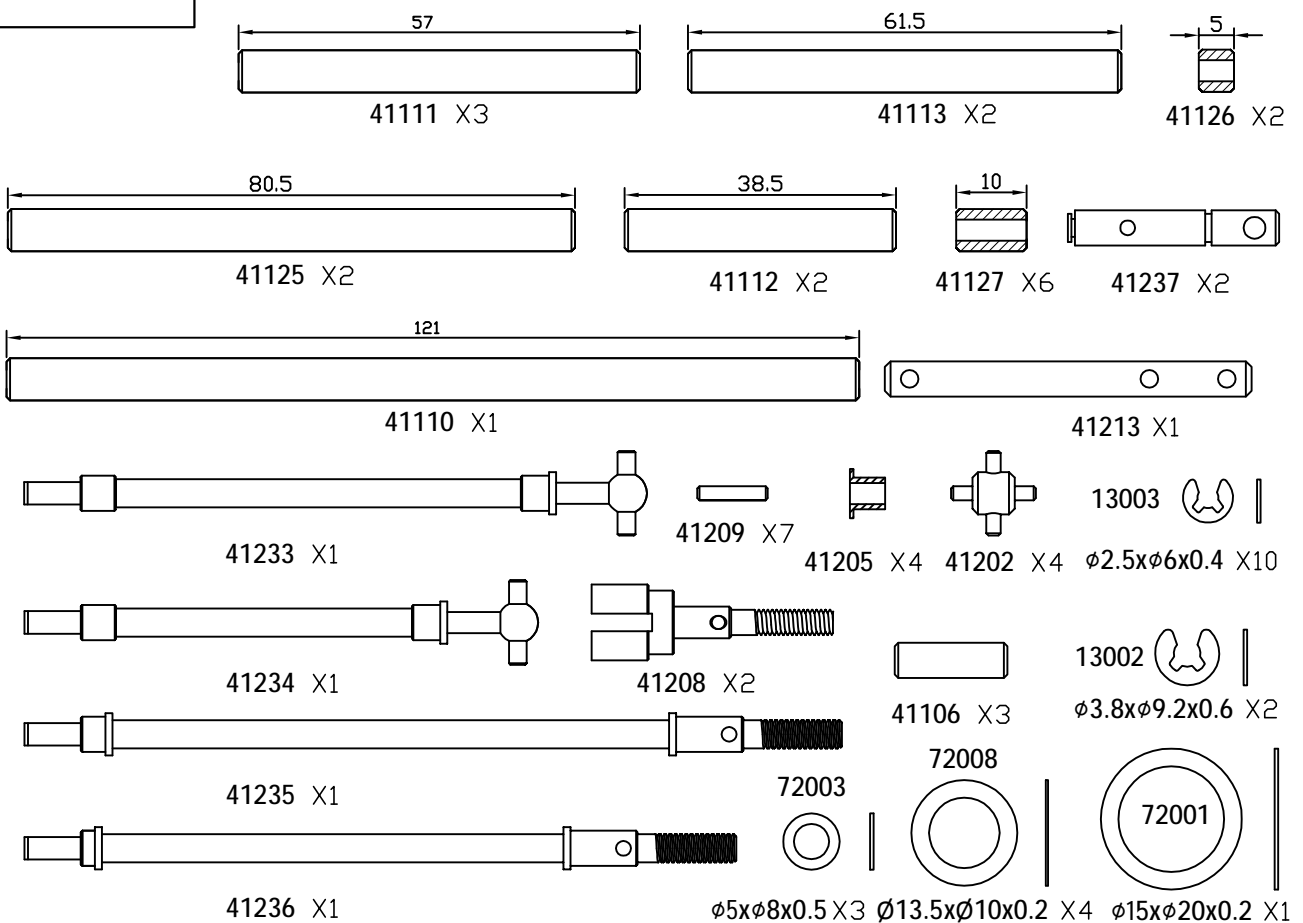


BAG(FE)




30202(12T) X2

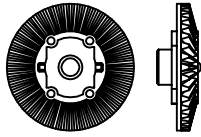

30201(36T) X2



30205 X2



41304(18T) X1

BAG(FG)




23403 X1




23404 X1



25902 X2




22606 X1



23028 X1


23029 X1

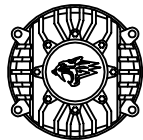


23037 X2




22607 X1



X2



X2



91004 X2


Ø10xØ5x2




42306 X1




20301 X3

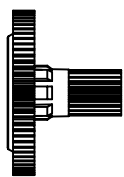


20302 X1

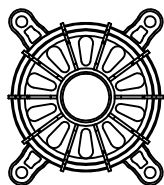


20306 X1

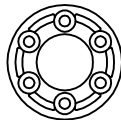

20401 X1

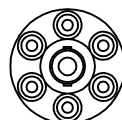

20402 X1

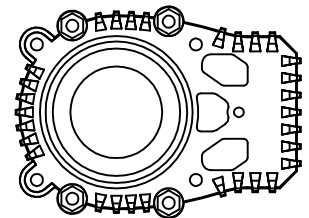


20405 X1




20403 X1




20404 X1

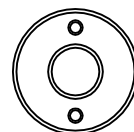


20407 X1

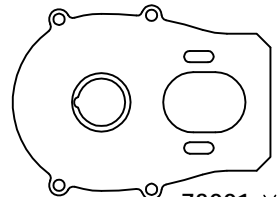


73001 X1

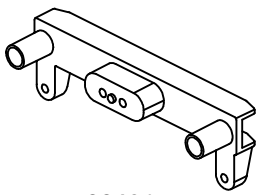


22401 X1

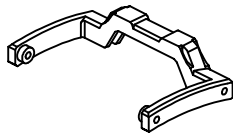


22402 X1

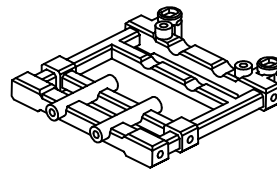


22403 X1

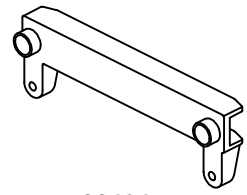


22404 X1

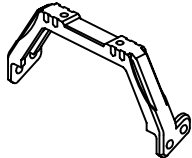


22405 X1

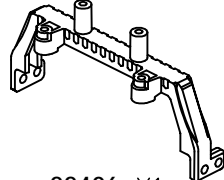


22406 X1

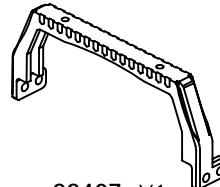


22407 X1

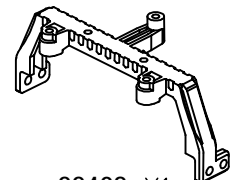


22408 X1

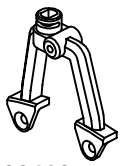


22409 X1

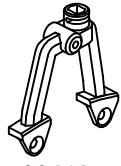


22410 X1

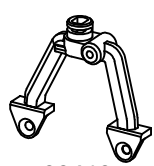


22412 X1

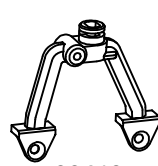


22413 X1

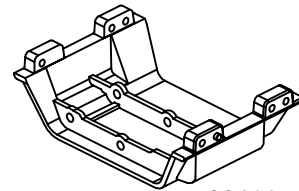


22411 X1

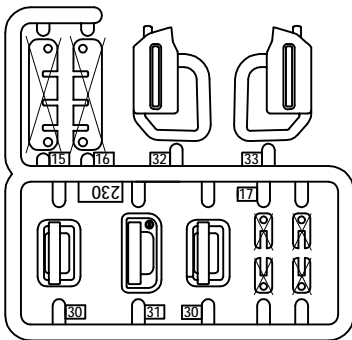


23030 X2  
23031 X1  
23032 X1  
23033 X1

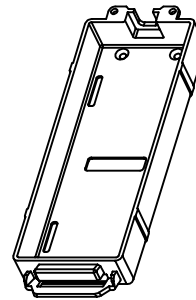

22901 X1



22902 X1



22903 X1




23101 X2



23102 X2



23103 X4



23104 X2



23105 X2



23106 X4



23107 X4



23108 X4



23109 X4




23110 X4




23111 X2




23112 X2

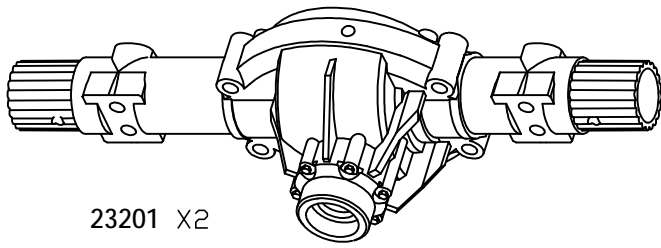

23201 X2

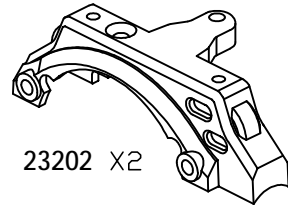


23202 X2

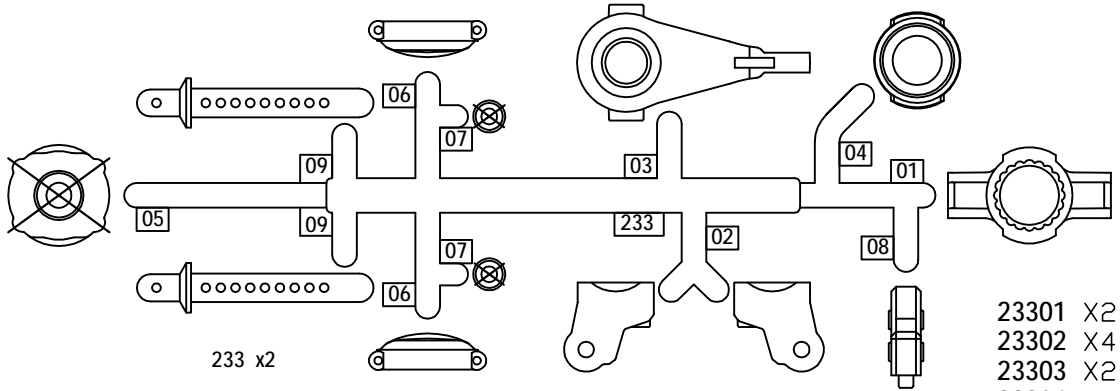


233 x2

- 23301 X2
- 23302 X4
- 23303 X2
- 23304 X2
- 23306 X4
- 23308 X2
- 23309 X4

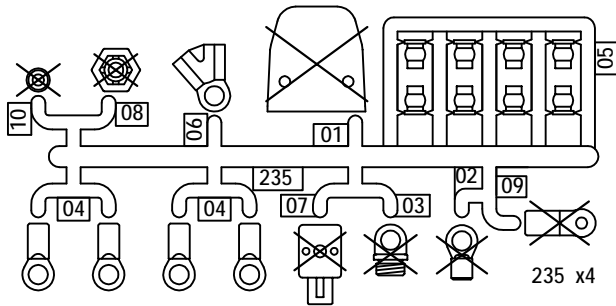



235 x4

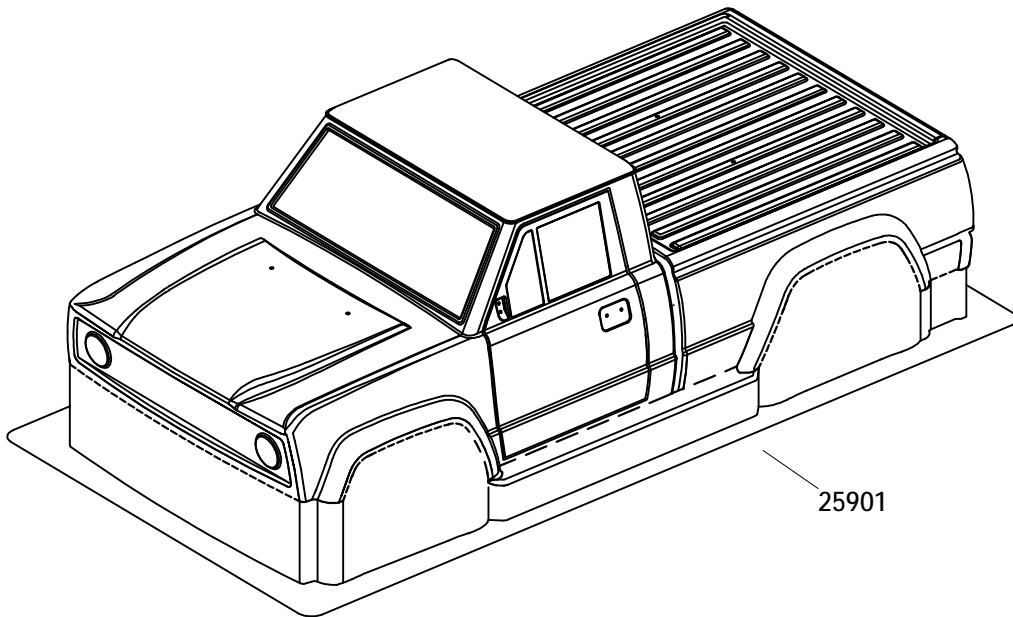
- 23504 X12
- 23505 X26
- 23506 X2



25901


FA11   
M2x10 X8


13003   
ø2.5xø6x0.4 X2

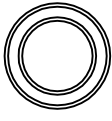
FB4   
ø10xø15x4 X4


  
72008 X4


**1**

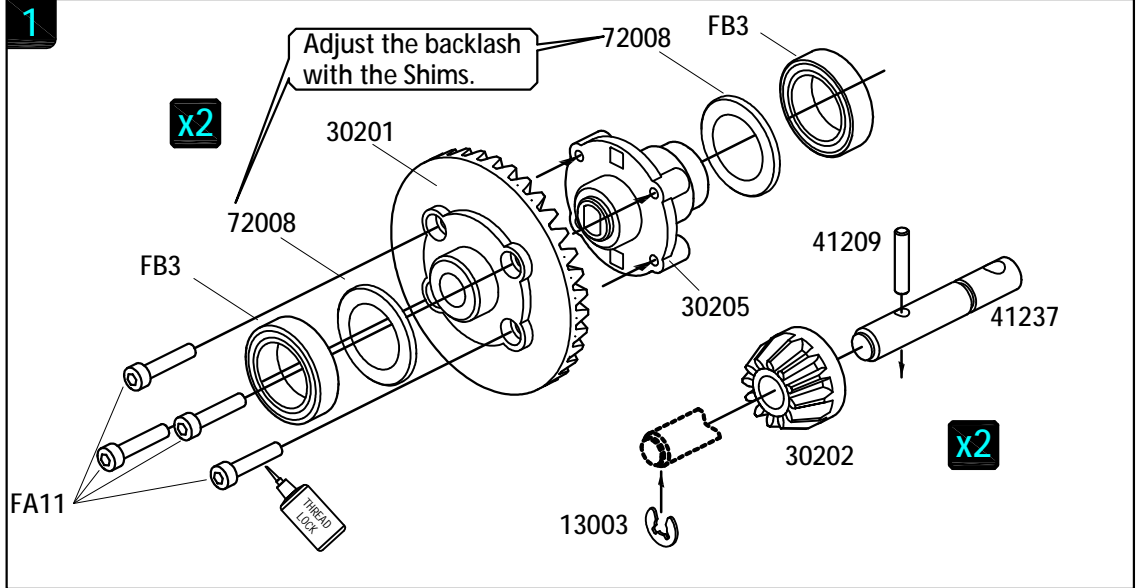



FA10   
M2x8 X8

FA11   
M2x10 X8


FB3   
ø5xø11x4 X4

FA5   
M3x4 X2

13002   
ø3.8xø9.2x0.6 X2

72003   
ø5xø8x0.5 X2

**2**

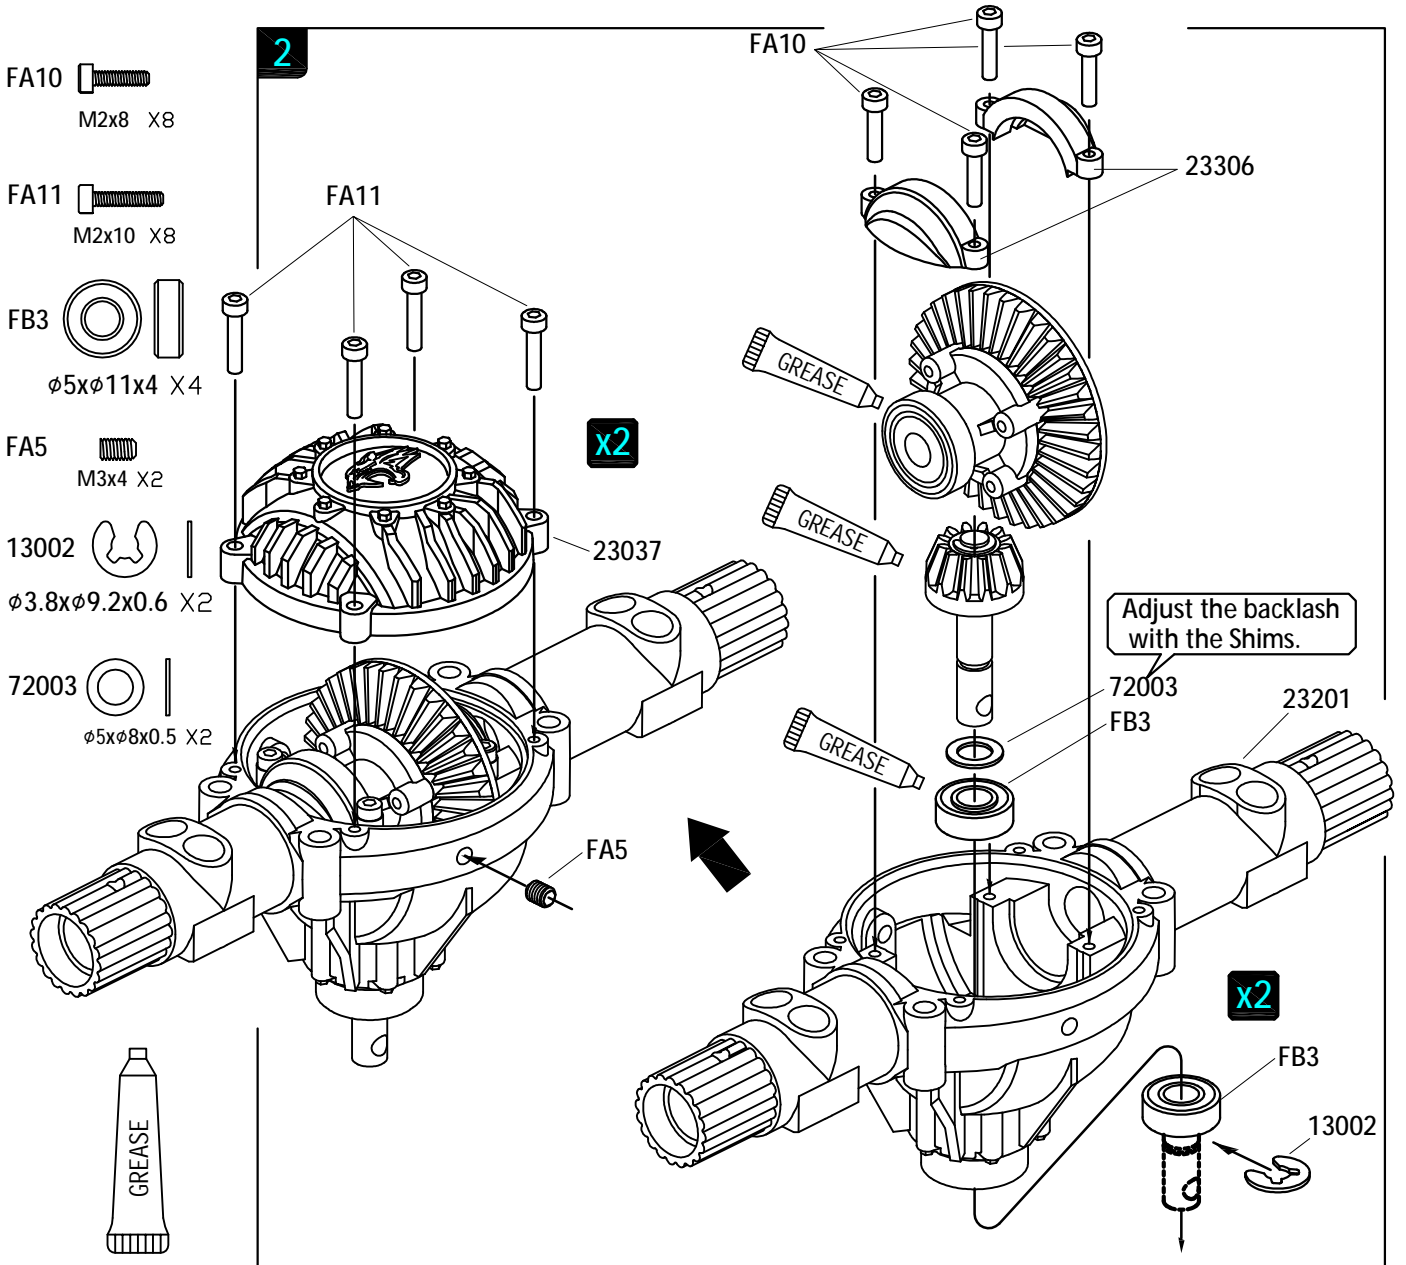





4

41235 X1

116


41236 X1

101


FB3  
φ5xφ11x4 X2



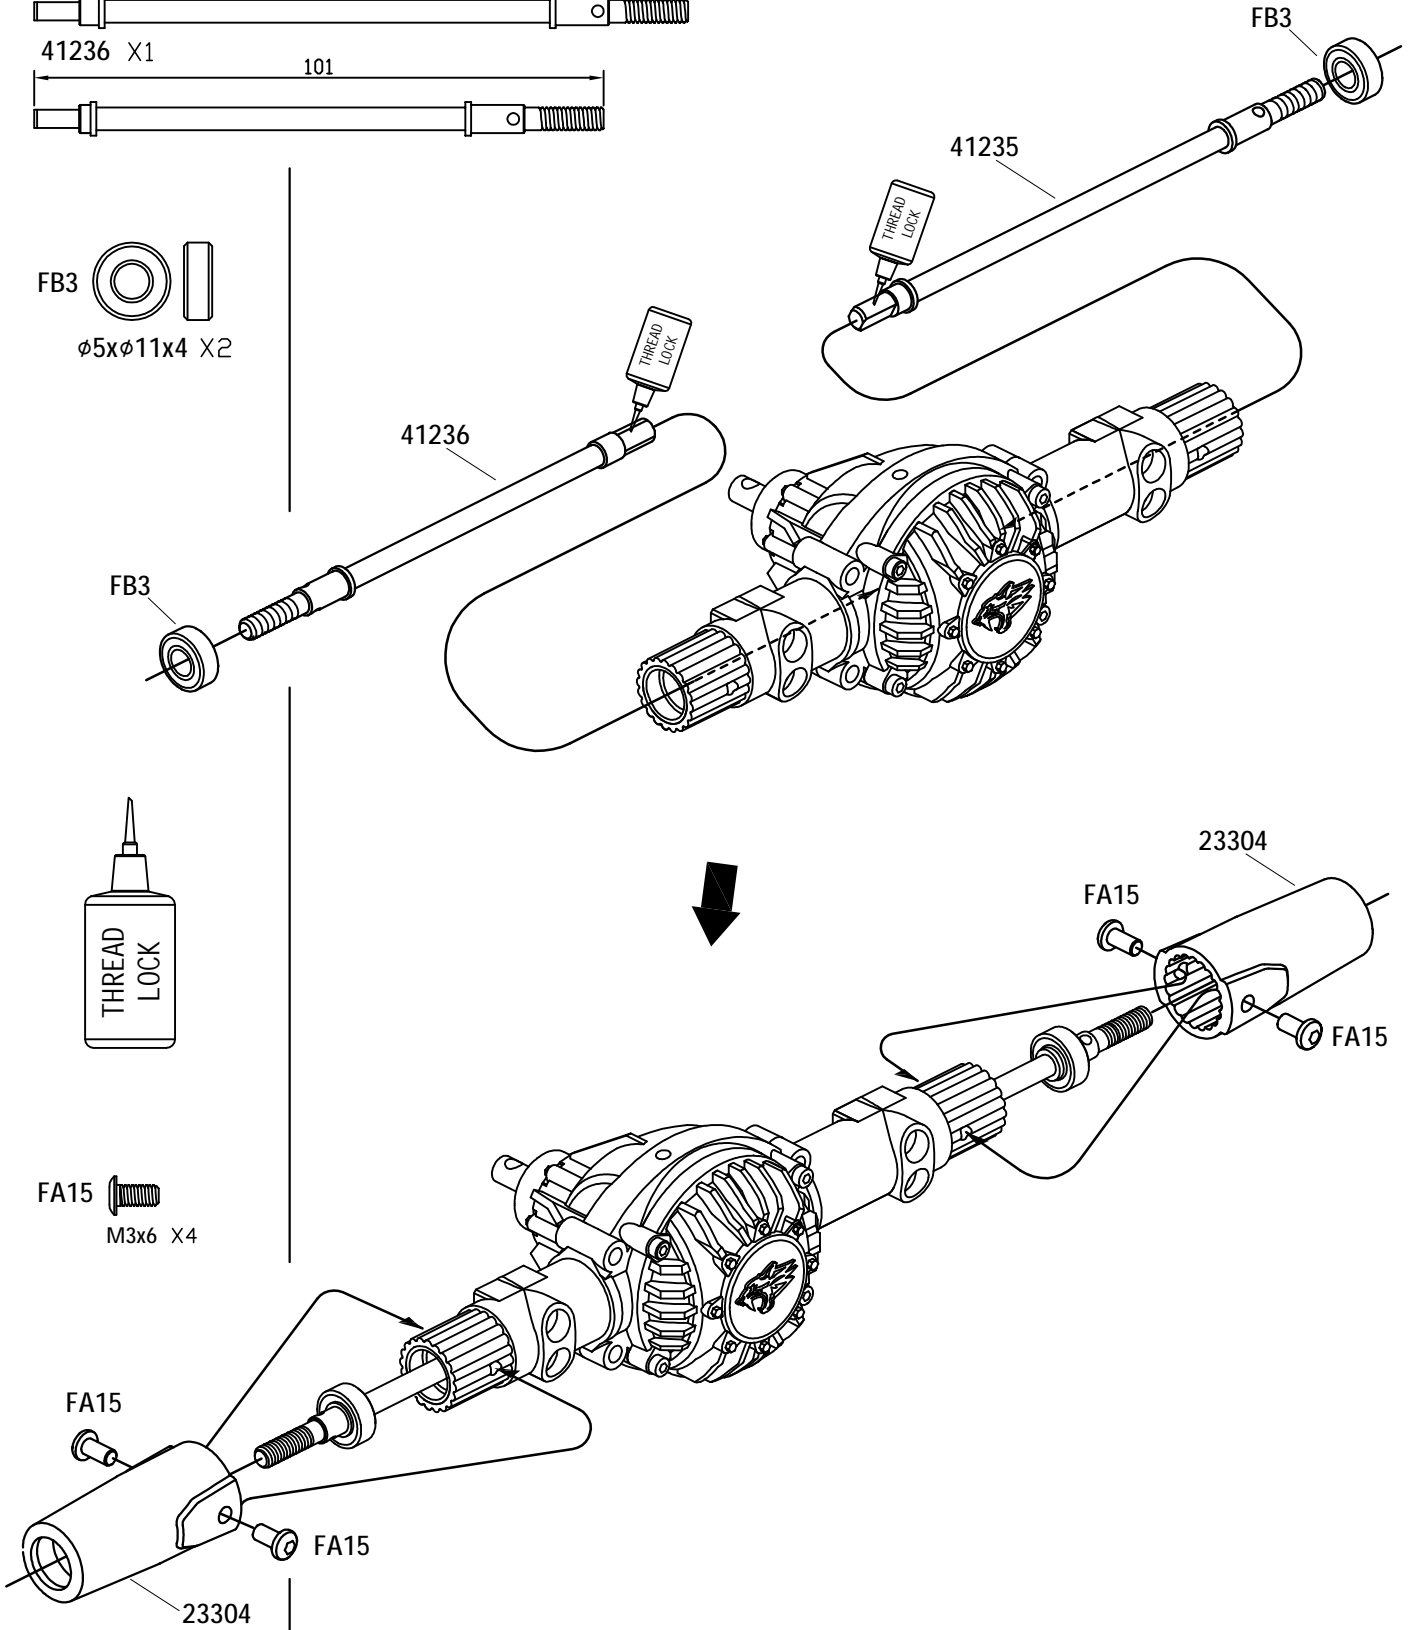

FA15  
M3x6 X4





5


FA1   
M3 X6

FA14   
M3x10 X1

FA23   
M3x22 X2


FA26   
M3x18 X2


FA29   
M3x25 X2

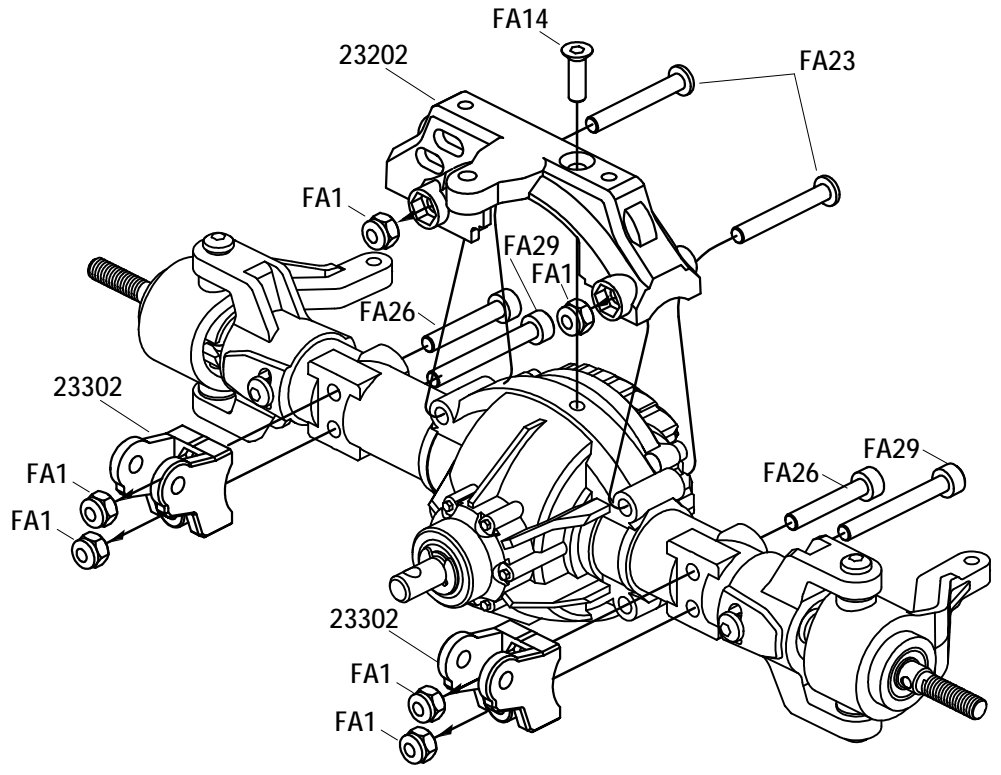



6


FA1   
M3 X6


FA14   
M3x10 X1



FA23   
M3x22 X2

FA26   
M3x18 X2


FA29   
M3x25 X2

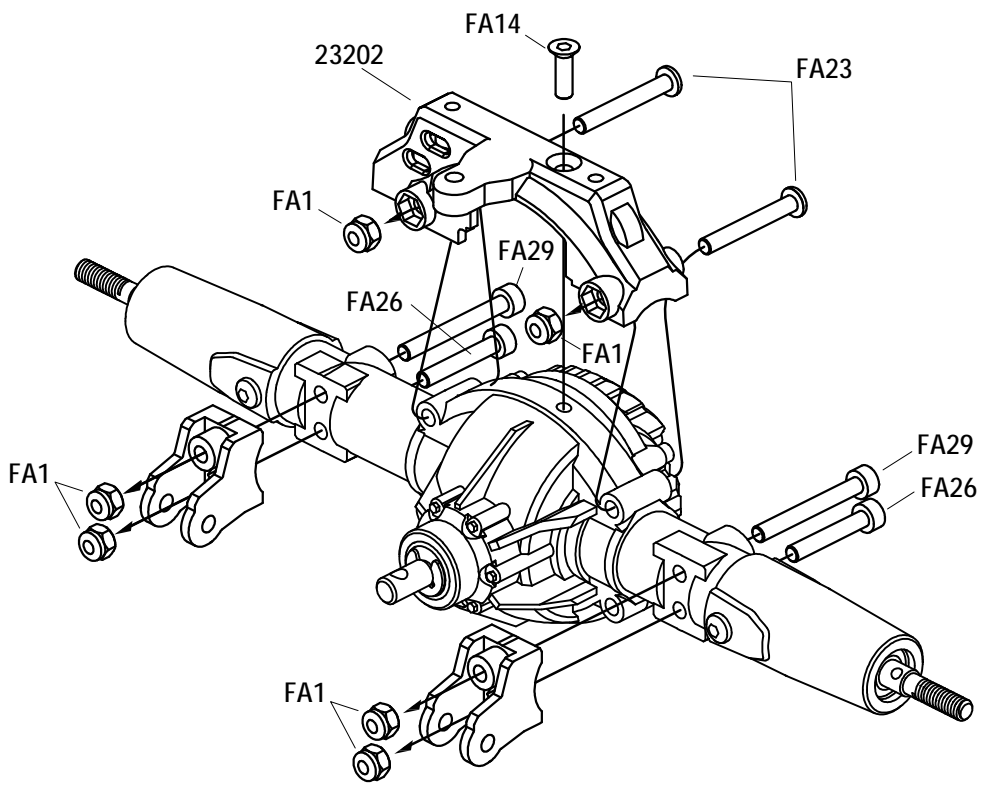

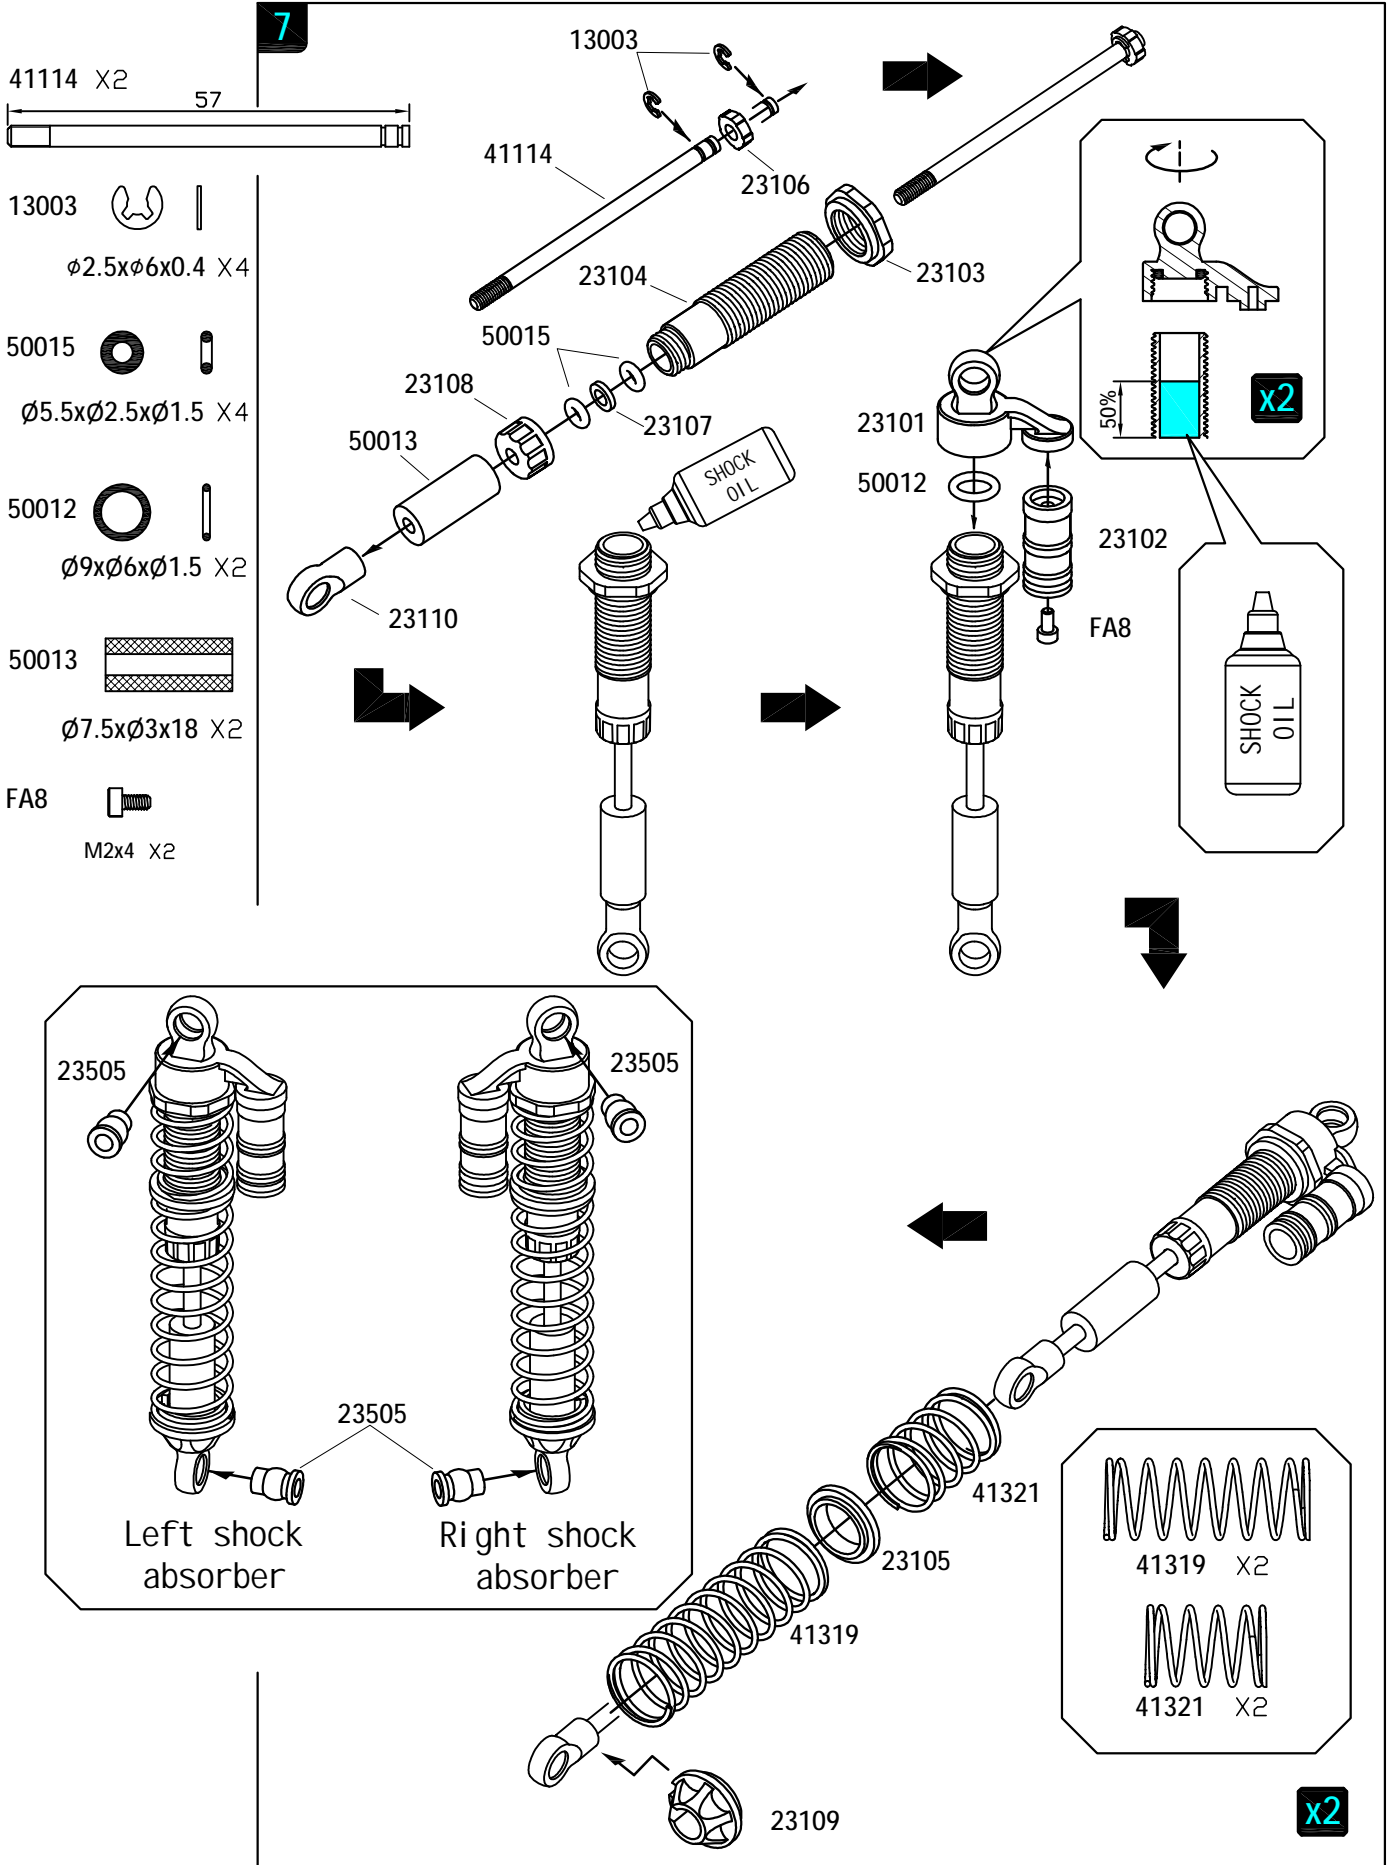


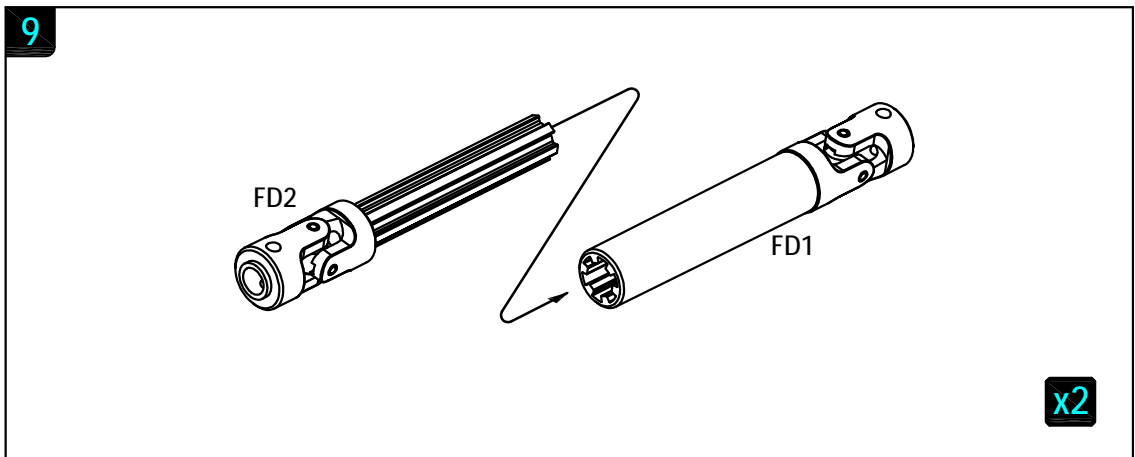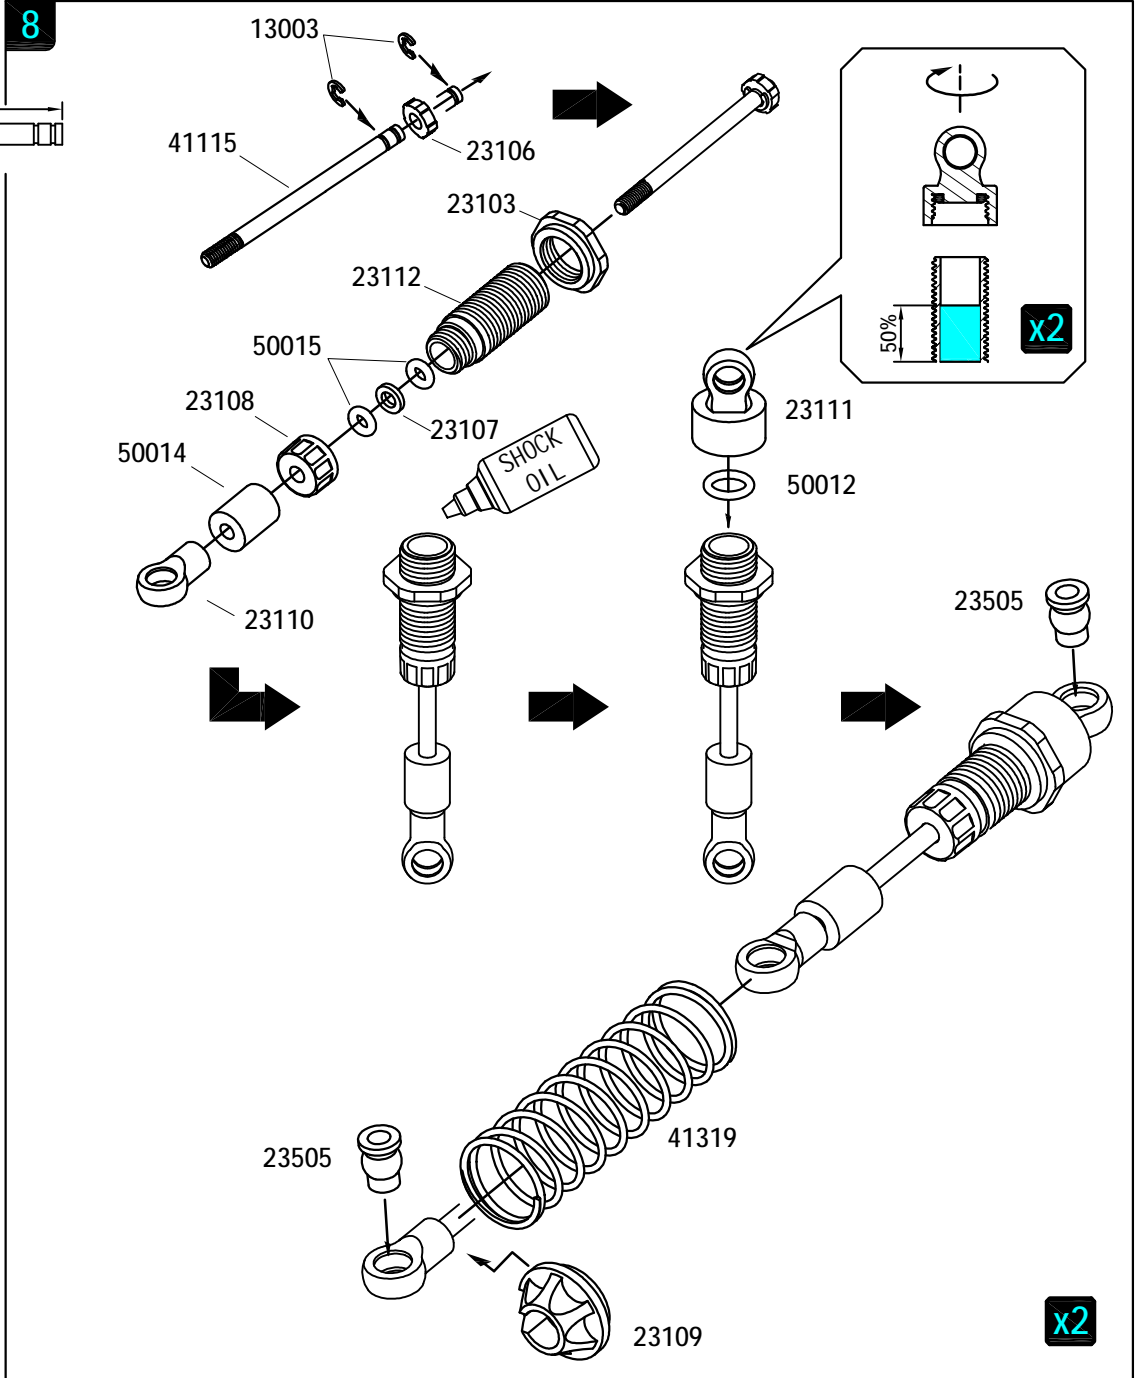


10

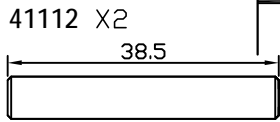

FA7  
M3x16 X4

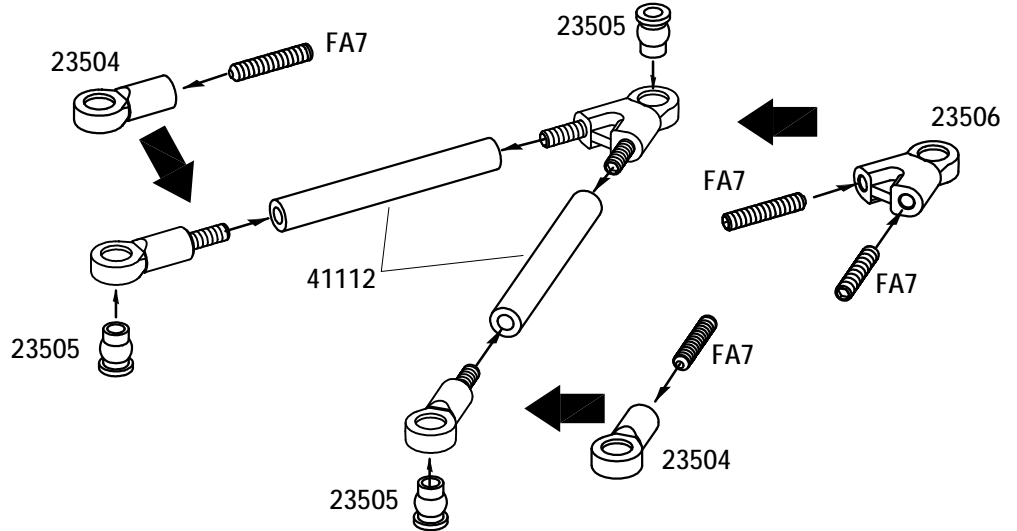


11



FA7  
M3x16 X4




FA24  
M3x25 X2

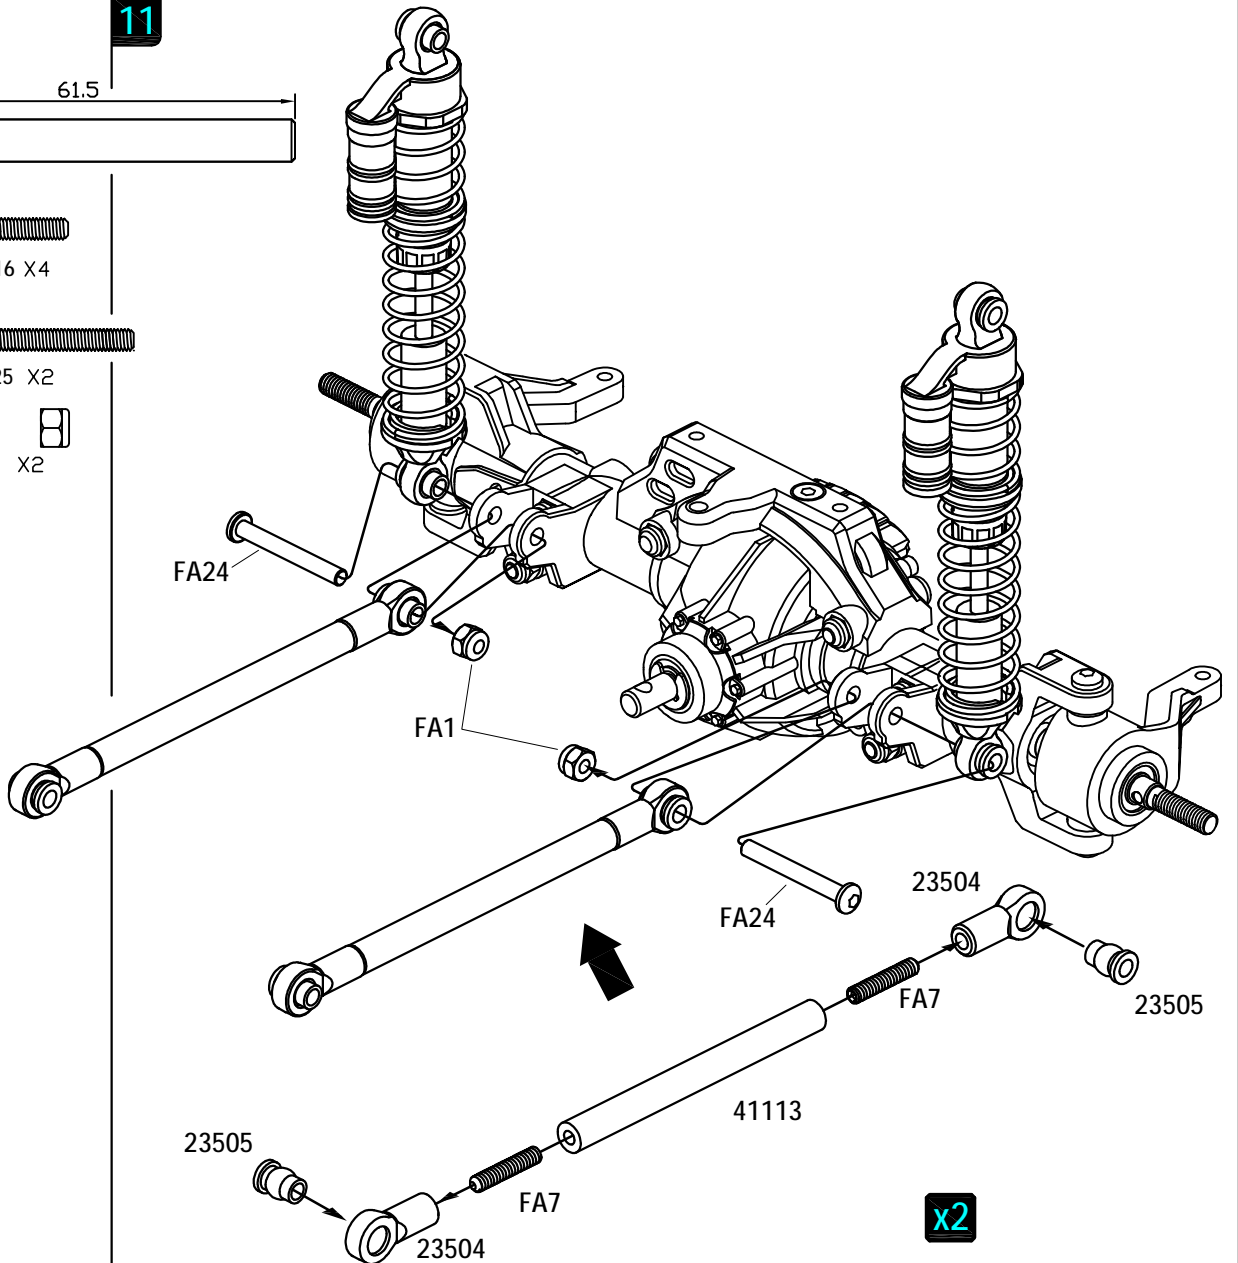
FA1  
M3 X2






x2


12

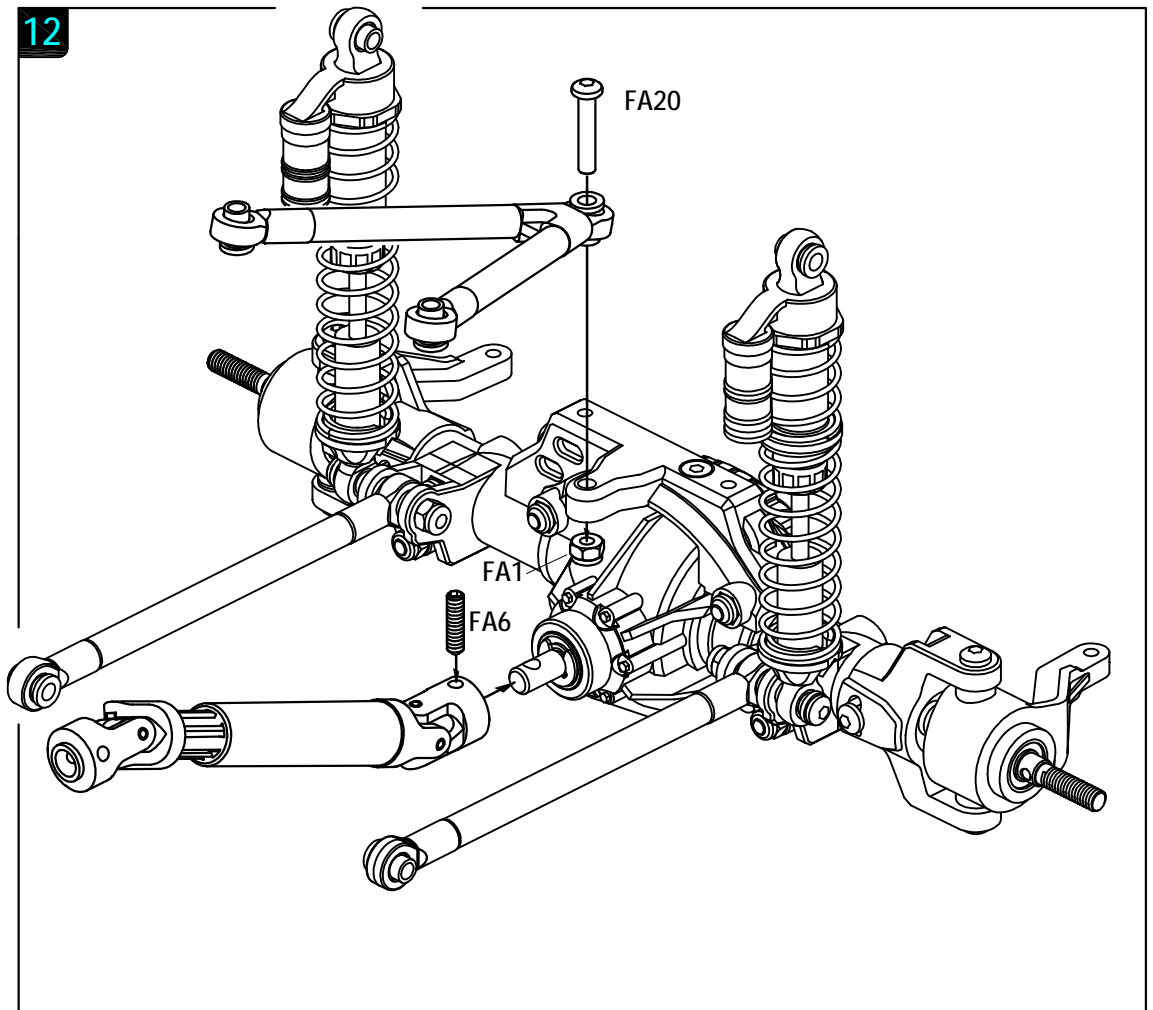- FA1  M3 X1
- FA6  M3x12 X1
- FA20  M3x16 X1





13

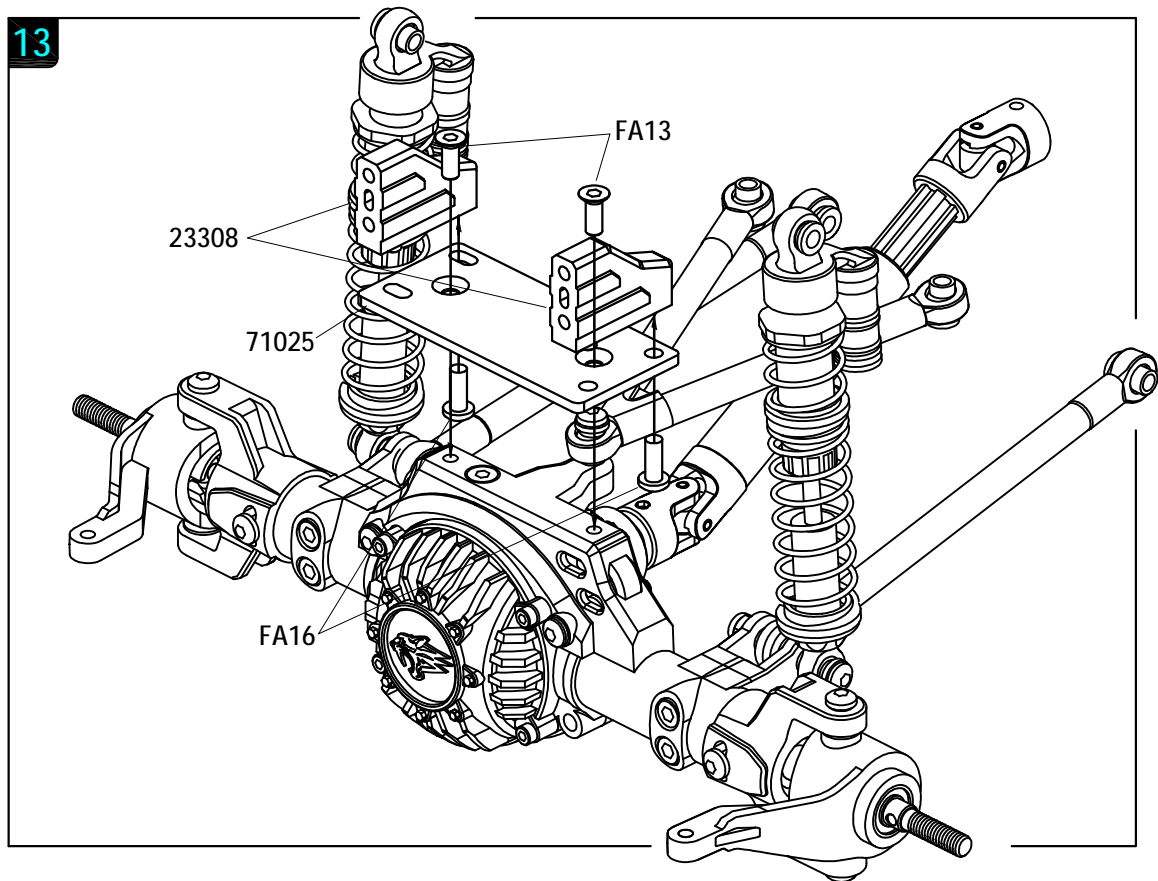
- FA13  M3x8 X2
- FA16  M3x8 X2
- 71025  X1




14




FA17   
M3x10 X4

14102   
φ3xφ7x0.5 X4

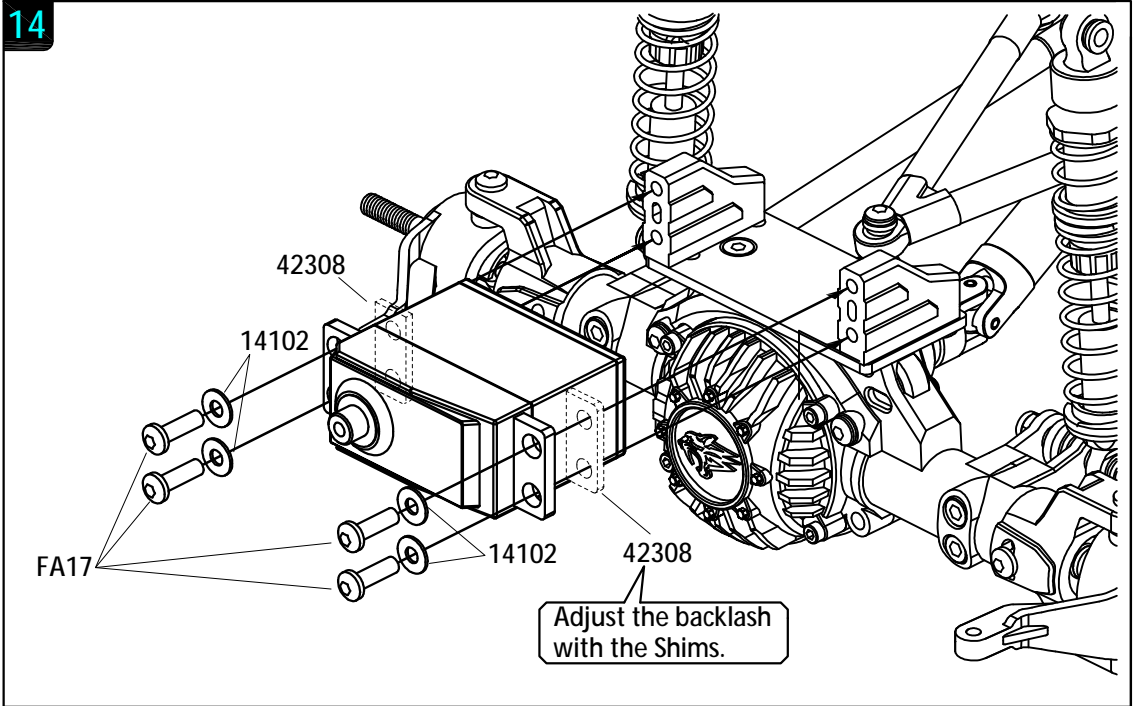


15


FA7   
M3x16 X4

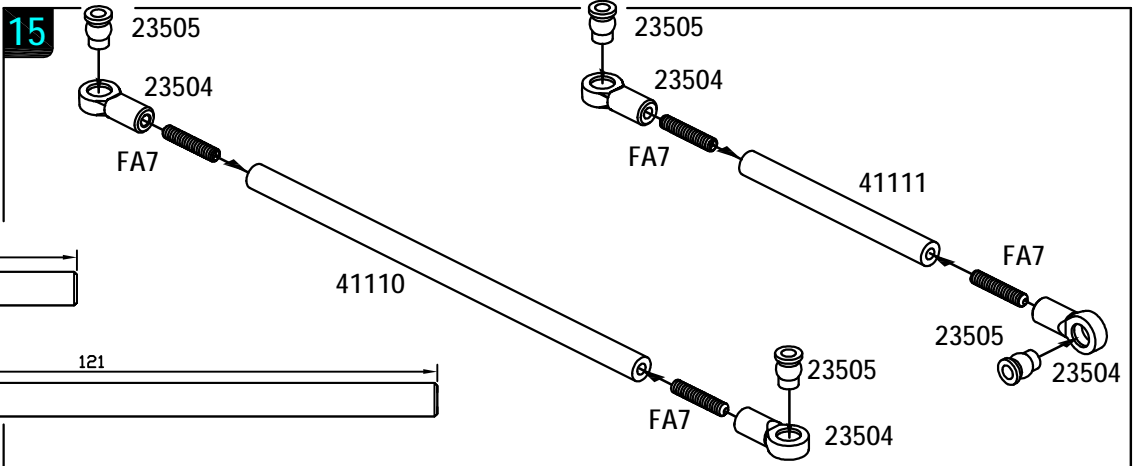


16


FA15   
M3x6 X1

FA18   
M3x12 X1

FA20   
M3x16 X1

FA23   
M3x22 X1


FA1   
M3 X1

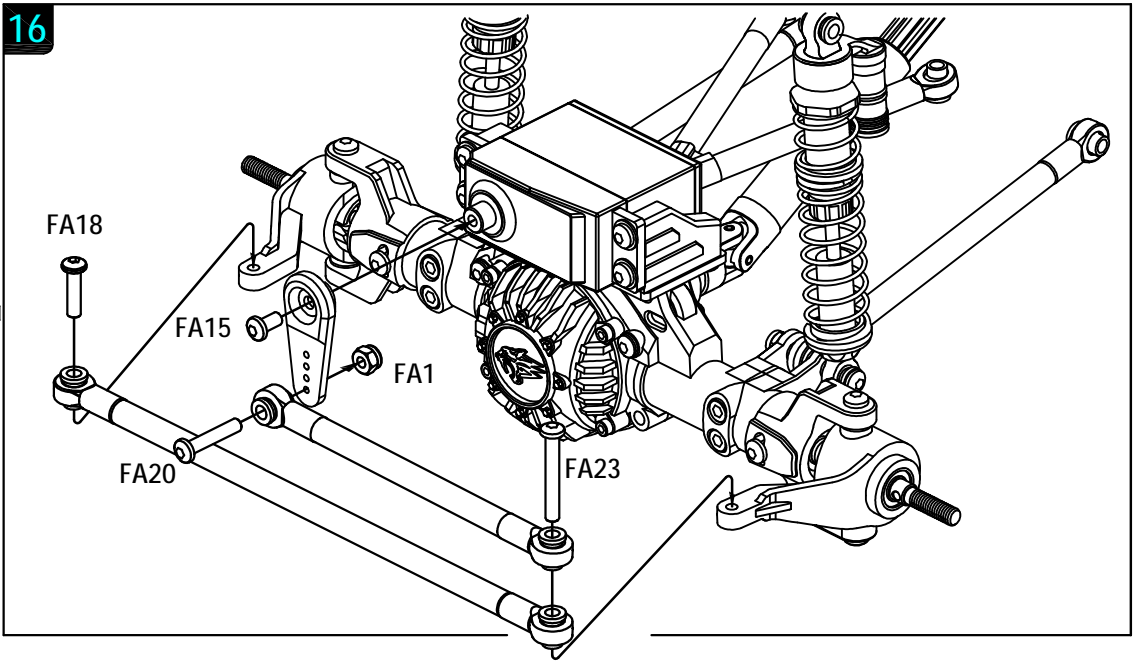




17

FA7  
M3x16 X4

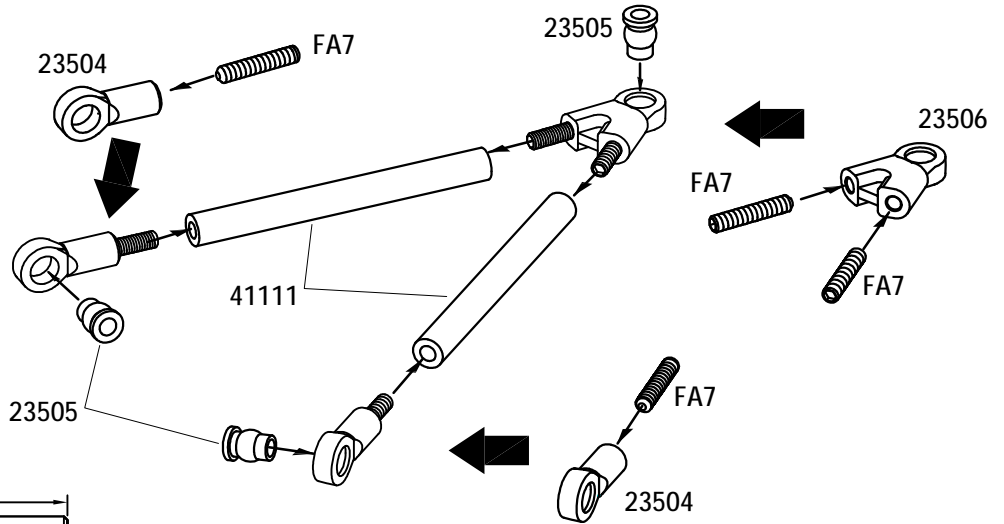

18




FA6  
M3x12 X1

FA7  
M3x16 X4







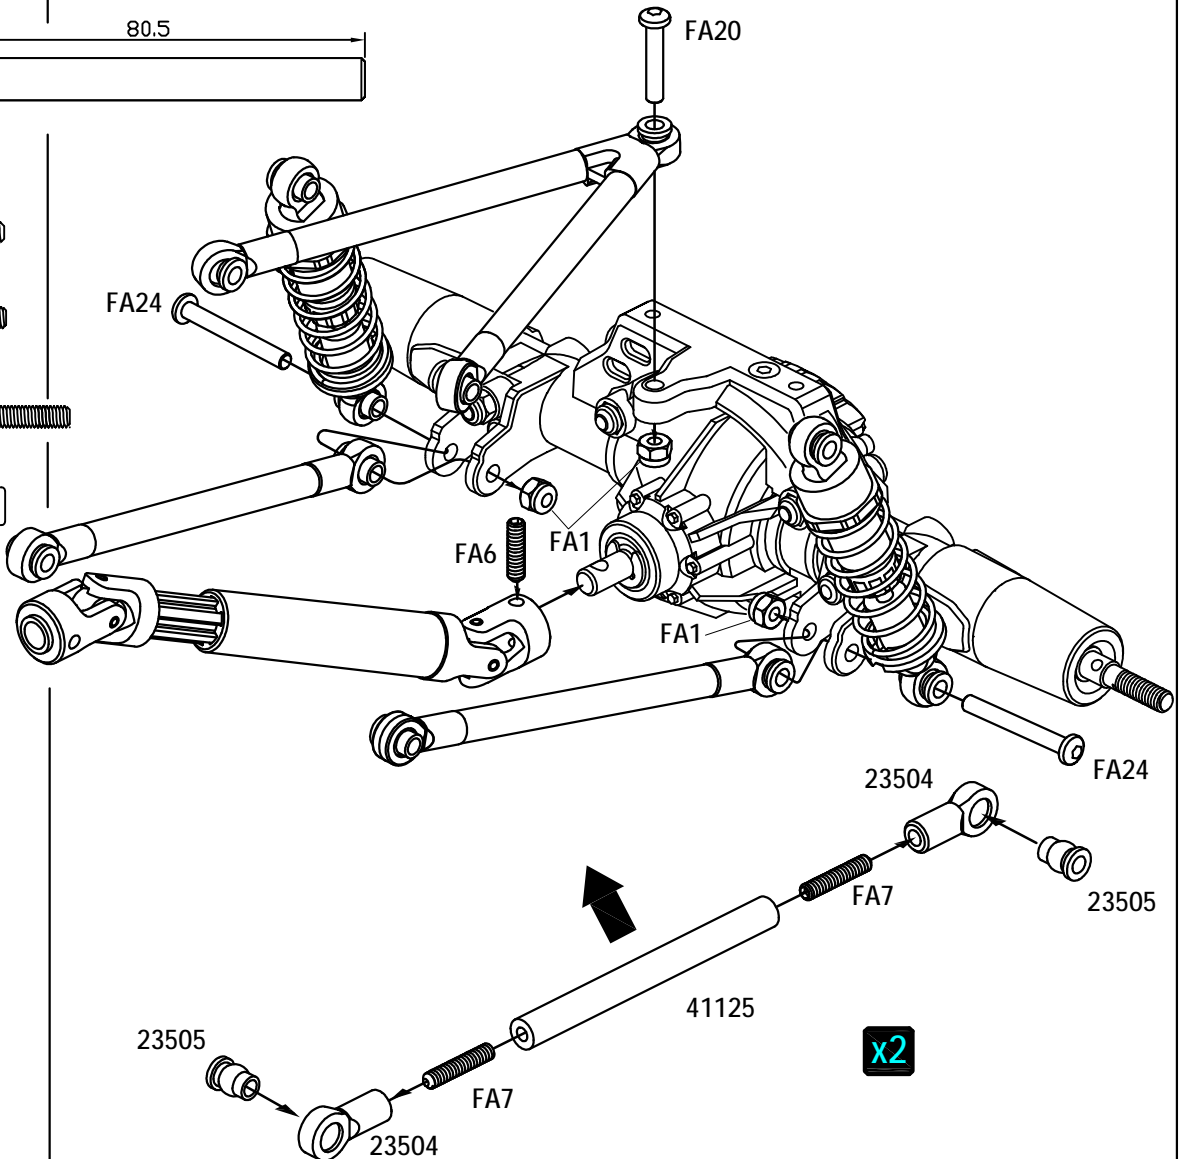

FA20  
M3x16 X1


FA24  
M3x25 X2

FA1  
M3 X3






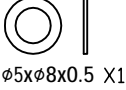


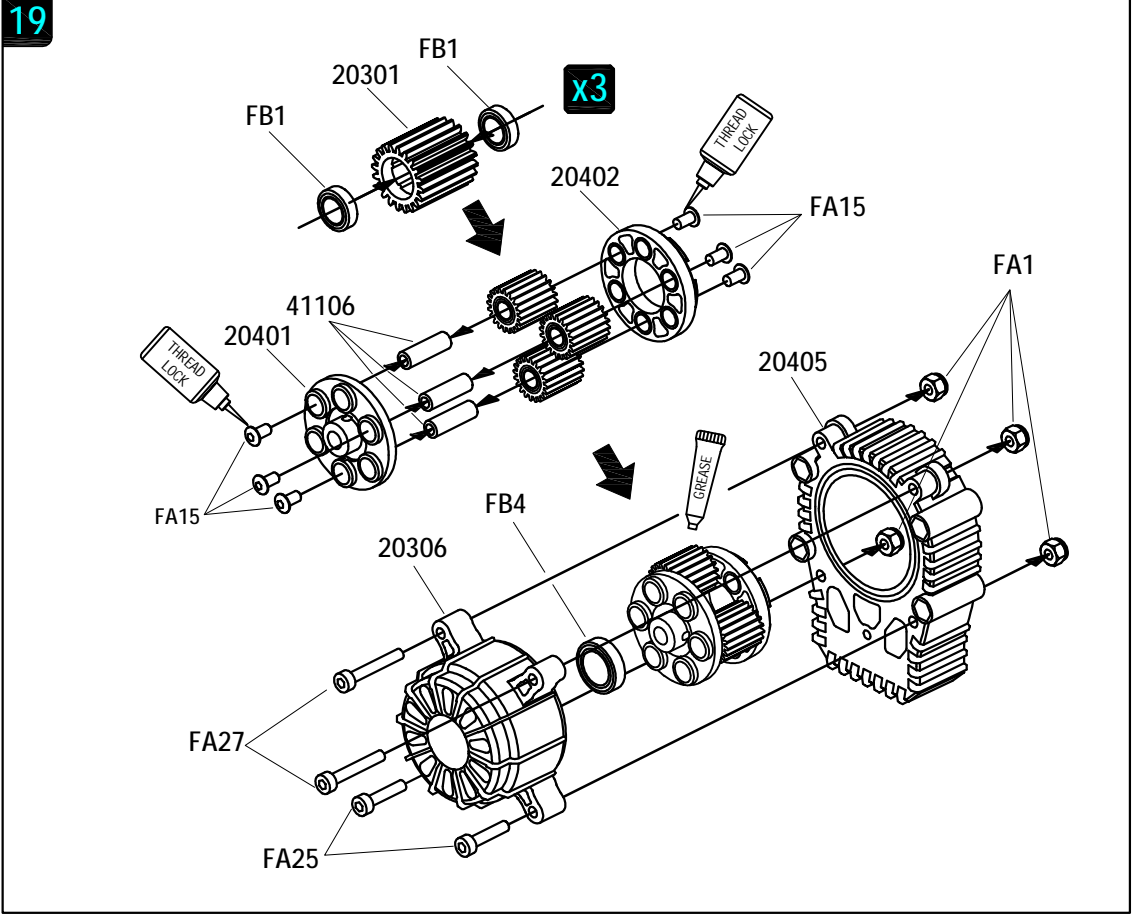


19

- FA1  M3 X4
- FA15  M3x6 X6
- FA25  M3x14 X2
- FA27  M3x20 X2
- FB1   $\phi 5 \times \phi 8 \times 2.5 \times 6$
- FB4   $\phi 10 \times \phi 15 \times 4 \times 1$
-  THREAD LOCK
-  GREASE





20

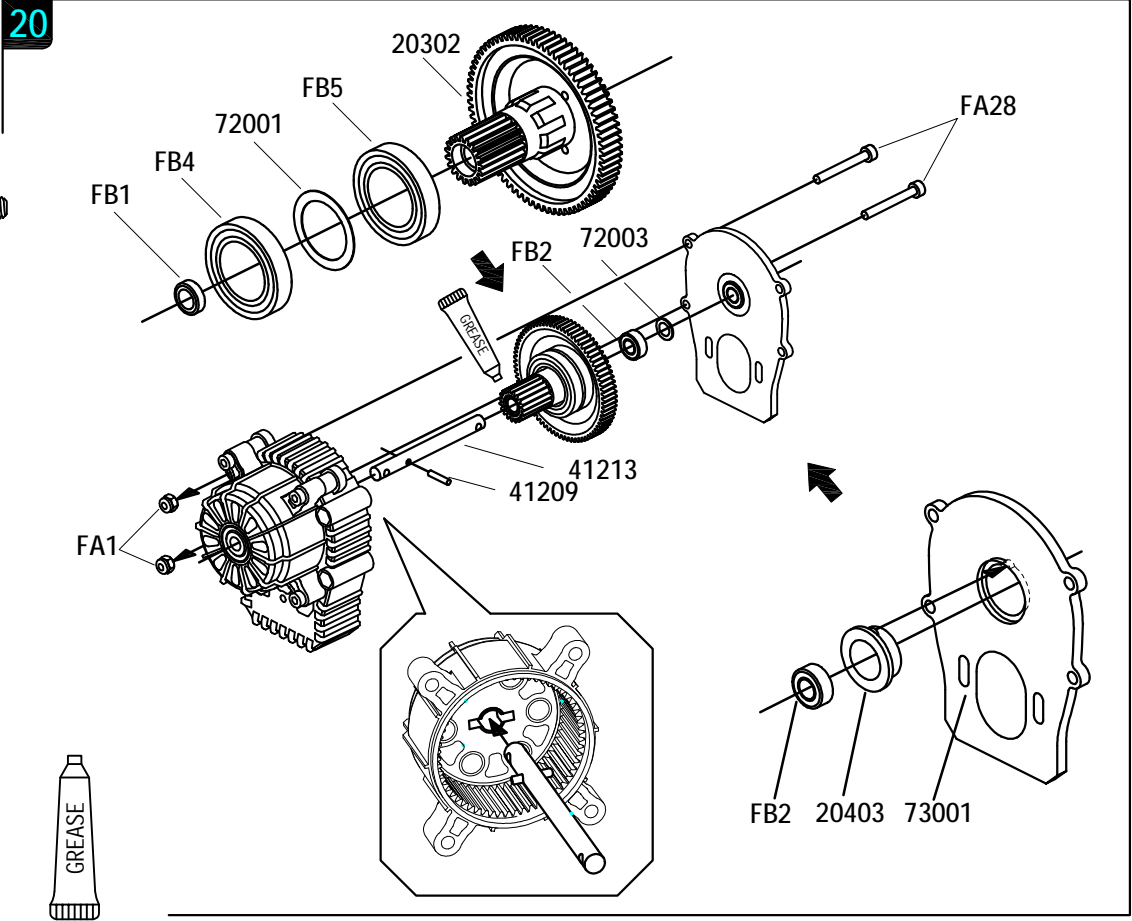
- FA1  M3 X2
- FA28  M3x22 X2
- FB1   $\phi 5 \times \phi 8 \times 2.5 \times 1$
- FB2   $\phi 5 \times \phi 10 \times 4 \times 2$
- FB5   $\phi 15 \times \phi 24 \times 5 \times 2$
- 72003   $\phi 5 \times \phi 8 \times 0.5 \times 1$
- 72001   $\phi 15 \times \phi 20 \times 0.2 \times 1$
-  GREASE




21


FA5  M3x4 X1


FA25  M3x14 X2

14102   $\phi 3 \times \phi 7 \times 0.5$  X2


FA13  M3x8 X1

FA1  M3 X2

FA30  M3x30 X2

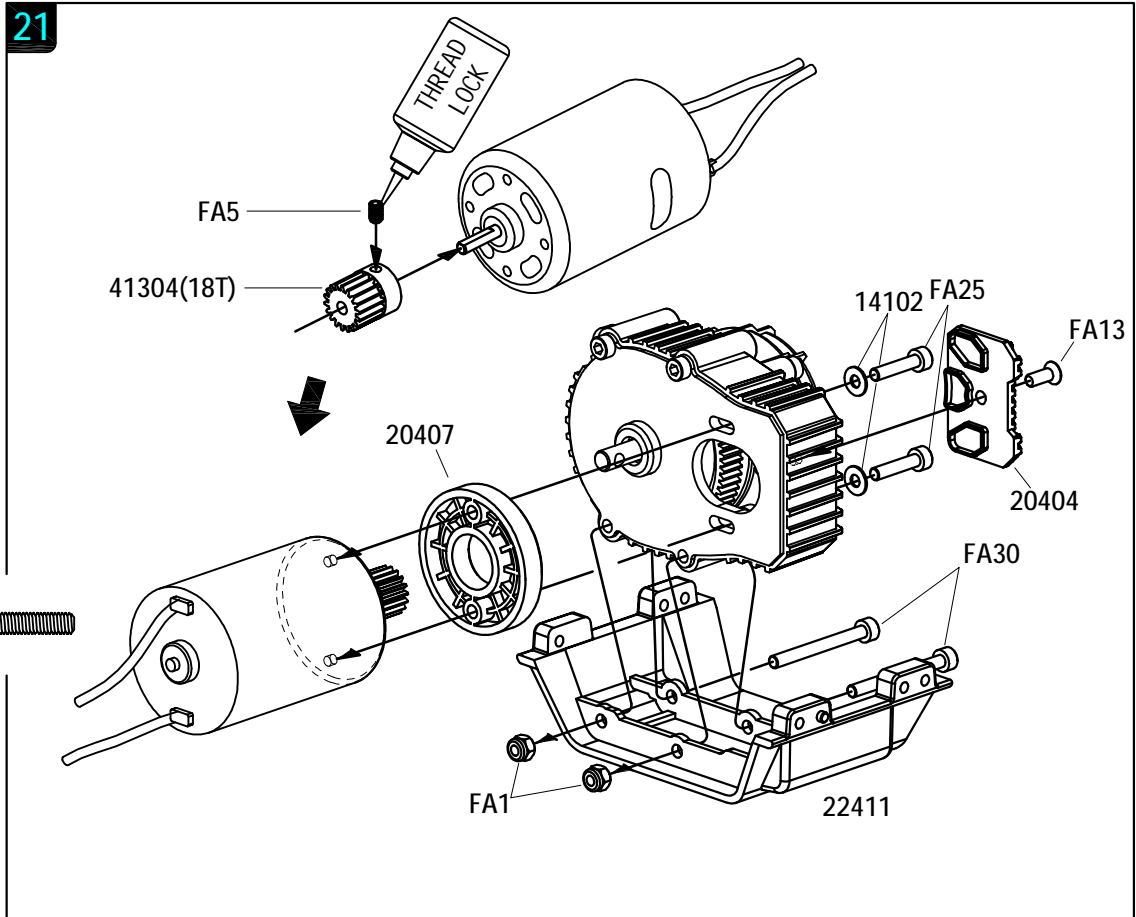




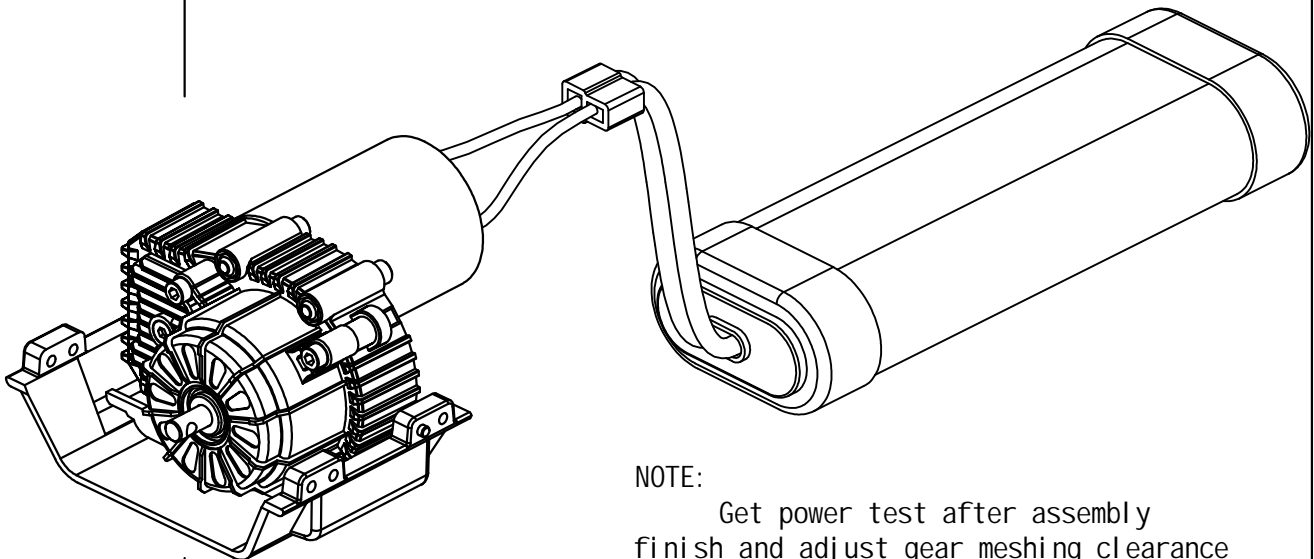




22






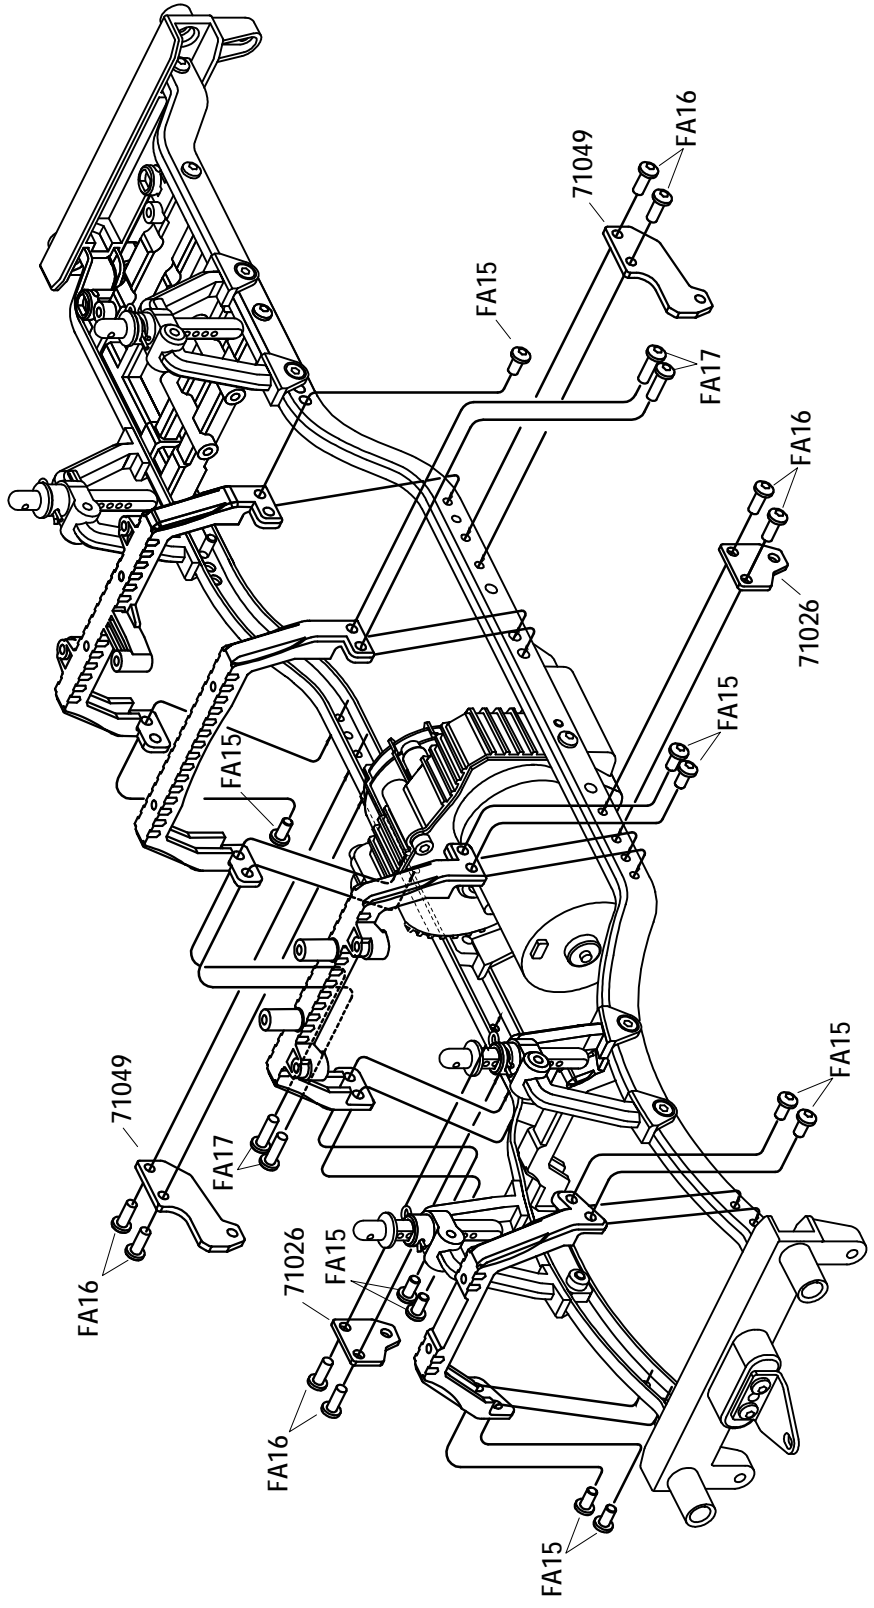
NOTE:

Get power test after assembly finish and adjust gear meshing clearance for make sure gear box running smooth without noise, then process to following assembly go on.

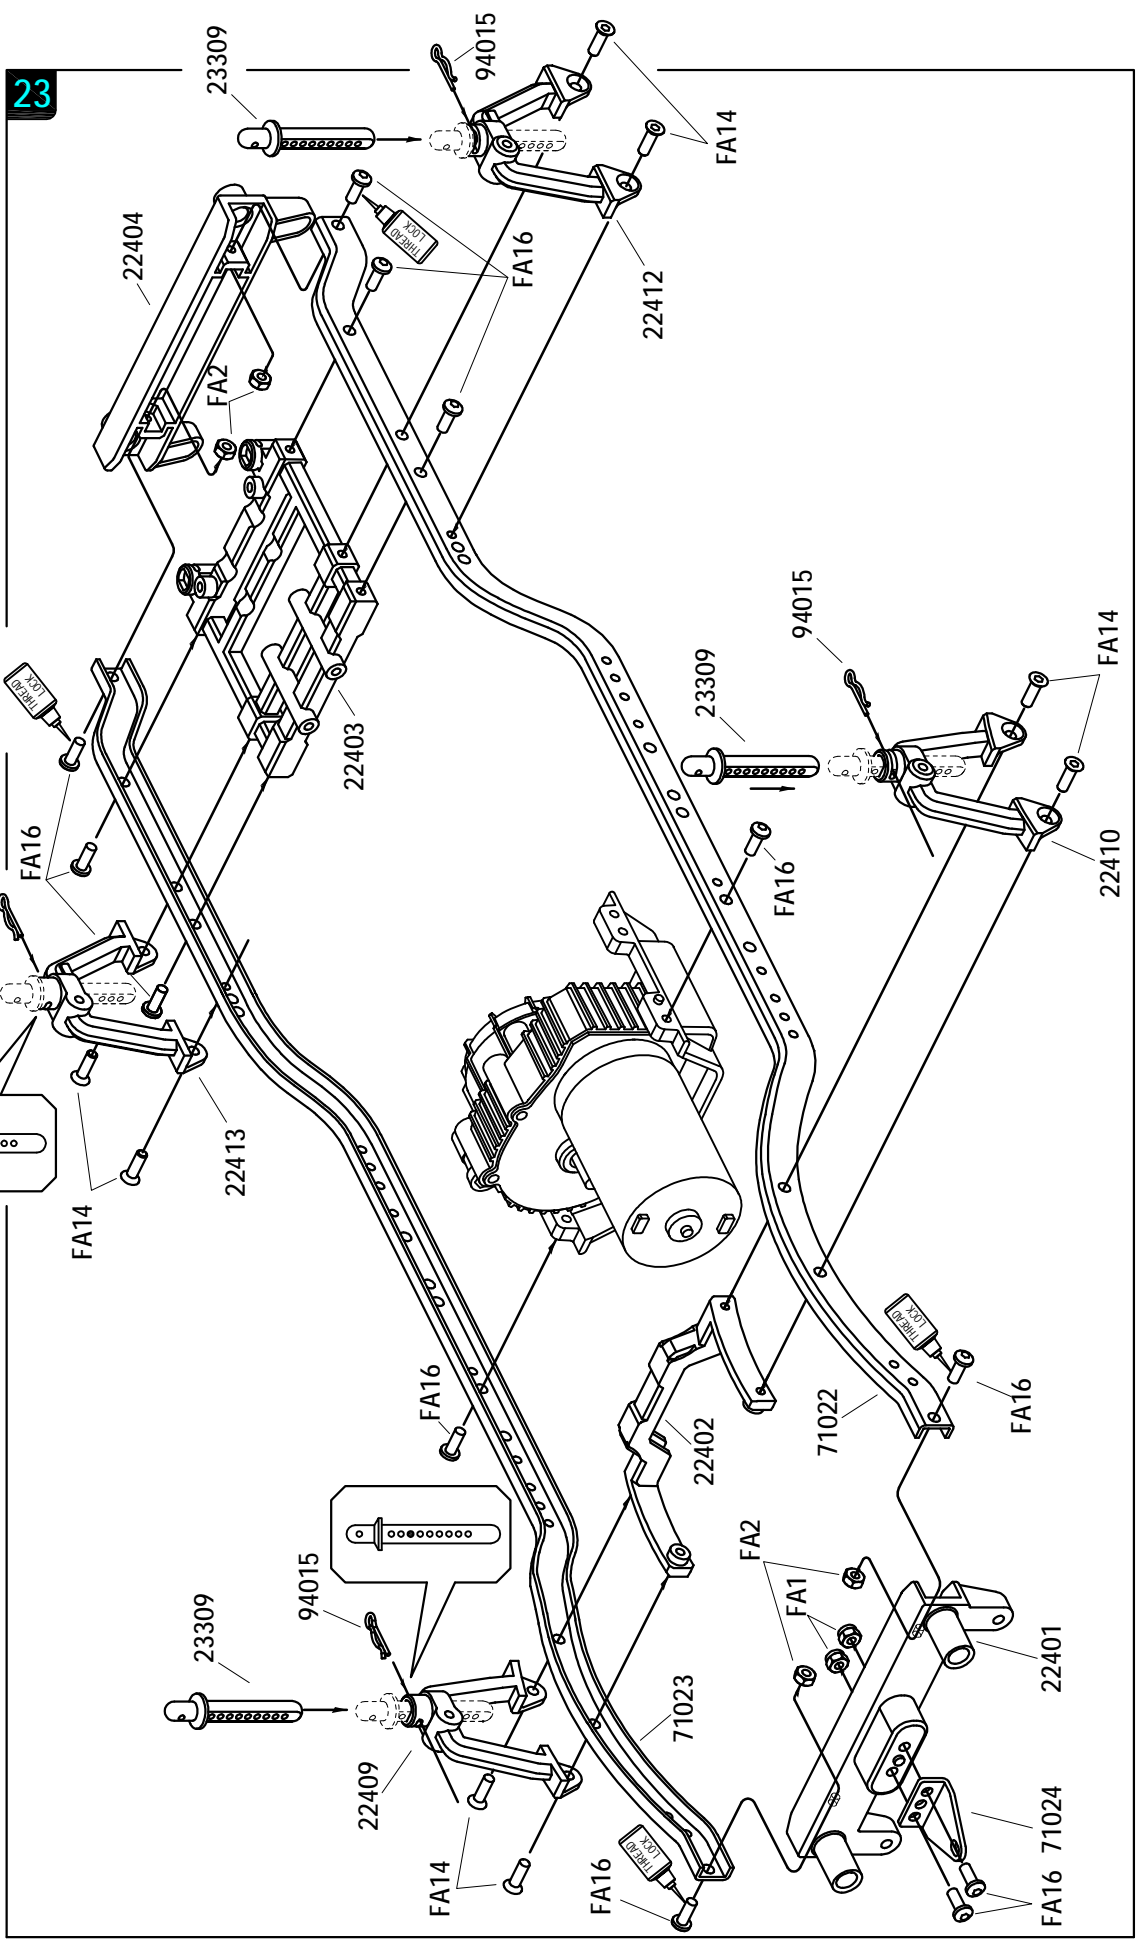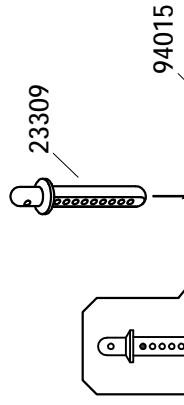- FA16  M3x8 X12
- FA1   M3 X2
- FA2  M3 X4
- FA14  M3x10 X8




- FA15  M3x6 X10
- FA16  M3x8 X8
- FA17  M3x10 X4




25

FA16  
M3x8 X2

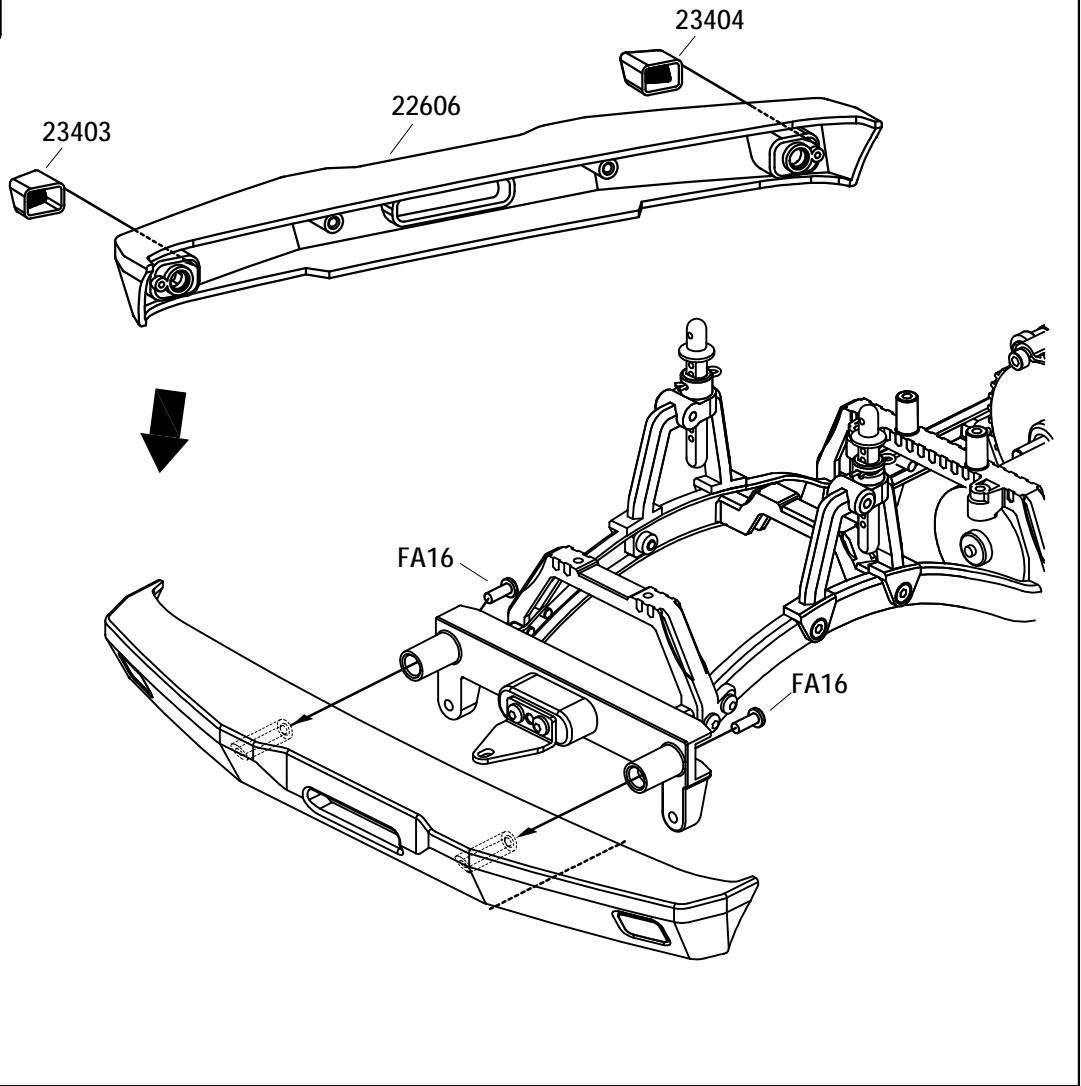

26

FA16  
M3x8 X2

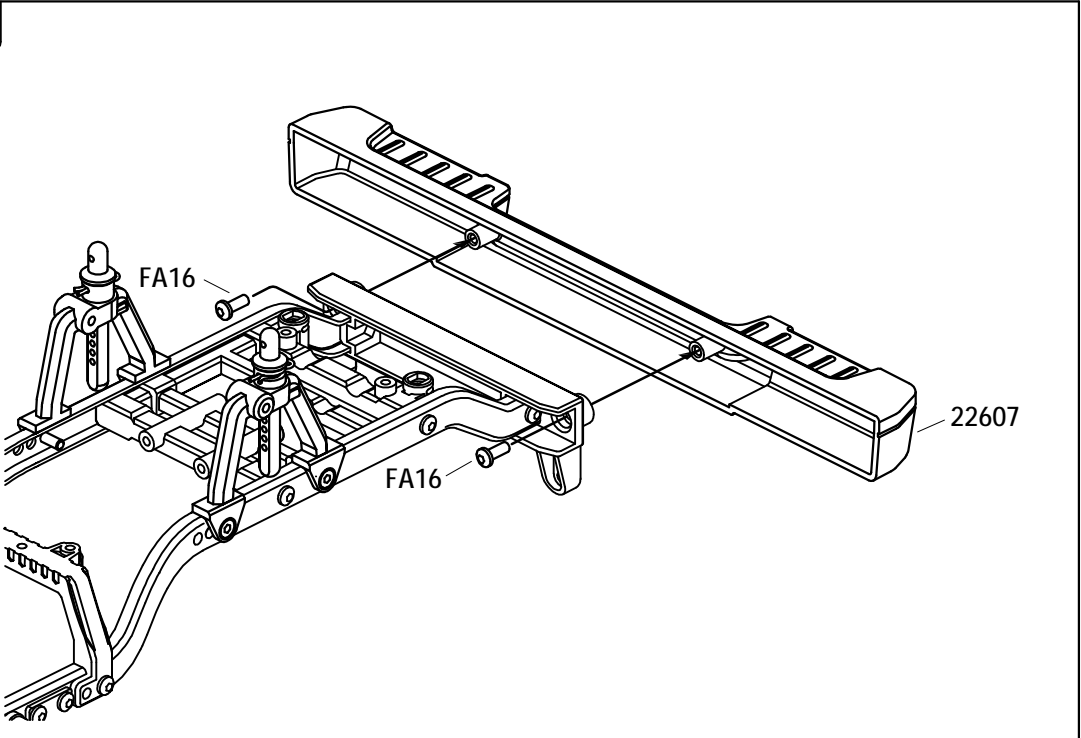

27

FA19 M3x14 X2


FA24 M3x25 X4

FA6 M3x12 X1

FA1 M3 X2

41126 X2  
5

41127 X2  
10

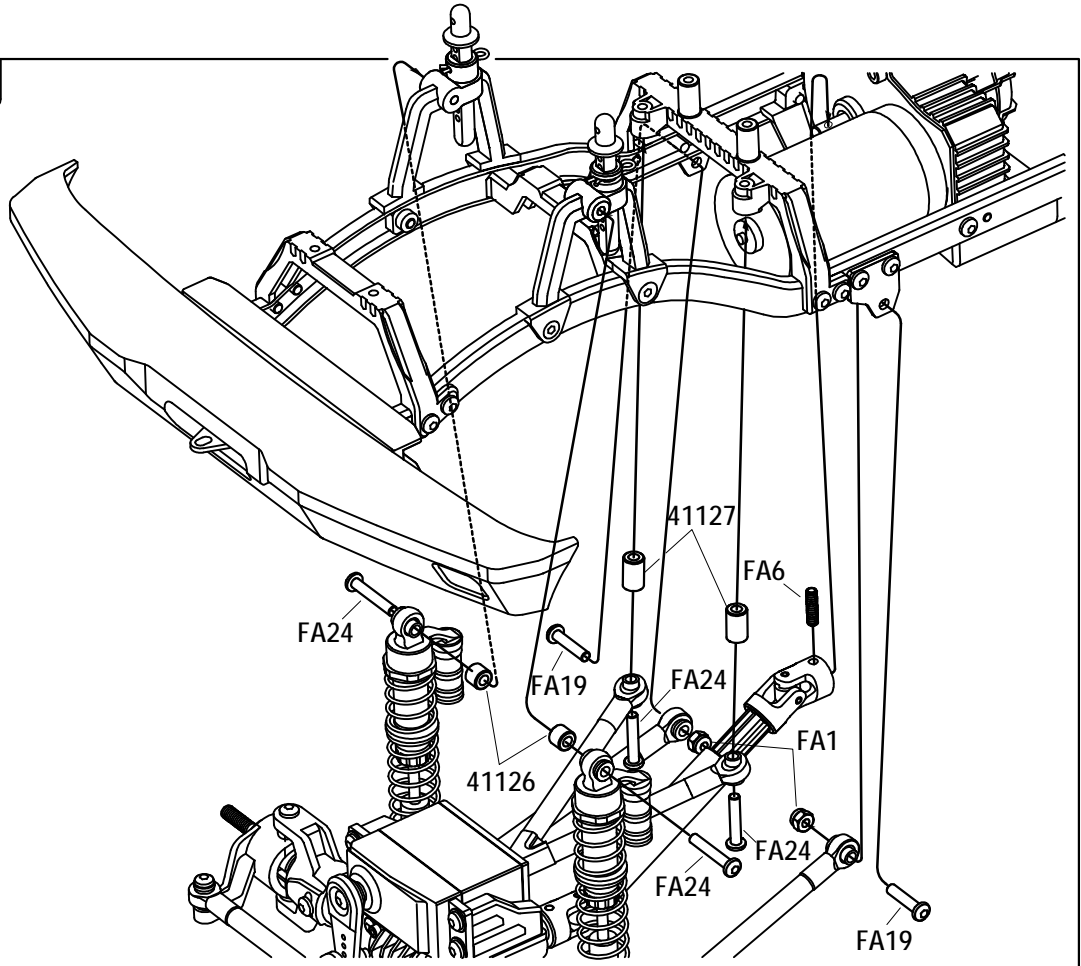

28

41127 X4  
10


FA19 M3x14 X2

FA6 M3x12 X1

FA1 M3 X6

FA24 M3x25 X4

42306 Ø10xØ5x2

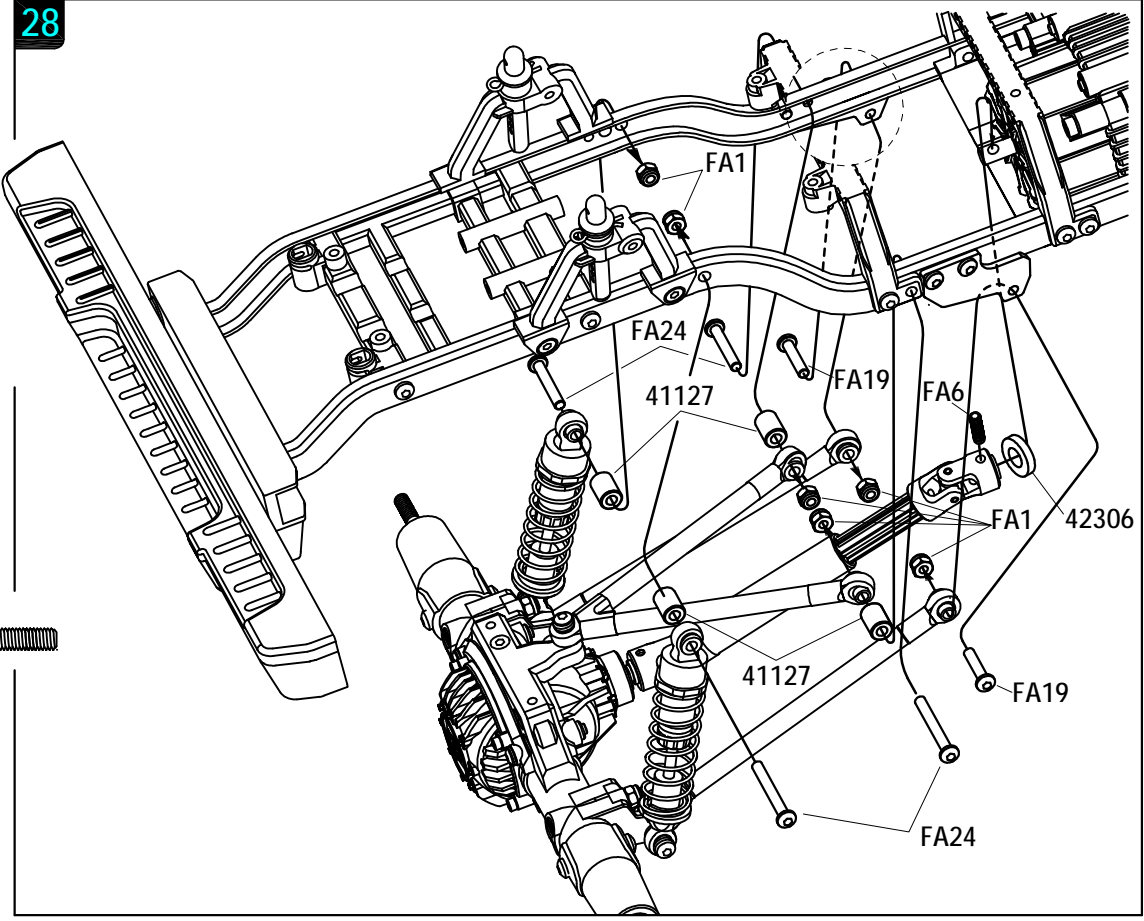


29

FA9



M2x6 X16

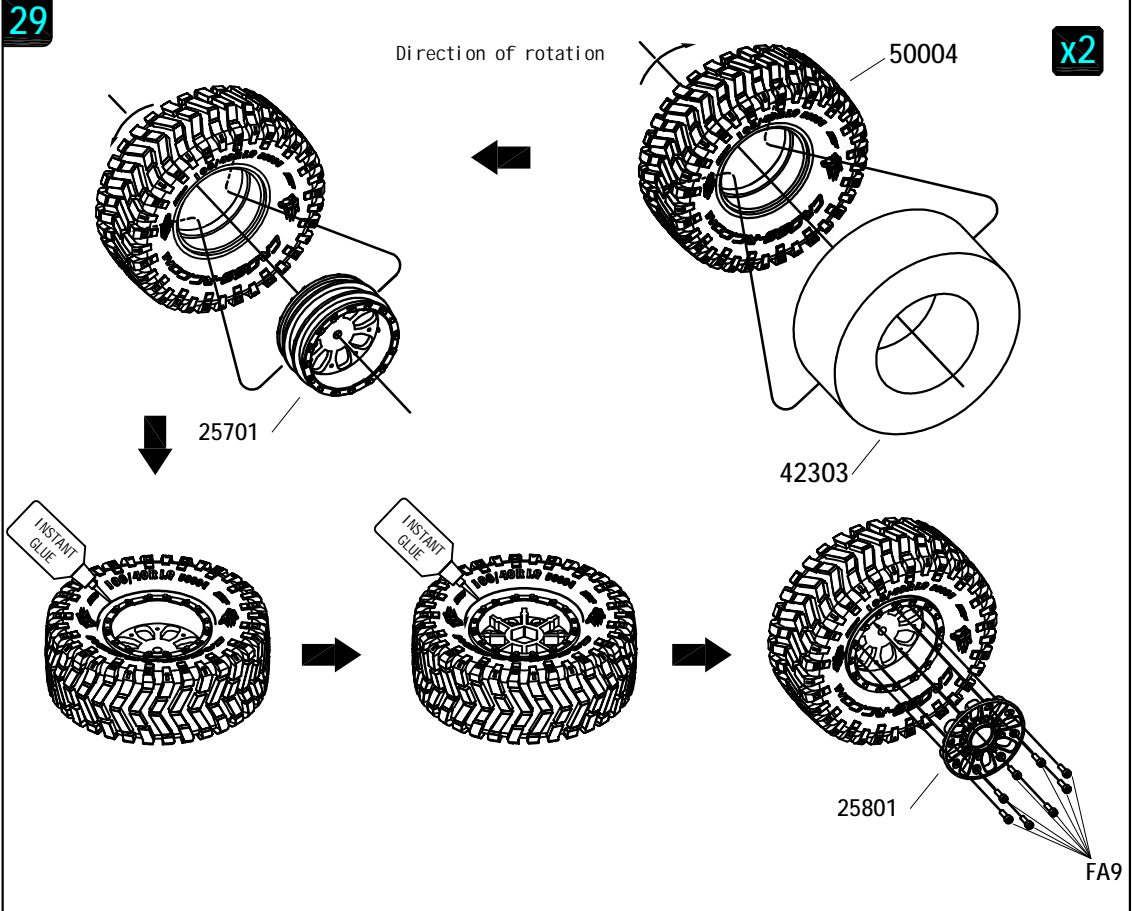


30

FA9




M2x6 X16

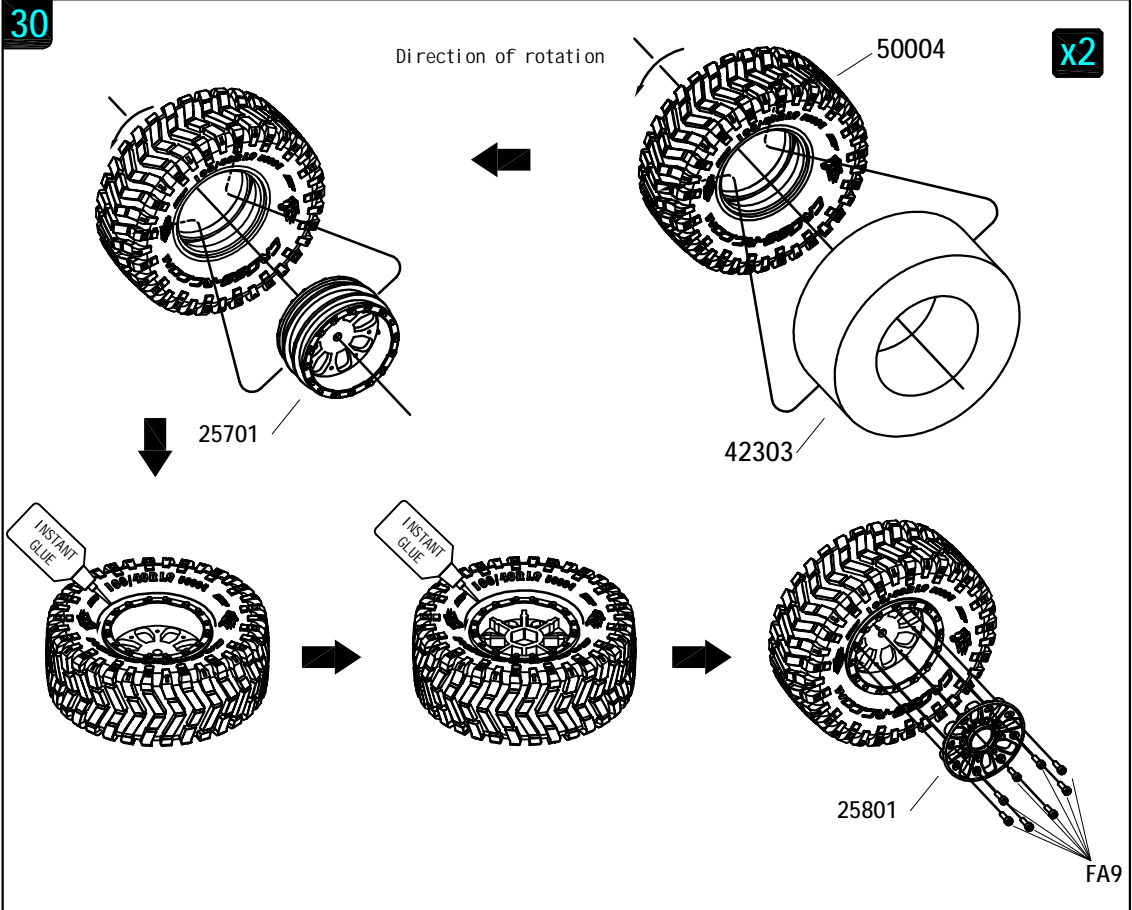






33

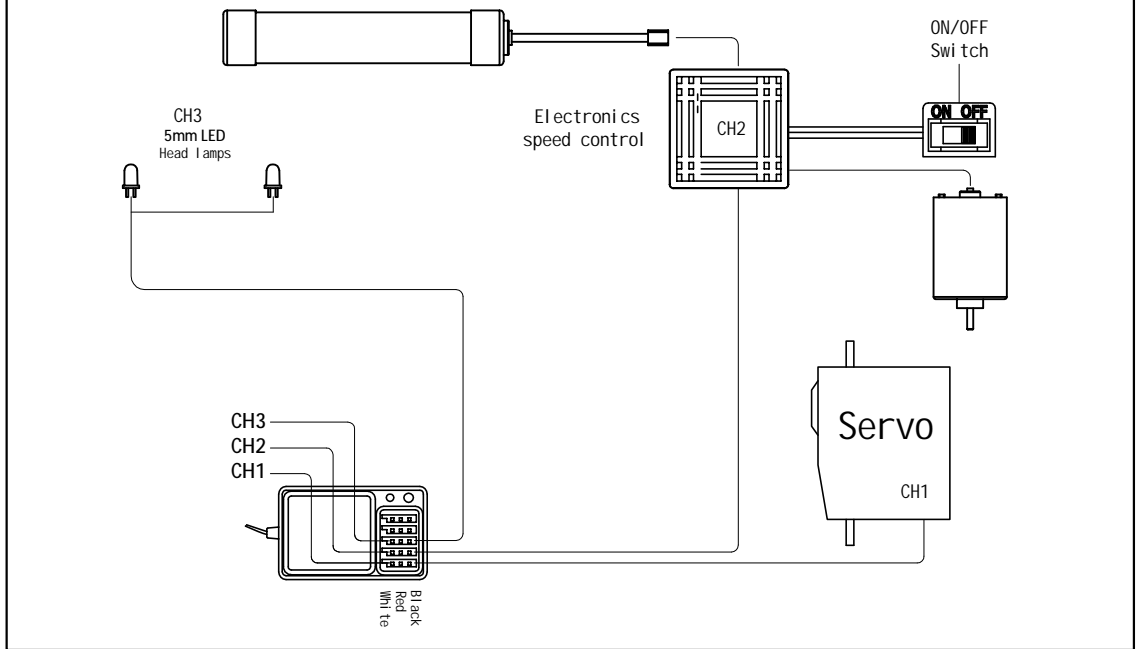


34

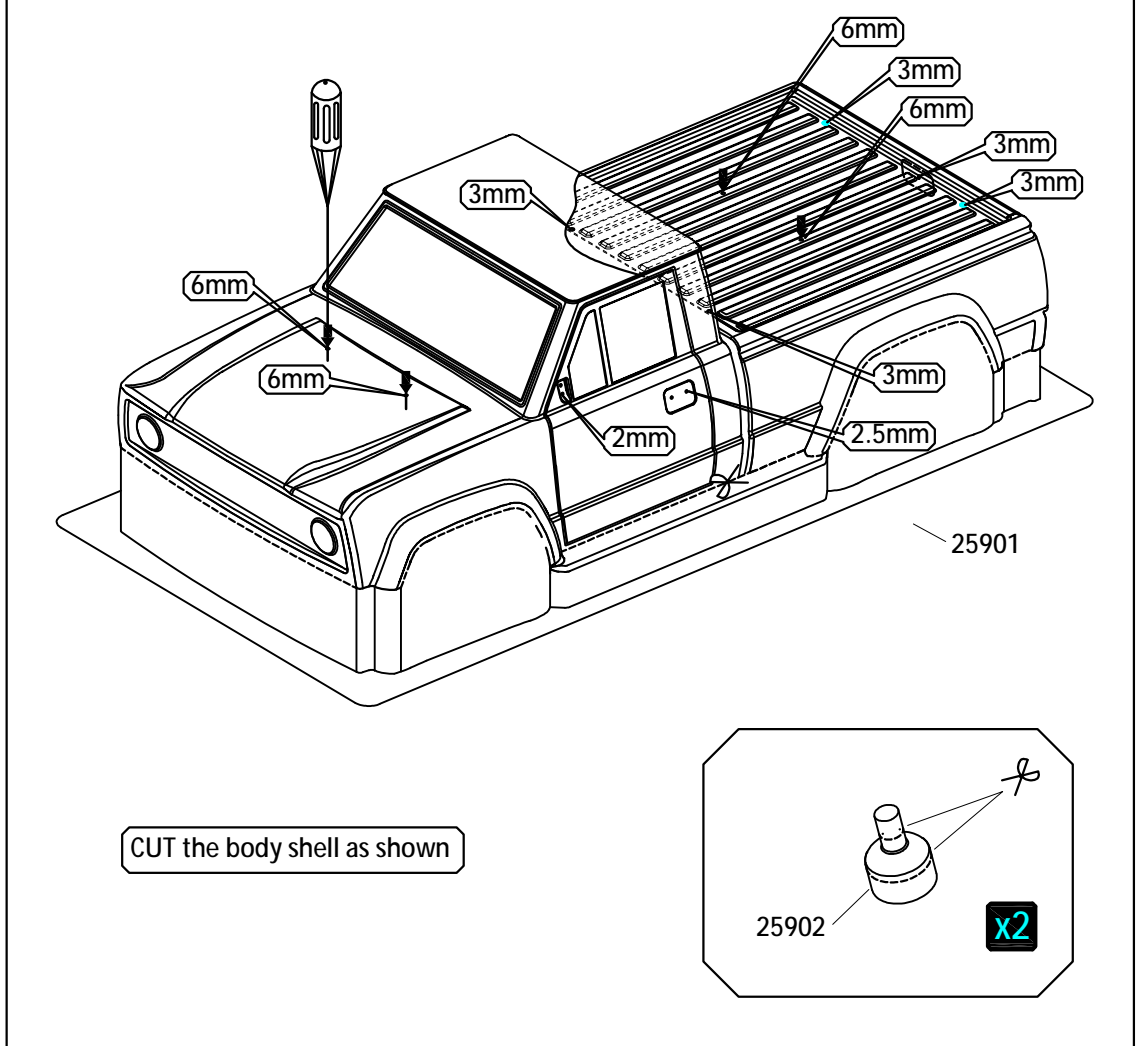


35

Step 1

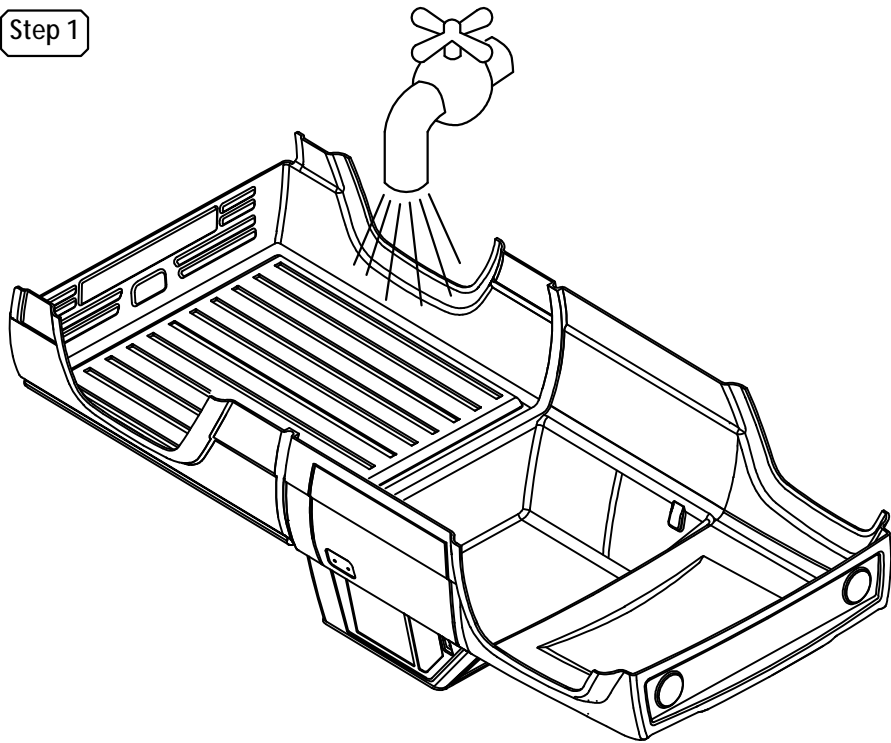

36

Step 2

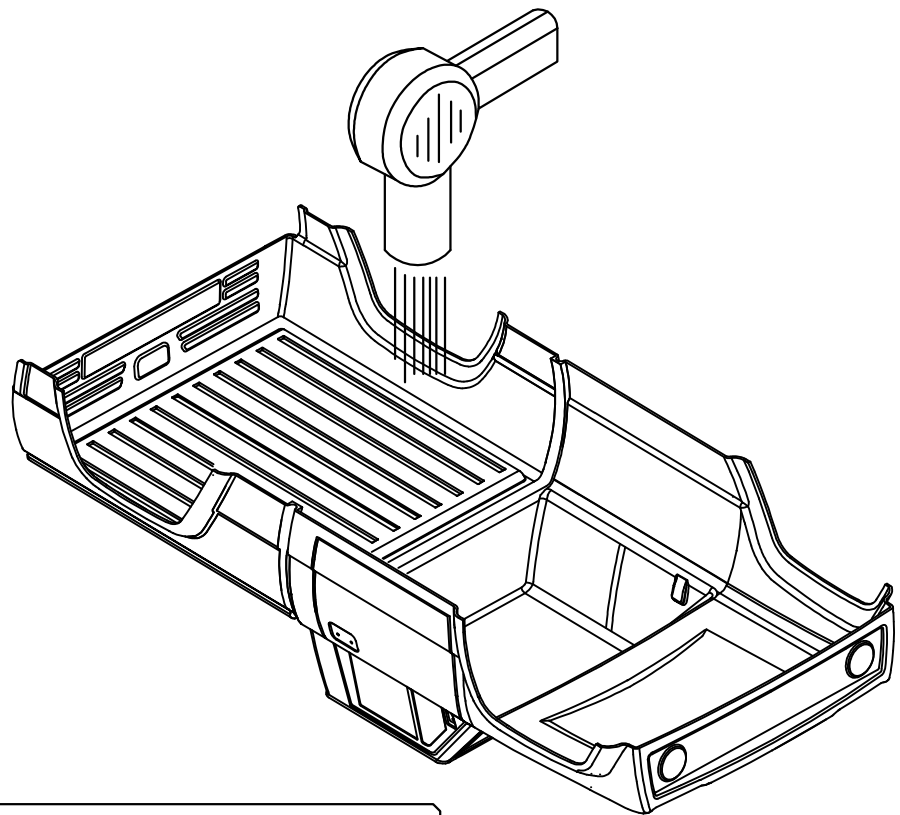


Wash the inside of the body shell with mild detergent, and then rinse and dry thoroughly.

37

Step 3


Mask the windows on the inside with masking tape.

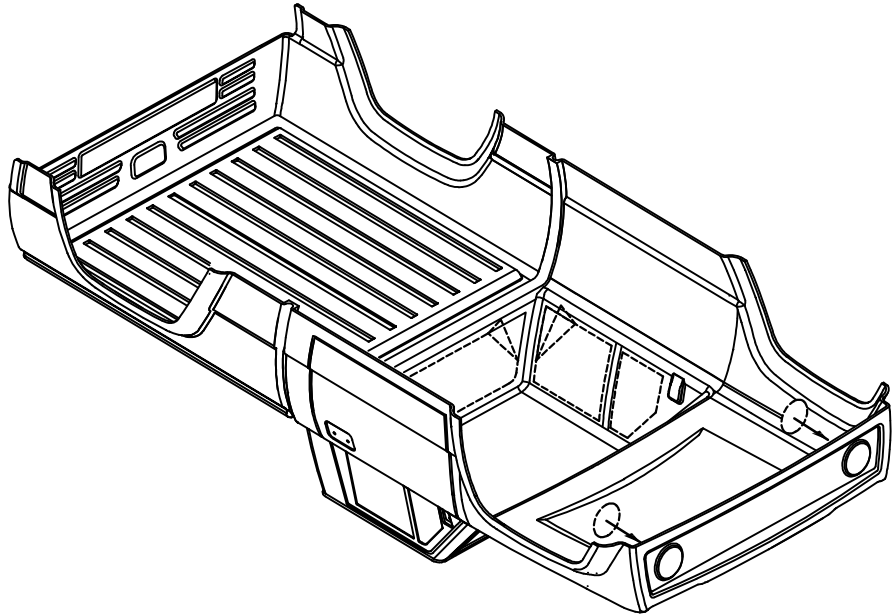

38


Step 4

Paint the body with polycarbonate spray paints.

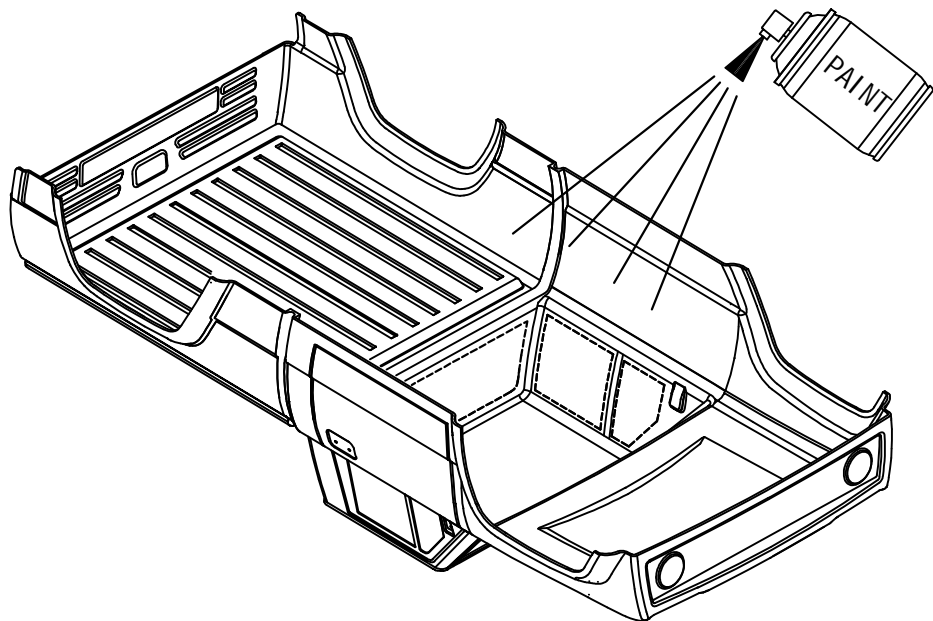


\* When the paint is dry,remove the masking.  
\* When you have finished painting,peel off the external protective films.

25902

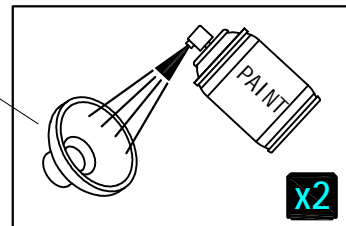


x2

39


FA15   
M3x6 X4

Step 5


42104

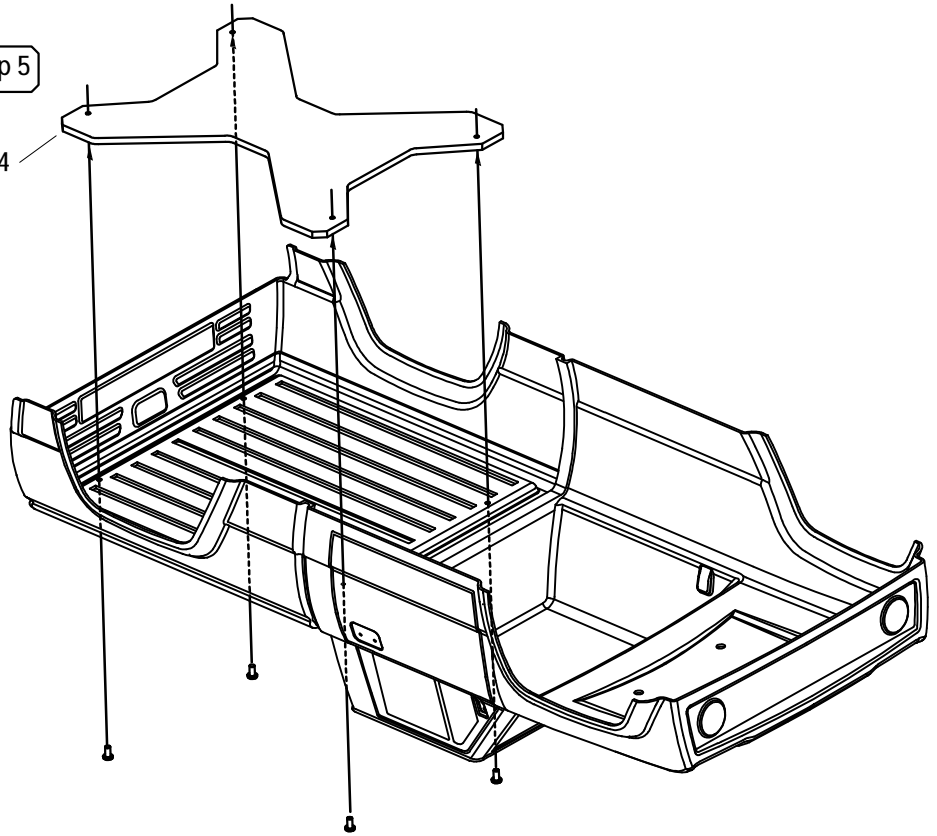


40


FA9   
M2x6 X2

14104

 |  
φ2.2xφ5x0.5 X2

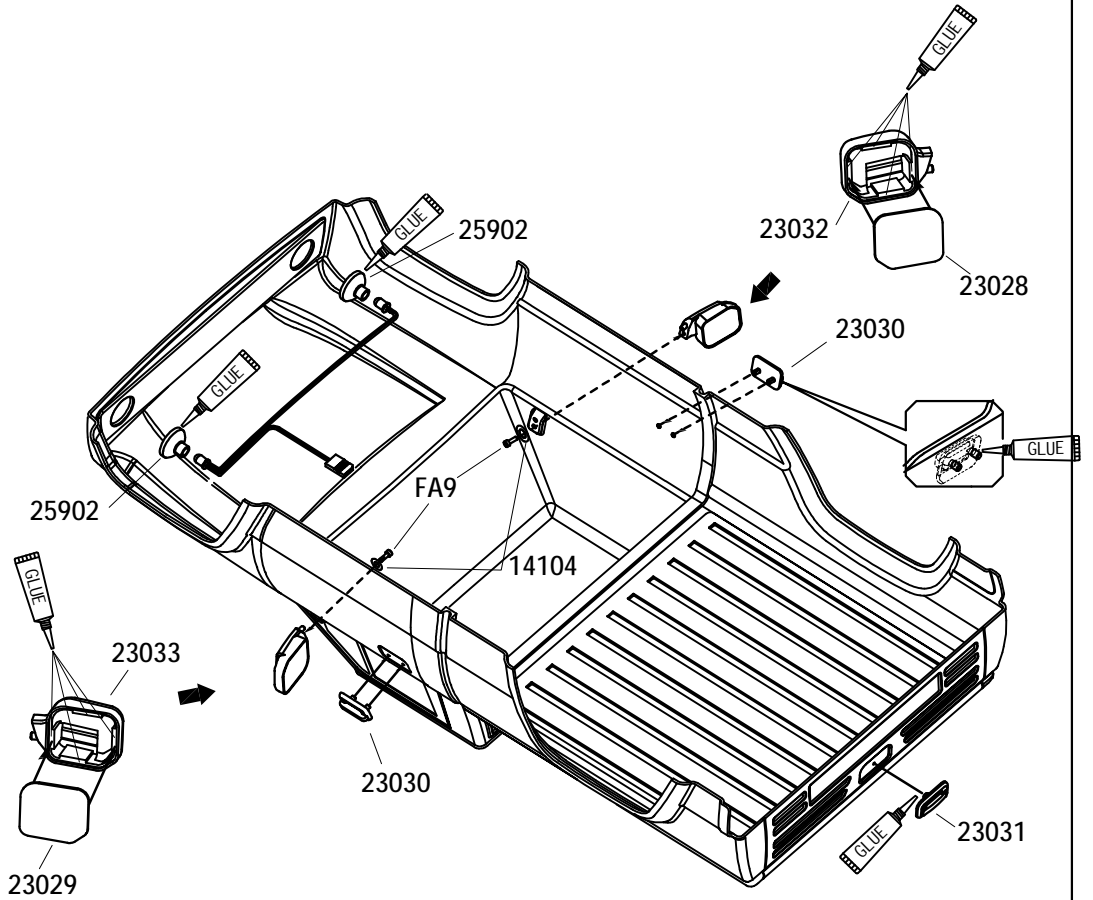


41

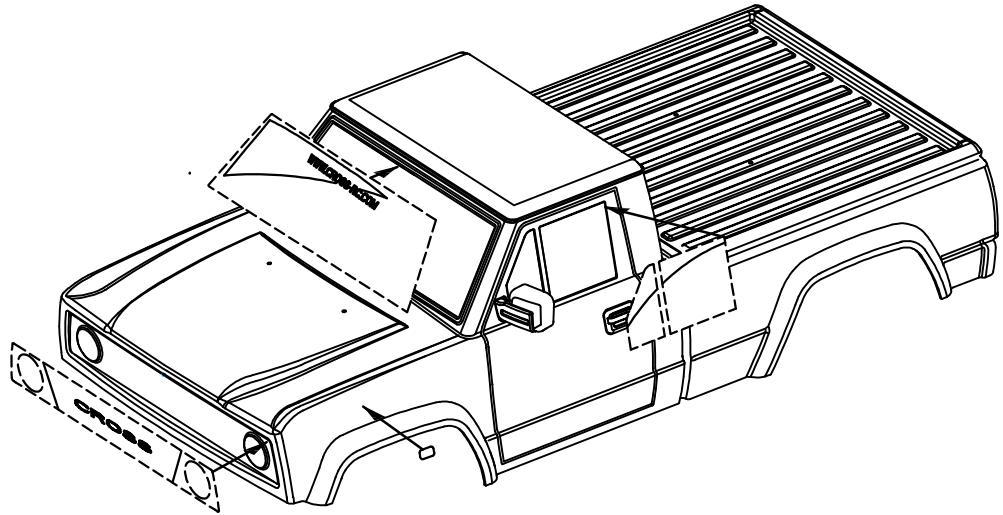


DECAL

42

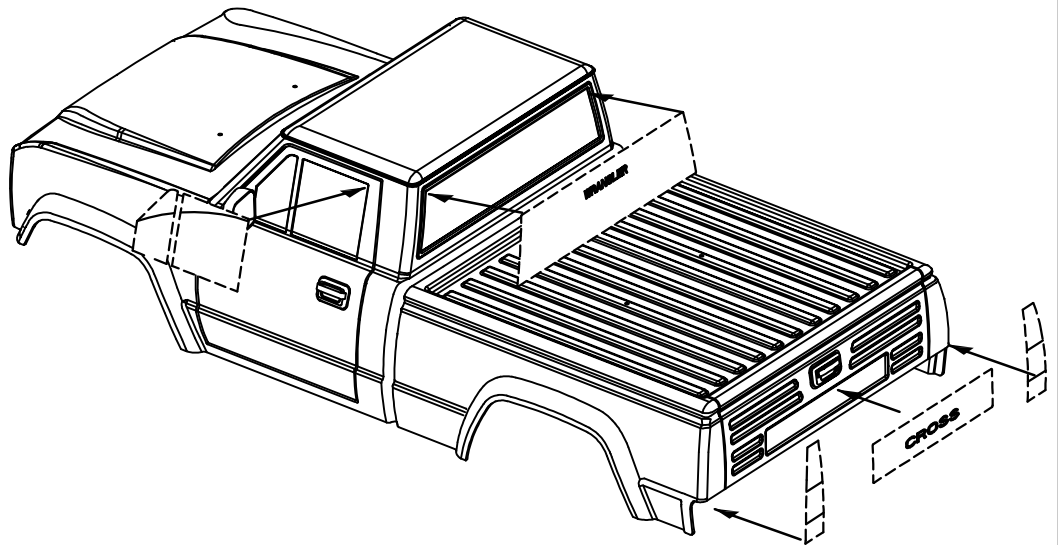

DECAL

  
94015 X4

